



Manuals.plus /

- › RENAISSER /
- › RENAISSER Pen Tips for Surface Pen & Raphael Series - User Manual

RENAISSER Raphael 520

RENAISSER Pen Tips User Manual

Model: Raphael 520 Series HB-Type Pen Tips

PRODUCT OVERVIEW

The RENAISSER HB-Type Pen Tips are designed to provide a precise and natural writing experience for compatible stylus pens. Manufactured with Japan Elastomer technology, these tips offer a soft touch and paper-feel, enhancing your digital writing and drawing. This package includes three replacement tips and a protective case for storage.

Compatibility: These pen tips are compatible with Microsoft Surface Pro 2017 Pen (Model 1776), Surface Pro 4 Pen, and RENAISSER Raphael 510/520/520C/520BT/530 series pens. They are not compatible with other models.

Identify Original Pen Tips



Made in Japan



Not made in Japan



This image illustrates the compatibility of the RENAISSER pen tips with the New Surface Pro 2017 Pen (without clip), Surface Pro 4 Pen (with single button on flat edge), and RENAISSER Raphael 520/520C/520M/520D/520BT pens.

SETUP AND INSTALLATION

Replacing your pen tip is a straightforward process that requires no special tools.

1. **Remove the old tip:** Gently pull the existing pen tip straight out from the stylus. Avoid twisting or bending, as this may damage the pen.
2. **Insert the new tip:** Take one of the RENAISSER HB-Type pen tips from the case. Carefully insert the new tip into the stylus opening. Push it in firmly until you feel it seat securely. Do not force the tip.
3. **Test the tip:** Once installed, test the new pen tip on your compatible device to ensure proper functionality and responsiveness.

C o m p a t i b i l i t y



New Surface Pro 2017 Pen

Surface Pen with no clip



Surface Pro 4 Pen

Surface Pen with single button on flat edge



RENAISSER Raphael 520/520C/520M/520D/520BT


The package includes three HB-type pen tips and a protective case for convenient storage and easy access during replacement.

OPERATING INSTRUCTIONS

The RENAISSER HB-Type pen tips are designed to replicate the feel of writing on paper. Once installed, your stylus will function as usual, providing pressure sensitivity and accuracy for various tasks.

- **Writing and Drawing:** Use the pen tip directly on your device's screen for note-taking, sketching, and detailed artwork. The Japan Elastomer technology ensures a smooth glide and responsive interaction.
- **Pressure Sensitivity:** The tips maintain the original pressure sensitivity of your compatible stylus, allowing for varied line thickness and shading based on your applied pressure.
- **Screen Protection:** The soft material of the HB-type tip is designed to be gentle on your screen, minimizing the risk of scratches while providing a tactile writing experience.

Like Writing On The Real Paper

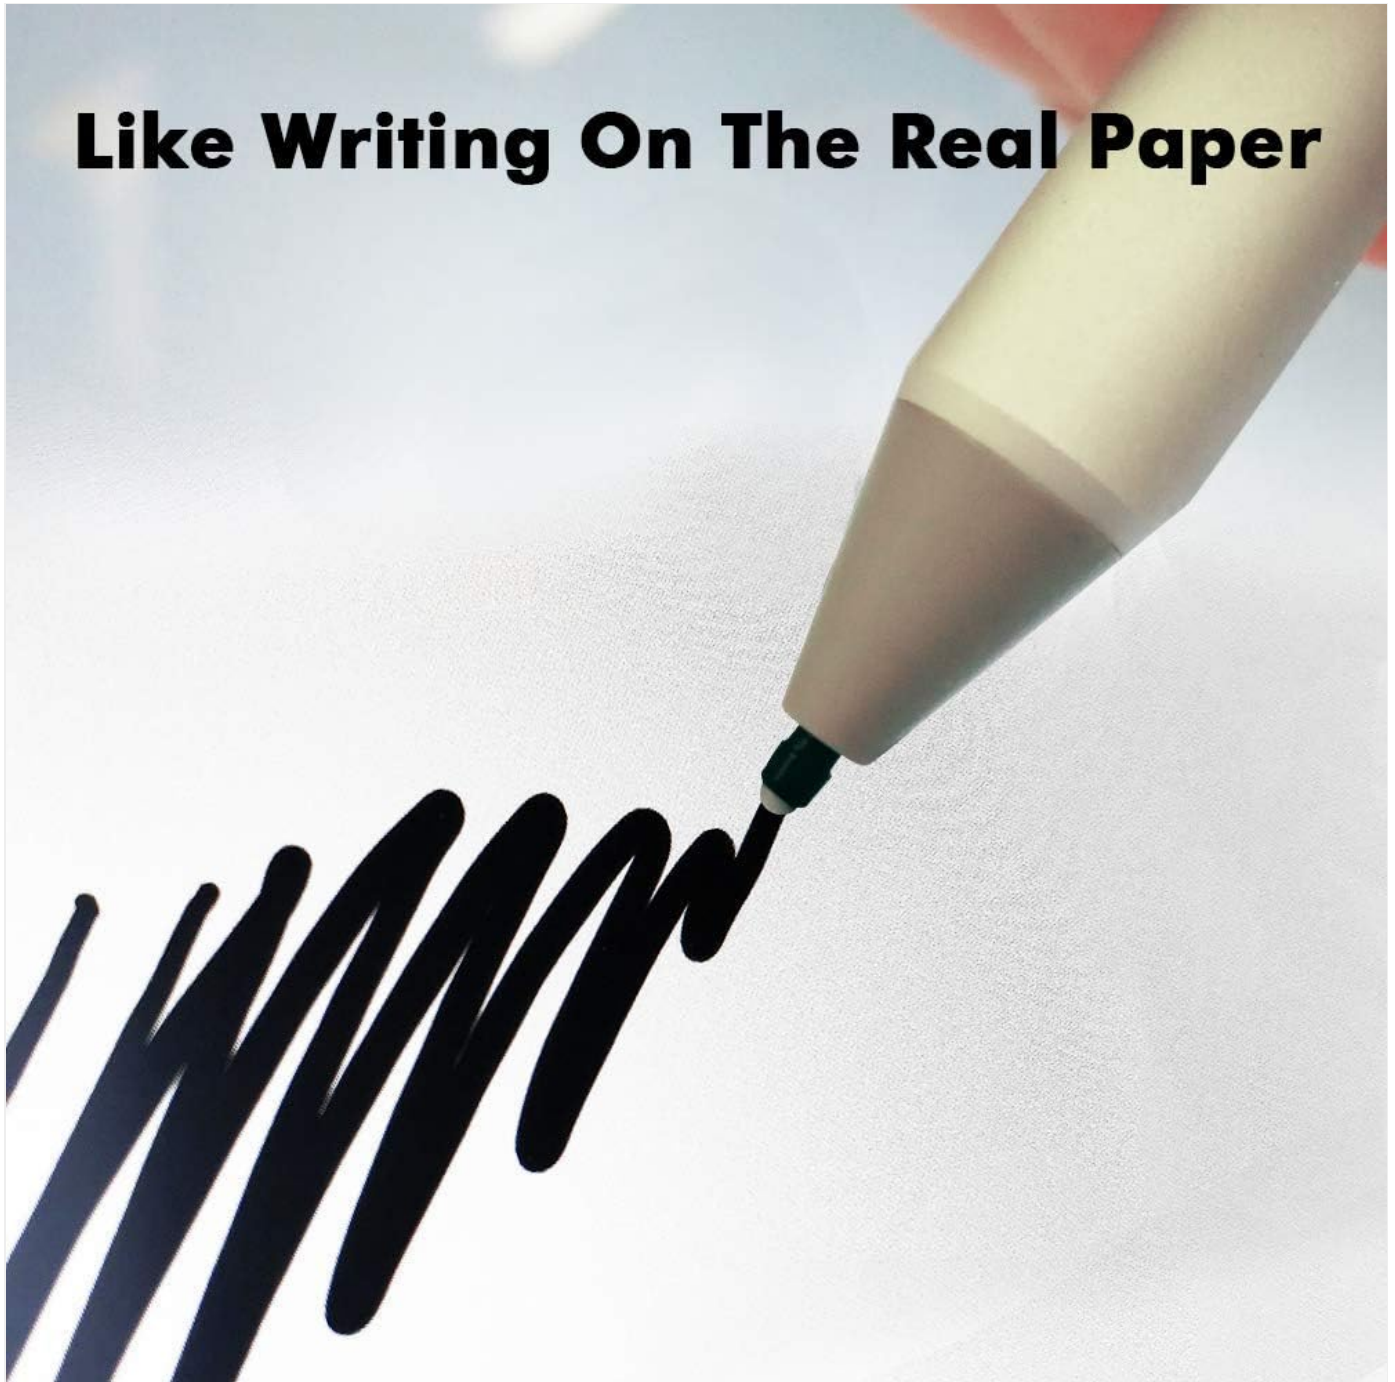

Experience a natural writing sensation, similar to pen on paper, with the RENAISSER HB-Type pen tips.

MAINTENANCE AND CARE

Proper care of your RENAISSER pen tips will ensure their longevity and consistent performance.

- **Cleaning:** If the tip accumulates dust or debris, gently wipe it with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals.
- **Storage:** When not in use, store spare tips in the provided protective case to prevent loss or damage. Keep the stylus and tips away from extreme temperatures and direct sunlight.
- **Replacement:** Replace the pen tip if you notice a decrease in responsiveness, visible wear, or damage. The lifespan of a tip can vary depending on usage frequency and pressure applied.

How To Recognize Real Surface Pen Tip

Soft touch, paper-feel writing experience

Hard and Dumpy



This image compares the texture and feel of RENAISSER tips to original Surface Pen tips and other alternatives, emphasizing the soft touch and paper-feel quality.

TROUBLESHOOTING

If you encounter issues with your RENAISSER pen tips, consider the following troubleshooting steps:

- **Pen not responding:**

- Ensure the pen tip is fully seated in the stylus.
- Check if your stylus battery needs replacement or recharging.
- Verify that your device's drivers are up to date.
- Test with a different RENAISSER pen tip to rule out a faulty tip.

- **Inconsistent lines or skipping:**

- Inspect the pen tip for any visible damage or wear. Replace if necessary.
- Clean the pen tip and the screen of your device.
- Ensure there are no foreign objects obstructing the tip's contact with the screen.

- **Tip feels too hard or too soft:**

- RENAISSER HB-Type tips are designed for a balanced feel. If you prefer a different writing sensation, ensure you have the

correct tip type for your preference.

SPECIFICATIONS

Brand	RENAISSER
Model Number	Raphael 520 (Compatible with 510/520/520C/520BT/530)
Tip Type	HB-Type
Material	Japan Elastomer Technology
Package Contents	3 x HB-Type Pen Tips, 1 x Storage Case
Compatible Devices	Microsoft Surface Pro 2017 Pen (Model 1776), Surface Pro 4 Pen, RENAISSER Raphael 510/520/520C/520BT/530
Product Dimensions	0.65 x 0.07 x 0.07 inches
Item Weight	0.705 ounces (approx. 20 grams)
UPC	745499507585

WARRANTY AND SUPPORT

For warranty information or technical support regarding your RENAISSER pen tips, please refer to the official RENAISSER website or contact their customer service directly.

Online Support: Visit the RENAISSER Store on Amazon for product information and support resources.

Manufacturer: RENAISSER

