

[Manuals.plus](#) /

> [WHOLESUN](#) /

> WHOLESUN 3000PSI Electric Pressure Washer 2.4GPM 1600W Power Washer with Hose Reel and Brush Green User Manual

## WHOLESUN WHOLESUN Pressure Washer

# WHOLESUN 3000PSI Electric Pressure Washer User Manual

Model: WHOLESUN Pressure Washer

## 1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating this pressure washer. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

### General Safety

- Always wear appropriate personal protective equipment, including safety glasses, hearing protection, and protective footwear.
- Keep the operating area clear of all persons, especially children and pets.
- Do not operate the pressure washer when fatigued or under the influence of drugs or alcohol.

### Electrical Safety

- Ensure the power supply matches the voltage specified on the pressure washer's rating label.
- Always connect the pressure washer to a grounded outlet protected by a Ground Fault Circuit Interrupter (GFCI).
- Do not use extension cords unless absolutely necessary. If an extension cord is used, ensure it is rated for outdoor use and is of adequate gauge.
- Never touch the plug or outlet with wet hands.

### Water Safety

- Connect the pressure washer only to a cold water supply.
- Ensure the water inlet filter is clean and properly installed before each use.
- Do not run the pump dry. Always ensure a continuous water supply to prevent damage.

### Operating Safety

- Never point the spray gun at people, animals, or electrical devices.
- Hold the spray gun firmly with both hands to control the recoil force.
- Do not modify the pressure washer or its accessories. Use only manufacturer-approved parts.
- Always turn off the pressure washer and release residual pressure before disconnecting hoses or changing accessories.

## 2. PRODUCT OVERVIEW AND COMPONENTS

---


The WHOLESUN Electric Pressure Washer is designed for various cleaning tasks around your home. It features a powerful motor, multiple spray tips, and a convenient hose reel for easy storage.



Figure 2.1: WHOLESUN Electric Pressure Washer

## Package Contents

 Verify that all items are present in your package:

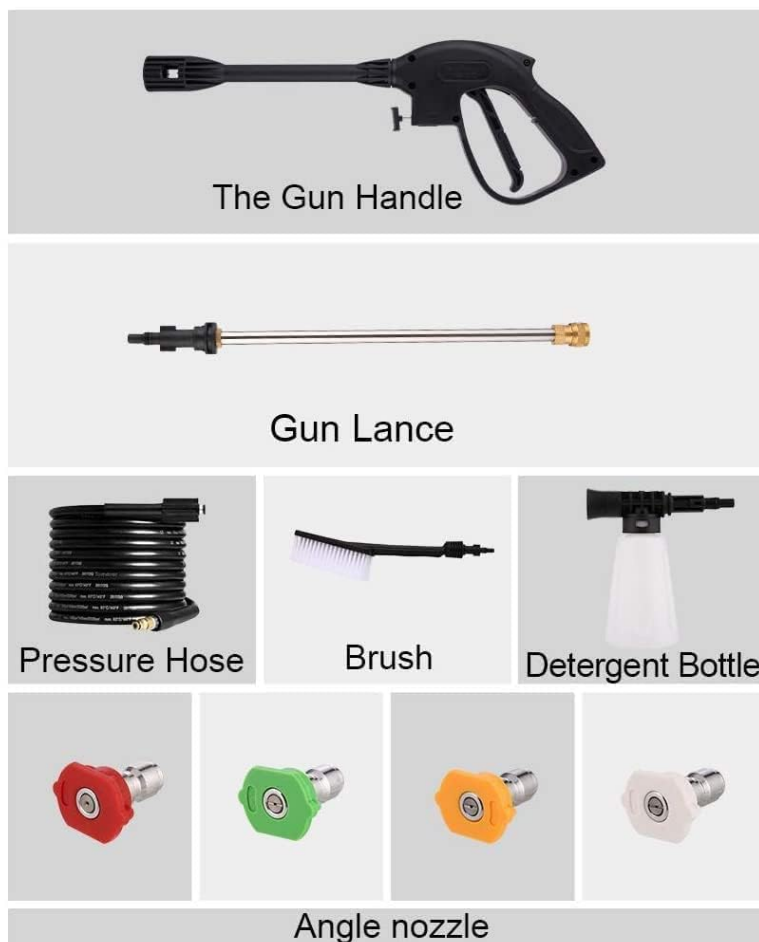

|                               |                |                   |         |                |          |
|-------------------------------|----------------|-------------------|---------|----------------|----------|
| Voltage                       | 110V-120V/60Hz | Wattage           | 1600 W  | Rated pressure | 1950 PSI |
| Max.Pressure                  | 1950 PSI       | Rated flow rate   | 1.58GPM | Max.flow rate  | 1.58GPM  |
| Degree of protection          | IPX5           | Rated temperature | 0~40°C  | Machine weight | 7.3kg    |
| Max.inlet water pressure 1Mpa |                |                   |         |                |          |

Figure 2.2: Pressure Washer Components

- Pressure Washer Unit with Hose Reel
- Spray Gun Handle
- Spray Gun Lance
- High-Pressure Hose (20 ft)
- Quick-Connect Spray Tips (0°, 15°, 25°, 40°)
- Detergent Bottle
- Brush Attachment
- Water Inlet Filter

### 3. SPECIFICATIONS

| Specification        | Value                            |
|----------------------|----------------------------------|
| Brand                | WHOLESUN                         |
| Power Source         | Corded Electric                  |
| Color                | Green                            |
| Maximum Pressure     | 1950 PSI (Pound per Square Inch) |
| Maximum Flow Rate    | 1.58 GPM (Gallons Per Minute)    |
| Motor Wattage        | 1600W                            |
| Item Weight          | 16.06 pounds (7.3 Kilograms)     |
| Hose Length          | 20 Feet                          |
| Product Dimensions   | 11.42"L x 9.84"W x 26"H          |
| Safety Certification | EPA, ETL                         |
| Model Number         | WHOLESUN Pressure Washer         |

### 4. ASSEMBLY AND SETUP

Follow these steps to assemble your WHOLESUN Electric Pressure Washer before first use.

# INSTALLATION STEPS



Figure 4.1: Installation Steps

1. **Attach the High-Pressure Hose:** Connect the high-pressure hose to the outlet on the pressure washer unit and to the spray gun handle. Ensure connections are secure.
2. **Connect the Spray Gun Lance:** Attach the spray gun lance to the spray gun handle.
3. **Install the Water Inlet Adapter:** Screw the water inlet adapter onto the water inlet connection on the pressure washer.
4. **Connect Garden Hose:** Connect your garden hose to the water inlet adapter. Ensure the garden hose is free of kinks and has a steady water supply.
5. **Select and Attach Nozzle:** Choose the desired quick-connect spray tip and insert it into the end of the spray gun lance until it clicks into place.
6. **Plug In:** Plug the 32.8ft electric cord with its inline GFCI into a grounded electrical outlet. Test the GFCI before each use by pressing the 'TEST' button, then 'RESET'.

## 5. OPERATING INSTRUCTIONS

---

Once assembled and connected, your pressure washer is ready for operation.

### Starting the Pressure Washer

1. Ensure the water supply is turned on fully.
2. Squeeze the trigger on the spray gun to purge air from the system until a steady stream of water emerges.
3. Turn the power switch on the pressure washer to the 'ON' position. The motor will start.
4. The Total Stop System (TSS) will automatically shut off the pump when the trigger is not engaged, saving energy and prolonging pump life.

### Using Quick-Connect Spray Tips

The pressure washer comes with 4 quick-connect nozzles and a brush for various cleaning tasks. Always turn off the pressure washer and release pressure before changing nozzles.

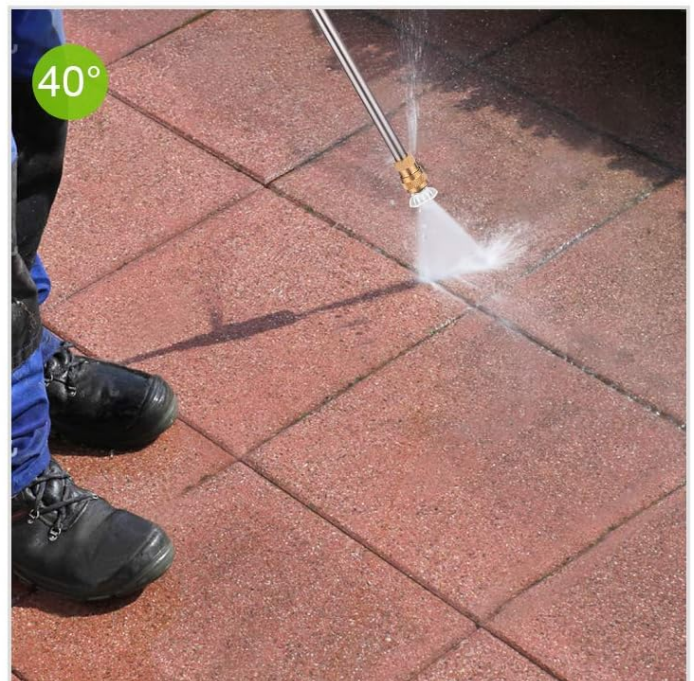
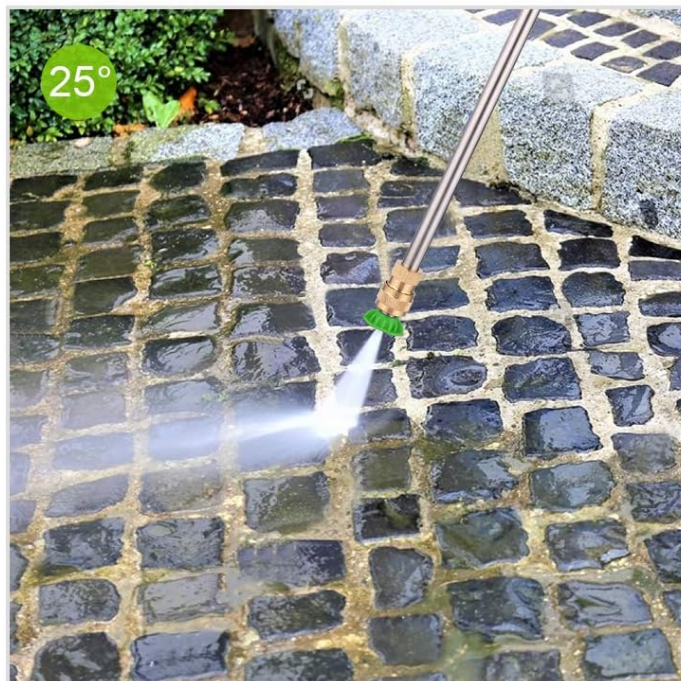 
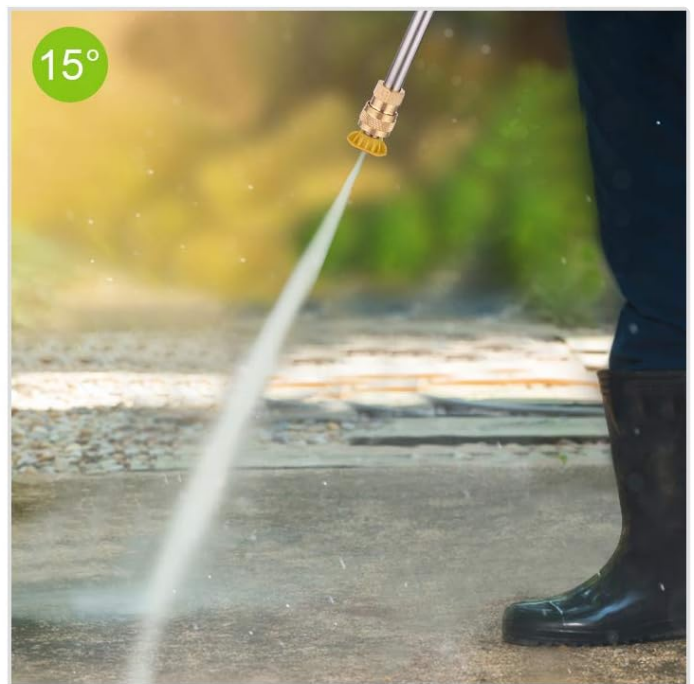 
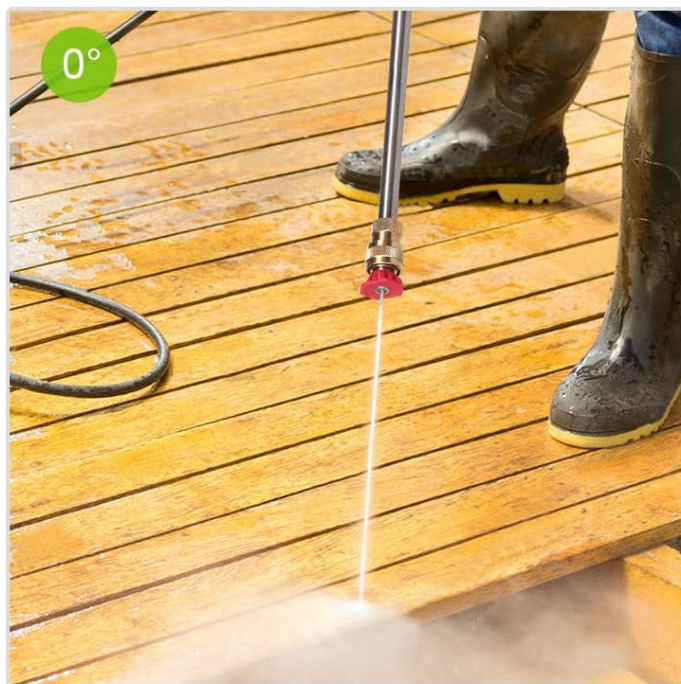 


Figure 5.1: Nozzle Spray Patterns

- **0° Red Nozzle:** Provides a concentrated, high-impact stream for spot cleaning tough stains on concrete or metal. Use with extreme caution.

 

Figure 5.2: 0° Red Nozzle

- **15° Yellow Nozzle:** Creates a narrow, powerful fan spray for intense cleaning of hard surfaces like concrete, brick, and decking.



Figure 5.3: 15° Yellow Nozzle

- **25° Green Nozzle:** Delivers a medium fan spray suitable for general cleaning of painted surfaces, lawn equipment, and fences.

Figure 5.4: 25° Green Nozzle

- **40° White Nozzle:** Produces a wide, gentle fan spray ideal for delicate surfaces such as windows, vehicles, and boats.

## 4 QUICK CONNECT NOZZLES & SOAP

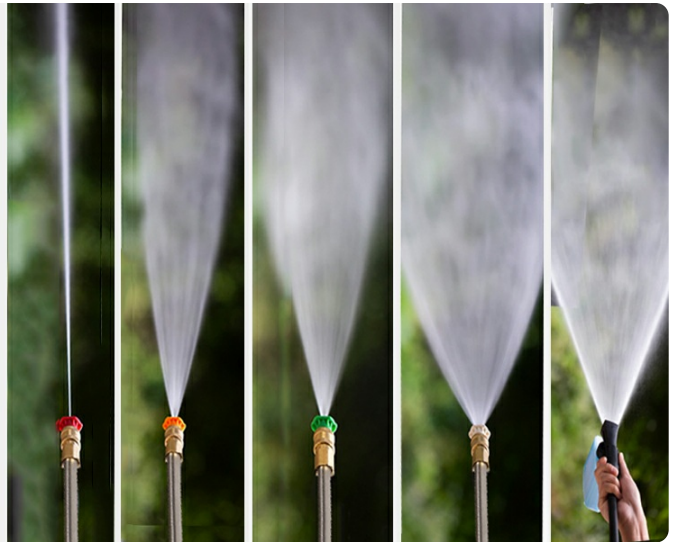 


Figure 5.5: 40° White Nozzle

### Using the Detergent Bottle

The detergent bottle allows for easy application of cleaning solutions.

## 20-FOOT HOSE FOR GREATER REACH



Figure 5.6: Detergent Bottle

1. Fill the detergent bottle with an appropriate pressure washer-safe cleaning solution.
2. Attach the detergent bottle to the spray gun.
3. The pressure washer will automatically mix the detergent with the water at a low pressure setting.
4. Apply detergent to the surface to be cleaned, allowing it to soak as recommended by the detergent manufacturer.
5. Remove the detergent bottle and switch to a high-pressure nozzle to rinse the surface.

## 6. MAINTENANCE AND STORAGE

Proper maintenance and storage will extend the life of your pressure washer.

### After Each Use

- Turn off the pressure washer and disconnect the power supply.
- Turn off the water supply and squeeze the spray gun trigger to release any remaining pressure.
- Disconnect all hoses and attachments.
- Drain any remaining water from the pump, hoses, and accessories.
- Clean the water inlet filter.
- Wipe down the unit with a damp cloth.

## Storage



Figure 6.1: Hose Reel and Portability

- Use the integrated hose reel to neatly store the high-pressure hose.
- Store the pressure washer in a dry, frost-free area. Freezing temperatures can damage the pump.
- Keep all accessories organized and stored with the unit.

## 7. TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the table below for common problems and solutions. For more detailed troubleshooting, please consult the official Troubleshooting Guide PDF available for download.

| Problem              | Possible Cause                                         | Solution                                                             |
|----------------------|--------------------------------------------------------|----------------------------------------------------------------------|
| Motor does not start | No power supply; GFCI tripped; Power switch off        | Check power connection; Reset GFCI; Turn power switch on             |
| Low pressure         | Insufficient water supply; Clogged nozzle; Air in pump | Ensure full water flow; Clean nozzle; Purge air by squeezing trigger |
| Water leaks          | Loose connections; Damaged O-rings                     | Tighten connections; Replace O-rings                                 |
| Pump pulsates        | Air in pump; Clogged inlet filter; Kinked hose         | Purge air; Clean filter; Straighten hose                             |

For a comprehensive troubleshooting guide, please refer to the official PDF document:[Troubleshooting Guide \(PDF\)](#)

## 8. WARRANTY AND SUPPORT

WHOLESUN products are manufactured to high-quality standards. For warranty information, technical support, or replacement parts, please contact WHOLESUN customer service. Keep your purchase receipt as proof of purchase. You can also find additional information and resources, including the full user manual, at the following link[User Manual \(PDF\)](#)

© 2025 WHOLESUN. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B08CXBJ91K>

More documents and user manuals: <https://manuals.plus/>