

Juegoal 16 Inch

Juegoal 16-Inch Pre-Lit Christmas Wreath Instruction Manual

Model: 16 Inch | Brand: Juegoal

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Juegoal 16-inch Pre-Lit Christmas Wreath. Designed for both indoor and outdoor use, this wreath features 40 warm white LED lights, a festive red bow, and assorted red and gold decorative balls. It is battery-operated for flexible placement and includes a built-in timer function for convenience.

PRODUCT FEATURES

- **Size:** 16-inch diameter.
- **Lighting:** Pre-lit with 40 warm white LED lights.
- **Power Source:** Battery operated (requires 2 AA batteries, not included).
- **Timer Function:** Built-in 6 hours on / 18 hours off automatic timer.
- **Decorations:** Artificial spruce branches, large red bow, red and gold decorative balls.
- **Hanger:** Includes a 15-inch metal door hanger for easy installation.
- **Material:** Durable plastic construction.

PACKAGE CONTENTS

- 1 x Juegoal 16-inch Pre-Lit Christmas Wreath
- 1 x 15-inch Metal Door Hanger
- 2 x Brown Zip Ties (for securing the wreath's frame)

SETUP INSTRUCTIONS

1. **Unfolding the Wreath:** The wreath is designed to be folded for compact storage. Carefully unfold the wreath to its full circular shape. Ensure all branches are extended outwards.

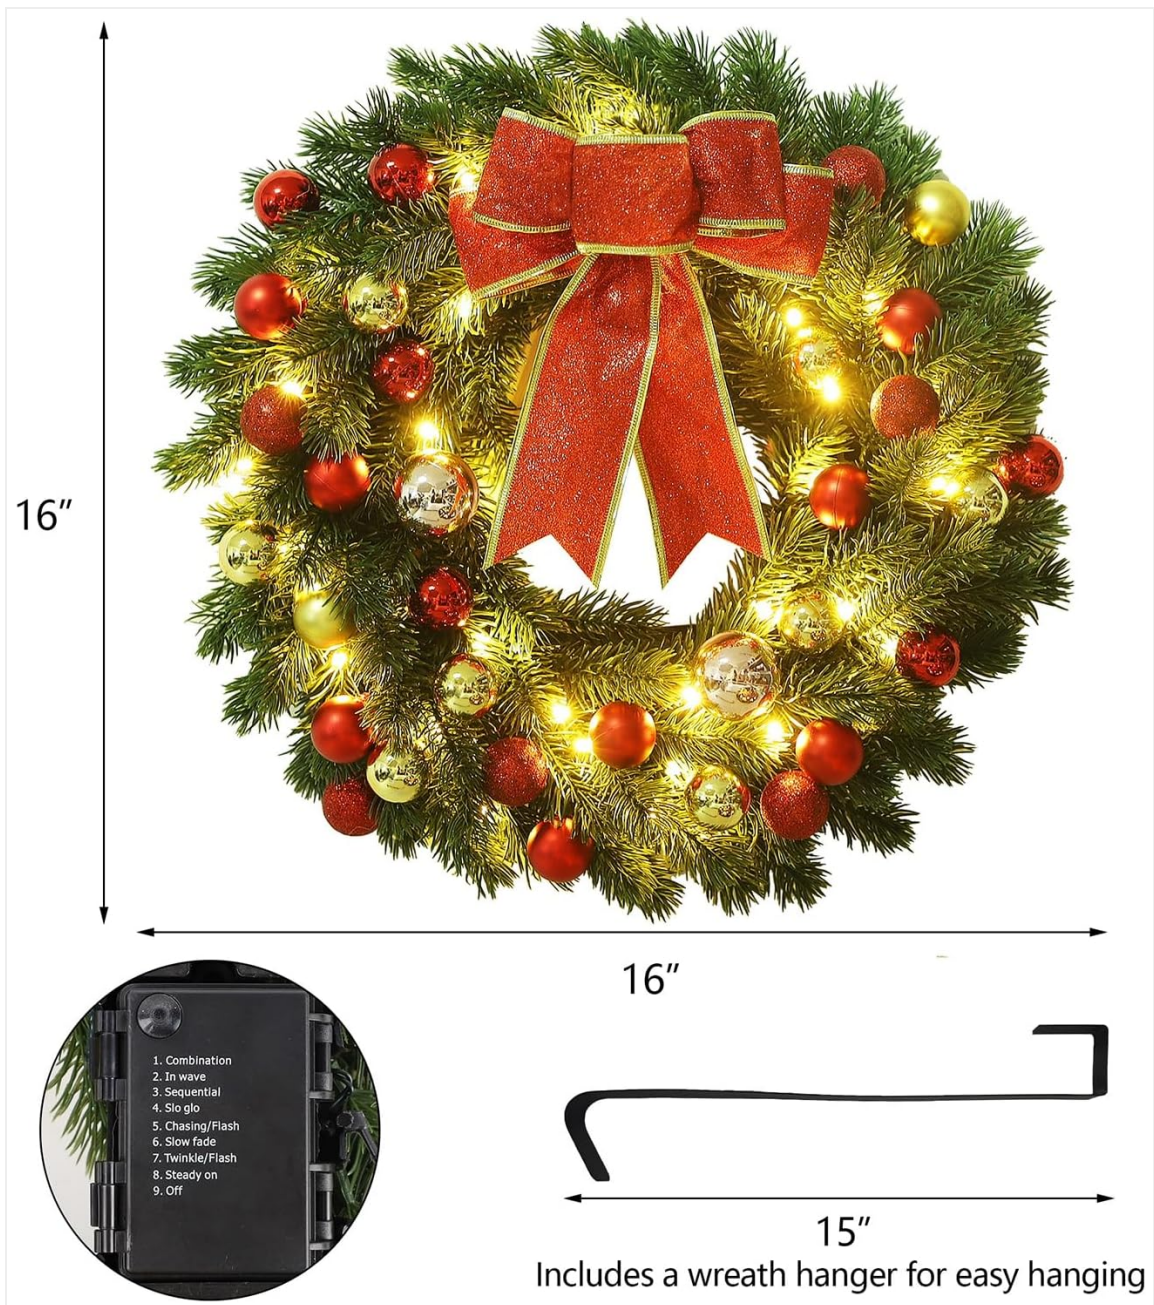


Image: The wreath in its unfolded state, showing its full circular form.

2. **Securing the Frame:** Use the provided brown zip ties to secure the metal frame where the two halves meet. This will help maintain the wreath's circular shape.



Image: A close-up view of the wreath's metal frame, illustrating where to apply the zip ties for stability.

- Battery Installation:** Locate the battery compartment on the back of the wreath. Open the compartment and insert 2 AA batteries (not included), ensuring correct polarity. Close the compartment securely.

Automatic timing function



Built-in timing function without setting, just turn on the lights (no matter whatever lighting mode), the light will keep 6 hours On and 18 hours Off automatically every 24hrs.



8 Lighting Modes

1. Combination
2. In wave
3. Sequential
4. Slo glo
5. Chasing/Flash
6. Slow fade
7. Twinkle/Flash
8. Steady on
9. Off

**3 AA Batteries Operated
(Not include batteries)**

Image: The battery box located on the back of the wreath, showing the switch and battery slots.

4. **Fluffing the Bow:** The red bow may be flattened during shipping. Gently shape the bow and its ribbons to achieve the desired full and festive appearance. The bow has wired edges for easy shaping.



Image: A detailed view of the red bow and decorative balls on the wreath.

5. **Hanging the Wreath:** Use the provided metal door hanger to hang the wreath on your desired door or wall. Alternatively, the wreath can be secured using other appropriate hanging methods.



Image: The complete wreath with its included metal hanger, ready for display.

OPERATING INSTRUCTIONS

The wreath features a battery box with a switch to control the LED lights. The switch has three positions: TIMER, ON, and OFF.

- **TIMER Mode:** Slide the switch to "TIMER". The lights will automatically turn on for 6 hours and then turn off for 18 hours, repeating this cycle every 24 hours. This mode is ideal for automated daily illumination.
- **ON Mode:** Slide the switch to "ON". The lights will remain continuously lit until manually switched off or the batteries deplete.
- **OFF Mode:** Slide the switch to "OFF" to turn off the lights and conserve battery life.



Image: A diagram illustrating the automatic timing function and the 8 available lighting modes.

Lighting Modes

The wreath offers 8 different lighting modes. To cycle through these modes, press the button located on the battery box while the lights are in ON or TIMER mode.

1. Combination
2. In wave
3. Sequential
4. Slo glo
5. Chasing/Flash
6. Slow fade
7. Twinkle/Flash
8. Steady on

MAINTENANCE

- **Cleaning:** Gently wipe the wreath with a soft, dry cloth to remove dust. Avoid using harsh chemicals or abrasive cleaners.

- **Ornament Care:** The decorative balls are securely attached. In the event an ornament detaches, it can typically be reattached using a strong adhesive suitable for plastic.
- **Bow Reshaping:** The wired bow can be reshaped as needed to maintain its appearance.

TROUBLESHOOTING

Problem	Solution
Lights are not turning on.	<ul style="list-style-type: none"> ◦ Ensure batteries are correctly installed with proper polarity. ◦ Replace old batteries with new 2 AA batteries. ◦ Check if the switch is set to "ON" or "TIMER" mode.
Lights are not staying on for the desired duration.	<ul style="list-style-type: none"> ◦ Verify the switch is in "TIMER" mode. The timer operates on a 6-hour on, 18-hour off cycle. ◦ Ensure batteries have sufficient power.
Ornaments have fallen off.	Reattach ornaments using a strong adhesive suitable for plastic.

STORAGE

At the end of the season, remove the batteries from the compartment to prevent corrosion. The wreath can be folded back into its compact form for easy storage. Store in a cool, dry place away from direct sunlight.

SPECIFICATIONS

Feature	Detail
Brand	Juegoal
Model	16 Inch Pre-Lit Christmas Wreath
Product Dimensions	16"D x 16"W x 4"H
Item Weight	1.96 pounds
Material	Plastic
Color	Green (with red/gold decorations)
Mounting Type	Door Mount (hanger included)
Special Feature	Pre-lit, Battery Operated, Timer Function

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An overview of the Juegoal 16-inch Pre-Lit Christmas Wreath, demonstrating its features and included metal hanger. Provided by YoFit LLC (Seller).

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Juegoal customer service directly. Contact details can typically be found on the product packaging or the official Juegoal website.