

Voupuoda WS-858

Voupuoda WS-858 Portable Wireless Karaoke Microphone User Manual

Model: **WS-858** | Brand: **Voupuoda**

1. PRODUCT OVERVIEW

The Voupuoda WS-858 is a versatile 3-in-1 device combining a portable wireless karaoke microphone, a HIFI Bluetooth speaker, and a selfie function. It is designed for various uses including KTV singing, gatherings, family entertainment, travel, car stereo integration, instrument recording, interviews, and live streaming.

This device features a high-quality chipset for a significant KTV echo effect, delivering impressive live sound and clear music rhythm with echo reverberation. Its advanced aluminum and magnesium alloy shell technology, professional adjustment system, three-layer high-density noise reduction, intelligent mixing chip, and professional audio processor ensure a beautiful voice output.

The WS-858 offers simple and convenient operation with multifunctional buttons to adjust treble, bass, reverberation, accompaniment, and playback volume, allowing users to easily navigate between songs.





Figure 1.1: Overview of the Voupuoda WS-858 Portable Wireless Karaoke Microphone.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and in good condition:

- 1 x Voupuoda WS-858 Microphone
- 1 x Charging Cable (Micro USB)

- 1 x Audio Cable (3.5mm AUX)
- 1 x User Manual (this document)

3. SETUP GUIDE

3.1 Charging the Microphone

Before first use, fully charge the microphone. The built-in Li-18650 battery has a capacity of 1800mAh.

1. Connect the provided charging cable to the Micro USB port on the microphone.
2. Connect the other end of the charging cable to a DC 5V power source (e.g., USB wall adapter, computer USB port).
3. The charging indicator light will illuminate (refer to the device for specific light behavior, typically red during charging and off/blue when fully charged).
4. Charging typically takes 2-3 hours for a full charge.



Figure 3.1: Close-up view of the microphone's charging (USB) and audio (AUX) ports.

3.2 Powering On/Off

- To power on: Press and hold the power button (usually marked with a power symbol) for a few seconds until the indicator light turns on and you hear a prompt.
- To power off: Press and hold the power button again for a few seconds until the indicator light turns off.

4. OPERATING INSTRUCTIONS

4.1 Bluetooth Connection

The microphone connects wirelessly via Bluetooth to your mobile phone or other compatible devices.

1. Ensure the microphone is powered on. It will automatically enter Bluetooth pairing mode (indicated by a flashing light or voice prompt).
2. On your mobile phone or device, enable Bluetooth and search for available devices.

3. Select "WS-858" (or similar name) from the list of found devices to pair.
4. Once successfully paired, you will hear a confirmation sound, and the indicator light will stop flashing.



Figure 4.1: The WS-858 microphone is compatible with various operating systems including Mac/iOS, Windows, and Android via Bluetooth.

4.2 Using the Microphone for Karaoke

After connecting via Bluetooth, you can play music from your device through the microphone's built-in speaker and sing along.

- **Music Playback:** Use your connected device to play music from any karaoke app or music player. The audio will output through the microphone's speaker.
- **Microphone Volume:** Adjust the microphone's volume using the dedicated "MIC VOL" button or slider on the device.
- **Echo/Reverb:** Control the echo effect using the "REMIX" button or slider to enhance your vocals.
- **Music Volume:** Adjust the music playback volume using the "VOL" buttons (+/-) on the microphone or directly from your connected device.
- **Treble/Bass:** Some models may have dedicated buttons for treble and bass adjustment. Refer to the button layout for specific controls.
- **Song Navigation:** Use the "PREV" and "NEXT" buttons to skip between tracks. The "SCAN" button may be used for Bluetooth scanning or other functions depending on the mode.
- **Recording:** The "REC" button allows you to record your singing. Ensure your connected device has a recording app open or is set to record.



Figure 4.2: Detailed view of the microphone's control panel and internal components, highlighting button functions like PREV, SCAN, REC, NEXT, VOL, MIC VOL, and REMIX.

4.3 Wired Connection (AUX)

The microphone can also be connected to devices using the provided 3.5mm audio cable.

1. Connect one end of the audio cable to the AUX port on the microphone.
2. Connect the other end to the audio output (headphone jack) of your device.
3. The microphone will automatically switch to AUX mode.

4.4 Selfie Function

The WS-858 includes a selfie function. Specific instructions for activating and using this feature may vary slightly depending on your phone's operating system and camera app. Generally, it involves pairing the microphone via Bluetooth and using a specific button (often the "REC" or "SCAN" button) as a remote shutter.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your microphone.

- **Cleaning:** Use a soft, dry cloth to wipe the microphone's surface. Do not use abrasive cleaners or solvents.
- **Storage:** Store the microphone in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. If storing for a long period, charge the battery to about 50% every few months.
- **Avoid Moisture:** Keep the microphone away from water and high humidity.
- **Handle with Care:** Avoid dropping or subjecting the microphone to strong impacts.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not power on.	Battery is low or depleted.	Charge the microphone fully using the provided charging cable.
Cannot connect via Bluetooth.	Bluetooth is off on the device; microphone is not in pairing mode; interference.	Ensure Bluetooth is enabled on your device. Power off and on the microphone to re-enter pairing mode. Move closer to the microphone and away from other wireless devices.
No sound from speaker.	Volume is too low; microphone is not connected; incorrect mode.	Increase the volume on both the microphone and the connected device. Ensure Bluetooth or AUX connection is established. Check if the microphone is in the correct playback mode.
Poor sound quality / Static.	Weak Bluetooth signal; interference; microphone too close to speaker.	Move the microphone closer to the connected device. Avoid placing the microphone directly in front of its own speaker to prevent feedback. Reduce interference from other electronic devices.
Battery drains quickly.	High volume usage; aging battery.	Reduce volume levels. Ensure the microphone is fully charged before use. If the issue persists, the battery may need replacement (contact support).

7. SPECIFICATIONS

Feature	Detail
Brand	Voupuoda
Model	WS-858
Output Power	5W
Frequency Range	100Hz ~ 10KHz
Max Sound Pressure Level	> 115dB 1KHz TDH <1%
Reverberation Mode	Sound effect reverberation
Power Supply	Built-in Li-18650 Battery
Battery Capacity	1800mAh
Charging Power	DC 5V
Connectivity	Bluetooth

Feature	Detail
Material	Aluminum Alloy
Product Dimensions	26 x 11 x 9 cm
Product Weight	240 g
Color	Gold

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the purchase documentation or contact your retailer. Keep your proof of purchase for any warranty claims.

If you encounter any issues not covered in this manual, please contact Voupuoda customer service or the seller for assistance.

© 2024 Voupuoda. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

