Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > TRUSTECH /
- > Electric Space Heater for Large Room 36" Ceramic Tower Space Heater for Room Heating w/Thermostat, Fast Heating, 3D Realistic Flame, Oscillating, Remote Control, Ideal for Home/Livingroom

TRUSTECH KPT-1606F

TRUSTECH 36" Ceramic Tower Space Heater User Manual

Model: KPT-1606F

Brand: TRUSTECH

1. Setup Instructions

Carefully remove the heater from its packaging. Ensure all components are present and undamaged. Place the heater on a firm, level surface, away from walls, furniture, and curtains to ensure proper airflow and prevent fire hazards. Ensure the power cord is not obstructed or placed under the heater.



Image: The TRUSTECH 36-inch Ceramic Tower Space Heater, showcasing its sleek design, remote control, and realistic 3D flame effect.

Connect the power cord to a standard 120 Volt, 12.5 Amp electrical outlet. Do not use extension cords or power strips with this appliance.

2. Operating Instructions

The TRUSTECH Ceramic Tower Space Heater offers multiple operating modes and features for optimal comfort.

Power On/Off

Press the Power button on the digital touch panel or the remote control to turn the heater on or off.

Heating Modes

Press the 'MODE' button to cycle through the available heating modes:

- Low (LO): 1000W heating output.
- High (HI): 1500W heating output for rapid warming.
- **ECO Mode:** The heater intelligently adjusts its power consumption (between 1000W and 1500W) to maintain your set temperature, optimizing energy efficiency.



Image: The TRUSTECH space heater rapidly warms a room to 75°F in seconds using PTC ceramic heating technology.

Thermostat Adjustment

In ECO Mode, use the '+' and '-' buttons on the control panel or remote to set your desired temperature between 59°F and 95°F.

Oscillation Feature

Press the 'OSC' button on the control panel or remote to activate the 60° oscillation function, distributing warm air widely across the room.



Image: The heater features 60° widespread oscillation to distribute warm air evenly across a room.

3D Realistic Flame

Press the 'FLAME' button on the remote control to turn the realistic 3D flame effect on or off. This feature provides visual ambiance and does not produce heat.

12-Hour Timer

Press the 'TIMER' button to set the auto-off timer for up to 12 hours. Each press increases the timer by one hour.

Remote Control & Digital Panel

All functions can be controlled via the included remote control or the intuitive digital touch panel located on the top of the heater.



Image: Control the TRUSTECH space heater conveniently with the included remote control or the digital touch panel on top.



Image: Multiple heating modes, including Low (1000W), High (1500W), and ECO mode, allow for customized comfort.

3. Maintenance

Always unplug the heater from the power outlet and allow it to cool completely before cleaning or storing.

Cleaning

Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure no water enters the interior of the heater.

Storage

When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

4. Troubleshooting

If your heater is not functioning as expected, please refer to the following common issues and solutions:

- **Heater does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the power outlet is active.
- Heater stops working unexpectedly: The heater may have activated its safety features.
 - Tip-Over Protection: If the heater is accidentally knocked over (beyond 45°), it will
 automatically shut off. Place the heater upright on a stable surface to resume operation.
 - Overheat Protection: If the heater overheats, it will automatically shut off. Unplug the
 heater, allow it to cool for 10-15 minutes, and then plug it back in. Ensure there are no
 obstructions to the air intake or output vents.
- Oscillation not working: Ensure the heater is on a flat, stable surface. If the issue persists, contact customer support.



Image: The heater is equipped with dual protection features, including tip-over and overheating safeguards, for enhanced safety.

5. Specifications

Feature	Detail			
Brand	TRUSTECH			
Model	KPT-1606F			
Color	Black Indoor Space Heater			
Form Factor	Tower			
Product Dimensions	7.4"D x 7.4"W x 34.76"H			
Item Weight	7 pounds			
Voltage	120 Volts			
Amperage	12.5 Amps			
Fuel Type	PTC Ceramic Heating			
Heating Coverage	Whole room heating (380 sq-ft to 500 sq-ft)			
Min Temperature Setting	59 Degrees Fahrenheit			
Max Temperature Setting	95 Degrees Fahrenheit			
Number of Speeds	3			
Special Feature	Energy Efficient, Portable, Programmable Thermostat, 12H timer, Three heating modes, 3D Realistic Flame, Oscillating, Remote Control			

6. Warranty and Support

TRUSTECH provides 12-months after-sales service for the Electric Space Heater, guaranteeing satisfaction for all customers.

For any questions, troubleshooting assistance, or warranty claims, please contact TRUSTECH customer support through the retailer's platform or the official brand website.

