

Accutime POK4240AZ

Accutime Kids Pokemon Digital LCD Quartz Watch Instruction Manual

Model: POK4240AZ | Brand: Accutime

INTRODUCTION

Welcome to the instruction manual for your new Accutime Kids Pokemon Digital LCD Quartz Watch. This watch is designed to be a fun and functional accessory for young Pok mon fans, featuring beloved characters and easy-to-read digital time display.

Product Overview

- **Pikachu Design:** Features Pikachu on the dial and strap, making it a delightful accessory for any young Pok mon fan.
- **Flashing Dial Lights:** Equipped with flashing lights around the dial, adding a fun and interactive element to the watch.
- **Clear Digital Display:** The digital LCD display shows the time clearly, making it easy for kids to read.
- **Durable and Stylish:** The silver metallic case with a colored bezel provides a stylish look while ensuring durability for everyday wear.
- **Comfortable Fit:** The printed plastic straps with a colored plastic buckle and keeper ensure a comfortable and secure fit for active kids.



Figure 1: Front view of the Accutime Kids Pokemon Digital LCD Quartz Watch, showcasing the Pikachu dial and character-printed strap.

SETUP

Battery Information

Your watch comes with 1 Product Specific battery (2xLR41, 1.5V) already installed. No initial battery installation is required for immediate use.

Adjusting the Watch Band

The watch features a durable plastic strap with multiple holes and a traditional buckle closure, allowing for easy adjustment to fit various wrist sizes, from smaller children to adults. Simply thread the strap through the buckle and secure it at the desired hole for a comfortable fit.



Figure 2: The watch strap features multiple adjustment holes for a secure and comfortable fit.



Figure 3: Rear view of the watch, highlighting the strap and buckle for adjustment.

Setting the Time and Date

To set the time and date on your digital watch, locate the buttons on the side of the watch case. Typically, one button is used to cycle through display modes (time, date) and another to adjust the values. Refer to the video below for a visual guide on setting the time and date.

Your browser does not support the video tag.

Video 1: This video demonstrates how to set the time and date on the Accutime Kids Pokemon Digital LCD Quartz Watch. It also shows the watch's light-up feature and the adjustable strap.

OPERATING INSTRUCTIONS

Displaying Time and Date

Press the bottom button on the side of the watch to cycle through the display modes. The first press will typically show the

current time, and subsequent presses may display the date or other information if available. The clear LCD screen ensures easy readability.



Figure 4: The digital LCD display provides a clear view of the time.

Using the Flashing Dial Lights

To activate the fun flashing lights around the dial, press the top button on the side of the watch. The lights will illuminate, adding an exciting visual effect. This feature is designed for entertainment and can be used at any time.



Figure 5: Side view of the watch, indicating the location of the operational buttons.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch clean with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials, as they may damage the watch face or strap.
- **Water Resistance:** This watch is not waterproof. Avoid submerging it in water or exposing it to excessive moisture to prevent damage to the internal components.
- **Storage:** When not in use, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** When the display dims or the lights stop flashing, it may be time to replace the battery. This watch uses 2xLR41 (1.5V) batteries. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and function.

TROUBLESHOOTING

- **Display is blank or dim:**
 - Check if the battery needs replacement.

- Ensure no buttons are stuck in a pressed position.

- **Lights are not flashing:**

- Verify the battery level. Low battery can affect light functionality.
- Ensure the light activation button is functioning correctly.

- **Time is incorrect:**

- Follow the "Setting the Time and Date" instructions in the Setup section to reset the time.
- If the time consistently loses accuracy, the battery may be weak or require replacement.

If you encounter issues not covered here, please contact Accutime customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	POK4240AZ
Manufacturer	Accutime Watch Corp.
Department	Boys
Batteries	1 Product Specific battery (2xLR41, 1.5V) required (included)
Package Dimensions	7.7 x 4.9 x 2.2 inches
Item Weight	1 ounces
ASIN	B08CY6FTJ1
Country of Origin	China
First Available Date	July 14, 2020

WARRANTY AND SUPPORT

Specific warranty information for the Accutime Kids Pokemon Digital LCD Quartz Watch is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging or contact Accutime customer service directly through their official website or the retailer where the watch was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question