

Xinbeiya C3

Xinbeiya C3 Kids Digital Camera Instruction Manual

INTRODUCTION

The Xinbeiya C3 Kids Digital Camera is designed for children aged 3-10, offering a fun and engaging way to capture photos and videos. This portable and rechargeable camera features 1080P video recording, various photo effects, and built-in games. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal use of your camera.

Key Features:

- 1080P Video Resolution
- 5 MP Effective Still Resolution
- 2-inch LCD Color Screen
- Digital Zoom
- Built-in Games
- Photo Frames and Filters
- Durable Silicone Case
- USB Connectivity
- MicroSD Card Support

WHAT'S INCLUDED

The package contains the following items:

- 1 x Xinbeiya C3 Kids Digital Camera with Silicone Case
- 1 x Lanyard
- 1 x USB Cable
- 1 x SD Card (pre-inserted)

SETUP

1. Inserting/Removing the SD Card

The camera comes with an SD card already inserted. To remove it, gently press the card until it clicks and ejects. To re-insert, push the card into the slot until it clicks into place. Ensure the card is fully seated for proper function.



The side of the camera features a slot for the MicroSD card. The camera is shown with its pink silicone case and a colorful lanyard.

2. Charging the Camera

Connect the camera to a USB power source (e.g., computer, wall adapter) using the provided USB cable. The charging time is approximately 1.5-2 hours. A charging indicator light will typically show the charging status.



This image highlights the camera's USB charging port and other controls, along with dimensions and charging time information.

3. Powering On/Off

Press and hold the power button (usually located on the top or side of the camera) for a few seconds to turn the camera on or off.

OPERATING INSTRUCTIONS

1. Taking Photos

Turn on the camera. The screen will display the live view. Frame your shot and press the shutter button (typically on the top of the camera) to capture a picture.

A Special Gift



A young child is shown holding the pink Xinbeiya C3 camera, demonstrating its compact size and ease of use for small hands.

2. Recording Videos

From the main menu, navigate to the video recording mode (look for a video camera icon). Press the shutter button once to start recording, and press it again to stop recording.

3. Using Photo Frames and Filters

The camera includes 15 cartoon photo frames, 3 photo effects, and 6 classic filters. Use the navigation buttons (up/down/left/right) to browse and select these effects. Apply them before taking a photo to add creative touches.

4 Color Filter Effects



7 Scene Selections



14 Funny Frames



This image illustrates the variety of 4 color filter effects, 7 scene selections, and 14 funny frames available on the camera to enhance photos.

4. Playing Built-in Games

Access the games menu from the main screen. The camera features 5 classic games for entertainment. Use the navigation buttons to control gameplay.

Your browser does not support the video tag.

This video demonstrates the various functions of the kids' camera, including navigating menus, taking photos, and playing the built-in games. It highlights the camera's user-friendly interface and entertainment features.

5. Voice Recording

Select the voice recording option from the main menu to record audio. Press the appropriate button to start and stop recording.

6. Playback

Use the playback mode (look for a play icon) to view your captured photos and videos. Use the navigation buttons to

scroll through your media.

MAINTENANCE

Cleaning the Camera

Wipe the camera body with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or solvents, as these can damage the camera's finish or internal components.

Silicone Protective Case

The camera comes with a durable silicone case that provides anti-fall protection. Ensure the case is properly fitted to maximize protection against accidental drops and impacts. The case can be removed for cleaning if necessary.

Nontoxic Soft Silicon Materials Seismic Safety Design



The image shows the camera encased in its non-toxic soft silicon material, emphasizing its seismic safety design and protection against drops.

TROUBLESHOOTING

"NO CARD" Error Message

If the camera displays a "NO CARD" message, first ensure the SD card is correctly inserted and clicked into place. Gently press the card to ensure it is fully seated. If the issue persists, try removing and re-inserting the card. If the problem continues, the SD card may be faulty or incompatible; try using a different compatible SD card.

Camera Not Turning On

Ensure the camera is fully charged. If the battery is low, connect it to a power source using the USB cable and allow it to charge for at least 30 minutes before attempting to turn it on again. If the camera still does not power on, contact customer support.

Poor Image Quality

Ensure there is adequate lighting when taking photos, as low light conditions can significantly impact image quality. The camera is designed for children and may not produce professional-grade images. For best results, ensure subjects are well-lit and stable.

SPECIFICATIONS

Feature	Detail
Brand	Xinbeiya
Model Name	C3
Maximum Webcam Image Resolution	5 MP
Video Resolution	1080p
Screen Size	2 Inches
Image Stabilization	Digital
Zoom	Digital Zoom
Connectivity Technology	USB
Hardware Interface	MicroSD, Secure Digital Card
Batteries Included	Yes
Item Weight	0.17 Kilograms
Age Range Description	Toddler, Kid
Supported File Format	JPEG
Memory Storage Capacity	1 GB (SD card included)
Charging Time	1.5-2 hours (approximate)

WARRANTY AND SUPPORT

For any product inquiries, technical assistance, or warranty claims, please refer to the manufacturer's contact information provided with your original purchase. It is recommended to keep your proof of purchase for all warranty-related matters.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question