

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Armor3](#) /

> [Armor3 Wired Game Controller for PS4/ PC/Mac \(Blue\) - Instruction Manual](#)

Armor3 M07341-BU

Armor3 Wired Game Controller Instruction Manual

Model: M07341-BU

PRODUCT OVERVIEW

The Armor3 Wired Game Controller is designed for use with PlayStation 4, PC, and Mac systems, offering a versatile gaming experience. It features a 6.5 ft. cable for extended reach, intense vibration feedback, motion sensing technology, and a light bar for enhanced immersion. The controller also includes a touchpad and a front speaker, though functionality for these features may vary when used with PC and Mac.

Key Features:

- 6.5 ft. wired connection for reliable performance.
- Vibration-feedback for immersive gameplay (functionality may vary for PC and Mac).
- Compatible with PS4, PC, and Mac via USB.
- Integrated touchpad (functionality may vary for PC and Mac).
- Motion sensing technology.
- Front speaker and light bar for enhanced in-game experience.



Image: The Armor3 Wired Game Controller in blue, shown alongside its retail packaging.

SETUP GUIDE

Follow these steps to connect your Armor3 Wired Game Controller to your desired system:

1. **For PlayStation 4:** Locate an available USB port on your PS4 console. Insert the USB connector of the Armor3 controller into the USB port. The controller should be automatically recognized by the system.
2. **For PC/Mac:** Locate an available USB port on your computer. Insert the USB connector of the Armor3 controller into the USB port. Your operating system may automatically install necessary drivers. If not, you may need to manually install drivers or configure the controller through your system's game controller settings. Functionality of certain features (like touchpad, vibration) may vary depending on the game and operating system.



Image: An angled view of the Armor3 Wired Game Controller, highlighting its integrated USB cable for connection.

OPERATING INSTRUCTIONS

Once connected, the Armor3 controller functions similarly to standard game controllers. Familiarize yourself with the button layout:

- **Analog Sticks:** Used for movement and camera control.
- **Directional Pad (D-Pad):** For precise directional input.
- **Action Buttons (Triangle, Circle, Cross, Square):** Perform in-game actions.
- **Shoulder Buttons (L1, R1) and Triggers (L2, R2):** For various in-game functions like aiming, shooting, or menu navigation.
- **SHARE Button:** Allows sharing gameplay content (PS4 specific).
- **OPTIONS Button:** Accesses in-game menus or pauses the game.
- **Touchpad:** Functions as a clickable surface for specific in-game interactions (functionality varies for PC/Mac).
- **Light Bar:** Changes color to indicate player number, health, or other in-game states.
- **Front Speaker:** Provides additional audio cues from the game.



Image: A direct front view of the Armor3 Wired Game Controller, showing all buttons, analog sticks, and the touchpad.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Armor3 Wired Game Controller, please follow these care instructions:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the controller's finish and internal components.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity.
- **Cable Care:** Avoid sharply bending or twisting the cable. Do not pull the controller by its cable. Always grasp the USB connector when plugging or unplugging it from your device.
- **Avoid Drops:** Protect the controller from drops and impacts, which can cause internal damage.

TROUBLESHOOTING

If you encounter issues with your Armor3 Wired Game Controller, try the following solutions:

Problem	Possible Solution
Controller not recognized / not responding	<ul style="list-style-type: none">◦ Ensure the USB cable is securely plugged into both the controller and the console/computer.◦ Try a different USB port.◦ Restart your console or computer.◦ For PC/Mac, check your device manager or system preferences to see if the controller is detected. You may need to update USB drivers.
Vibration feedback not working	<ul style="list-style-type: none">◦ Ensure the game you are playing supports vibration feedback.◦ Check in-game settings to ensure vibration is enabled.◦ For PC/Mac, confirm that your system and game drivers fully support the controller's vibration feature.
Buttons or analog sticks are unresponsive	<ul style="list-style-type: none">◦ Disconnect and reconnect the controller.◦ Restart your console or computer.◦ Ensure no debris is lodged around the buttons or sticks.

TECHNICAL SPECIFICATIONS

- **Model Number:** M07341-BU
- **Connectivity:** Wired USB
- **Cable Length:** 6.5 ft.
- **Compatibility:** PlayStation 4, PC, Mac (functionality may vary for PC and Mac)
- **Features:** Vibration-feedback, Motion Sensing Technology, Light Bar, Touchpad, Front Speaker
- **Package Dimensions:** 6.93 x 4.65 x 3.58 inches
- **Item Weight:** 10.6 ounces
- **Manufacturer:** Armor3
- **Release Date:** July 17, 2020

WARRANTY AND SUPPORT

For detailed warranty information, product support, or to contact customer service, please refer to the official Armor3 website or the documentation included with your purchase. Keep your proof of purchase for warranty claims.

You can typically find support resources, FAQs, and contact information on the manufacturer's official website: [Hyperkin.com](https://www.hyperkin.com) (Armor3 is a brand of Hyperkin).

