

Cuchen CJH-VES1000SKUS

Cuchen IH Pressure Rice Cooker

MODEL: CJH-VES1000SKUS (10-CUP CAPACITY)

Instruction Manual

1. Introduction

Thank you for choosing the Cuchen IH Pressure Rice Cooker. This appliance is designed to provide perfectly cooked rice and various other dishes with ease and efficiency. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new rice cooker. Please read it thoroughly before first use and keep it for future reference.

2. Safety Precautions

To prevent injury or damage to the appliance, always follow these basic safety precautions:

- Ensure the voltage rating of the appliance matches your local power supply (100 Volts).
- Do not immerse the main unit, power cord, or plug in water or other liquids.
- Keep out of reach of children. Close supervision is necessary when the appliance is used near children.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Always ensure the lid is properly closed and locked before operating the pressure cooking function.
- Do not touch hot surfaces. Use handles or knobs. Steam released during and after cooking is hot.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Use only accessories recommended by the manufacturer.

3. Product Overview

The Cuchen IH Pressure Rice Cooker features advanced Induction Heating (IH) technology for even cooking and a durable cast iron inner pot. It includes a user-friendly control panel with an LED display and various preset cooking functions.

Components:

- Main Unit (with control panel and lid)

- Removable Inner Pot (Cast Iron)
- Power Cord
- Rice Spatula
- Measuring Cup
- Instruction Manual (this document)

Key Features:

- **Induction Heating (IH):** Ensures uniform heat distribution for perfectly cooked rice.
- **10-Cup Capacity:** Suitable for families of various sizes.
- **Automatic Keep Warm:** Maintains optimal rice temperature after cooking.
- **Removable Inner Pot:** Durable cast iron construction for superior heat retention and easy cleaning.
- **LED Display & Control Panel:** Intuitive interface for selecting cooking modes and settings.
- **Auto Clean Function:** Simplifies internal cleaning with steam.
- **Detachable Clean Cover:** For thorough cleaning of the lid interior.
- **Moisture Collector:** Gathers excess steam and moisture for cleaner operation.



Figure 3.1: Main unit of the Cuchen IH Pressure Rice Cooker, showing the control panel and lid.

분리형 클린커버

밥솥 뚜껑을 통째로 손쉽게 분리하여 보다 쉽고 간편하게
구석구석 깨끗이 세척할 수 있어 두구두구 깨끗하게 사용할 수 있습니다.



구석구석 보이지 않는 곳까지 간편하게 세척합니다.
기존 일체형 커버에서 느꼈던 세척의 번거로움을 간편하게 탈부착이 가능한
분리형 커버로 완벽한 세척이 가능하여 청결하고 위생적입니다.



Figure 3.2: The durable, removable cast iron inner pot, designed for optimal heat distribution.

쿠첸 자동스팀세척

보이지 않는 부분까지 원터지로 깨끗하게 세척!!
고압 증기로 강력한 스팀을 분사하여 노즐의 막힘을 방지하고 더 깨끗하게 이용할 수 있습니다



Figure 3.3: Illustration of the detachable clean cover and the automatic steam cleaning function for hygiene.

4. Setup

1. **Unpacking:** Carefully remove all packaging materials and ensure all components listed in Section 3 are present.
2. **Initial Cleaning:** Before first use, wash the inner pot, detachable clean cover, measuring cup, and spatula with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.

4. **Power Connection:** Insert the power cord firmly into the appliance's power inlet and then into a grounded electrical outlet.

5. Operating Instructions

Basic Rice Cooking:

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Wash Rice:** Rinse the rice thoroughly under cold running water until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water according to the markings inside the inner pot, corresponding to the amount of rice. For example, for 3 cups of rice, fill water to the '3' mark.
4. **Place Inner Pot:** Insert the inner pot into the main unit, ensuring it sits correctly.
5. **Close Lid:** Close the lid firmly until it locks into place. Ensure the pressure release valve is in the 'Sealed' position (if applicable).
6. **Select Cooking Mode:** On the control panel, select the desired rice type (e.g., White Rice, Brown Rice, Mixed Rice, GABA Rice) or cooking function (e.g., Slow Cook). The LED display will show the selected mode and estimated cooking time.
7. **Start Cooking:** Press the 'Start' or 'Cook' button to begin the cooking process. The cooker will automatically adjust pressure and temperature.
8. **Keep Warm:** Once cooking is complete, the cooker will automatically switch to the 'Keep Warm' mode.

Refer to the specific markings on your inner pot and the detailed instructions on the control panel for precise measurements and program selections.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your rice cooker.

1. **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Inner Pot:** Wash the removable inner pot with warm, soapy water using a soft sponge. Do not use abrasive cleaners or metal scrubbers, as this can damage the non-stick coating.
3. **Detachable Clean Cover:** Remove the clean cover from the lid and wash it with warm, soapy water. Rinse and dry thoroughly before reattaching.
4. **Moisture Collector:** Empty and clean the moisture collector located at the back of the unit after each use.
5. **Main Unit Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals.
6. **Auto Clean Function:** Utilize the 'Auto Clean' function periodically to clean the internal steam path and prevent blockages. Follow the instructions on the control panel for this cycle.

7. Troubleshooting

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rice is too hard/undercooked	Insufficient water; incorrect rice-to-water ratio; lid not properly sealed.	Add more water next time; ensure lid is securely locked; check sealing gasket.

Problem	Possible Cause	Solution
Rice is too soft/mushy	Too much water; incorrect rice-to-water ratio.	Reduce water next time; ensure correct ratio for rice type.
Cooker does not turn on	Power cord not connected; power outage; faulty outlet.	Check power cord connection; verify power supply; try a different outlet.
Steam leaks from lid	Lid not properly closed; sealing gasket dirty or damaged.	Ensure lid is locked; clean or replace sealing gasket.

If the problem persists after attempting these solutions, please contact Cuchen customer support.

8. Specifications

- **Brand:** Cuchen
- **Model Name:** CJH-VES1000SKUS
- **Capacity:** 10 Cups
- **Power Source:** Corded Electric
- **Voltage:** 100 Volts
- **Wattage:** 700 watts
- **Material:** Cast Iron (Inner Pot)
- **Special Feature:** Automatic Keep Warm
- **Included Components:** Instruction Manual, Power cord, Spatula

9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Cuchen website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you require further assistance or have questions not covered in this manual, please contact Cuchen customer service through their official channels.

© 2023 Cuchen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question