



[Manuals.plus](#) /

› [Lychee](#) /

› Lychee SIM Fixed Wireless GSM Quad-Band Phone Instruction Manual

## Lychee B08CZ7M3F3

# Lychee SIM Fixed Wireless GSM Quad-Band Phone Instruction Manual

Model: B08CZ7M3F3

## 1. INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your Lychee SIM Fixed Wireless GSM Quad-Band Phone. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

# GSM Fixed Wireless Phone



One key dial



Handfree



SMS



Phone book



Call Enquiry



Five Ringtones



Alarm clock



Long standby time



Figure 1.1: Lychee SIM Fixed Wireless GSM Quad-Band Phone highlighting key features like one-key dial, hands-free, SMS, phonebook, call enquiry, ringtones, alarm clock, and long standby time.

## Key Features:

- Large capacity phonebook (200 entries).
- DTMF two-stage dialing support.
- User-customized volume adjustment.
- Clear and soft ringtones.
- Screen backlight function.
- Standard TNC antenna interface for indoor and outdoor antennas.
- Various security solutions: network lock, card lock, cell lock, machine card lock.
- Powerful external antenna for stable signal and smooth calls.
- Large backlit LCD screen and backlit keypad for ease of use.
- High-quality built-in speaker and microphone with hands-free function.
- GSM Quad-Band support (850/900/1800/1900 Mhz) for 2G networks.

# More Details



01. HD screen backlight



02. Clear big buttons



03. Hi-Fi speakers



04. Support any SIM card

Figure 1.2: Detailed view of the phone's features including the HD screen backlight, clear large buttons, Hi-Fi speakers, and the SIM card support.

## 2. SETUP INSTRUCTIONS

Follow these steps to correctly set up your Lychee SIM Fixed Wireless GSM Quad-Band Phone.

1. **Insert SIM Card:** Locate the SIM card slot on the device. Carefully insert your mobile SIM card into the designated slot. Ensure it is correctly oriented.
2. **Insert Battery:** After inserting the SIM card, place the provided 3.7V 3000 mAh battery into its compartment. Ensure proper contact with the terminals.
3. **Power On:** Press and hold the power button (usually marked with a power symbol) until the screen illuminates. The phone will then initiate its startup sequence.

# How to Install ?



**Step1 : Insert the SIM Card**



**Step2 : Insert the battery (included)**



**Step3: Press the red power button, the deskphone will turn on**

**Figure 2.1:** Visual guide for inserting the SIM card (Step 1) and battery (Step 2) into the phone, followed by pressing the power button (Step 3) to turn it on.

## Antenna Installation:

The phone comes with an external TNC antenna. Screw the antenna firmly into the TNC antenna interface located on the device. Adjust the antenna's 180° rotation for optimal signal reception.

# MAKE CALLS ANYTIME AND ANYWHERE

## Support four frequency bands:

GSM 850/900/1800/1900Mhz

*External antenna, the signal is more stable, communication is smoother*



**Figure 2.2:** The Lychee Fixed Wireless Phone with its external antenna installed, demonstrating its capability for making calls anywhere with stable communication.

## 3. OPERATING INSTRUCTIONS

---

### Making Calls:

- **Dialing:** Enter the desired phone number using the keypad. Press the green call button to initiate the call.
- **Answering Calls:** When the phone rings, press the green call button to answer.
- **Hands-Free Function:** During a call, press the hands-free button (speaker icon) to activate the speakerphone. Press it again to deactivate.
- **Volume Adjustment:** Use the dedicated volume buttons to adjust the call volume during a conversation or the ringtone volume when idle.

### Phonebook:

The phone supports a large capacity phonebook of up to 200 entries.

- **Adding Contacts:** Navigate to the "Phonebook" menu, select "Add New Contact," enter the name and number, then save.
- **Calling from Phonebook:** Access the "Phonebook" menu, scroll to the desired contact, and press the green call button.

### SMS Messaging:

The device supports sending and receiving SMS messages.

- **Sending SMS:** Go to the "SMS" menu, select "New Message," enter the recipient's number and your message, then send.
- **Reading SMS:** New messages will typically display an alert. Access the "SMS" menu to view your inbox.

### Additional Functions:

- **Call Enquiry:** View call history (dialed, received, missed calls) through the "Call Enquiry" menu.
- **Alarm Clock:** Set alarms via the "Alarm Clock" function in the menu.
- **Ringtones:** Choose from five clear and soft ringtones in the settings menu.



**Figure 3.1:** The Lychee Fixed Wireless Phone offers HD loud sound and hands-free functionality, allowing for clear conversations without holding the handset.

## 4. MAINTENANCE

---

### Cleaning:

Wipe the phone's surface with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the device.

### Battery Care:

- Recharge the battery when the low battery indicator appears.
- Avoid exposing the battery to extreme temperatures.
- If the phone will not be used for an extended period, remove the battery.

### Antenna Care:

Ensure the external antenna is securely attached. Avoid bending or applying excessive force to the antenna, as this can affect signal quality.

## 5. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No Power	Battery not inserted correctly, battery discharged, power button not pressed long enough.	Ensure battery is correctly inserted. Charge the battery. Press and hold the power button for a few seconds.
No Signal	SIM card not inserted, antenna not connected, out of network coverage, network lock activated.	Check SIM card insertion. Ensure antenna is securely attached and adjusted. Move to an area with better network coverage. Check security settings for network lock.
Cannot Make/Receive Calls	No signal, SIM card issues, call barring activated.	Check signal strength. Verify SIM card is active and has credit. Check call barring settings.
Poor Call Quality	Weak signal, interference, antenna position.	Adjust antenna position. Move to an area with stronger signal. Avoid sources of interference.
Screen Not Backlit	Backlight setting off, power saving mode.	Check display settings in the menu to ensure backlight is enabled.

## 6. SPECIFICATIONS

---

Feature	Detail
Model	B08CZ7M3F3
Brand	Lychee
Dimensions (L×W×H)	196 mm × 152 mm × 51 mm
Weight	Less than 700g (battery included)

Feature	Detail
Power Supply	AC: 100V ~ 240V; DC: 5.00 V, 0.65 A
Battery	3.7 V 3000 mAh
Standby Time	150 hours
External Interface	USB data interface
Antenna Interface Type	TNC
Display Screen	128x64 LCD
Frequency Bands	GSM850 / 900 / 1800 / 1900 Mhz (Quad-Band)
Maximum Transmit Power	33 ± 2dBm
Receive Sensitivity (GSM900M)	Better than -105dBm
Receive Sensitivity (DCS1800M)	Better than -104dBm
Material	Plastic
Color	Black
Compatible Devices	Telephone network, Computer

## 7. WARRANTY AND SUPPORT

---

Information regarding warranty coverage and customer support for this Lychee product is not explicitly provided in the product details. Please refer to the seller's return policy or contact the seller directly for specific warranty terms and support options. For general inquiries or issues, you may contact the seller "Lycheer" via the Amazon platform.