

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [CubicFun](#) /

> [CubicFun LED Musical Christmas Train 3D Puzzle \(Model P805h\) Instruction Manual](#)

CubicFun P805h

CubicFun LED Musical Christmas Train 3D Puzzle (Model P805h) Instruction Manual

Brand: CubicFun | Model: P805h

INTRODUCTION

This manual provides detailed instructions for assembling and operating your CubicFun LED Musical Christmas Train 3D Puzzle. This 218-piece model kit features LED lights, musical melodies, and intricate details to create a festive display. Please read all instructions carefully before beginning assembly.

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small Parts. Not for children under 3 years.

Recommended age for assembly: 8 years and up.

PACKAGE CONTENTS

Your CubicFun LED Musical Christmas Train 3D Puzzle package includes:

- Pre-cut paper and foam board puzzle pieces (218 pieces)
- LED lighting components
- Musical module
- Instruction manual
- Christmas card
- Smoke-like cotton for steam effect

What's in The Box?



Image: All components included in the CubicFun LED Musical Christmas Train 3D Puzzle box, featuring pre-cut puzzle sheets, LED lights, musical module, and instructions.

ASSEMBLY INSTRUCTIONS

Assembly of the CubicFun Christmas Train is a rewarding process. Follow the detailed printed instructions included in your package. Here are some general tips for a smooth assembly:

- **Handle Pieces Carefully:** Pre-cut pieces are made from durable paper and foam board. Gently push them out from the sheets.
- **Prevent Damage:** To avoid damaging the printed colors, turn the puzzle boards upside down when popping out pieces.
- **Lubricate Moving Parts:** For gears and other moving components, a small amount of wax (such as from a birthday candle or tea light) can help ensure smooth operation.
- **Follow Numbered Steps:** The instruction manual provides clear, numbered steps with illustrations. Ensure each step is completed before moving to the next.
- **Wiring:** Carefully route the LED wiring as indicated in the instructions to ensure proper lighting and musical function.

ENJOY THE HAPPY CHRISTMAS HOURS WITH YOUR FAMILY



Image: A family enjoying the assembly process of the CubicFun Christmas Train 3D Puzzle, highlighting the engaging nature of the build.

Assembly Video Guide

Your browser does not support the video tag.

Video: A detailed guide demonstrating the assembly process of the CubicFun 3D LED Musical Christmas Train Set, including steps for integrating lights and music.

OPERATING INSTRUCTIONS

Once assembled, your Christmas train model can be brought to life with lights and music.

Powering the Model

- The model requires 3 x 1.5V AAA batteries (not included). Insert them into the designated battery compartment at the rear of the train according to the instructions.
- Ensure the battery polarity is correct.

Lights and Music

- Locate the power switch (refer to your printed manual for exact location).

- Turn on the switch to activate the colorful LED lights and play the 'Jingle Bells' melody.
- The train features a "real smoke" effect using the included smoke-like cotton on the cab when the lights and music are active.



Image: The fully assembled CubicFun Christmas Train 3D Puzzle, showcasing its vibrant LED lights and festive musical feature.

Operation Video Guide

Your browser does not support the video tag.

Video: A short demonstration of the CubicFun 3D LED Christmas Train, highlighting its lights and musical features in operation.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe dust from the model. Avoid using liquids or abrasive cleaners.
- **Storage:** Store the assembled model in a cool, dry place away from direct sunlight and excessive humidity to prevent warping or fading.
- **Battery Replacement:** Replace AAA batteries when lights dim or music fades. Ensure proper disposal of old batteries.

- **Handling:** While durable, the model is made of paper and foam board. Handle with care to avoid bending or tearing pieces.

TROUBLESHOOTING

- **Music is too loud/obnoxious:** The musical module is integrated. If the music volume is undesirable, some users have carefully disconnected the speaker wires (requires technical skill and may void warranty). Alternatively, consider using the model with lights only if possible via the switch.
- **Pieces do not stay together:** Ensure all tabs are fully inserted into their corresponding slots. For added stability, a small amount of craft glue can be used on connections, though this will prevent disassembly.
- **LED lights not working:** Check that batteries are correctly inserted and fully charged. Verify all wiring connections are secure according to the assembly instructions.
- **Difficulty with small pieces:** Use tweezers or a small tool to handle intricate parts. Patience is key during assembly.

SPECIFICATIONS

- **Model Number:** P805h
- **Brand:** CubicFun
- **Number of Pieces:** 218
- **Assembled Dimensions (L x W x H):** 33.7" x 8.9" x 6.1" (85.5 cm x 22.5 cm x 15.5 cm)
- **Item Weight:** 1.87 pounds
- **Recommended Age:** 8 years and up
- **Power Source:** 3 x 1.5V AAA batteries (not included) for LED and music
- **Features:** LED lights (7 colors), Musical melody ('Jingle Bells'), Steam effect (cotton)

PRODUCT DIMENSIONS



Image: Visual representation of the assembled CubicFun Christmas Train 3D Puzzle with its key dimensions labeled.

WARRANTY AND SUPPORT

CubicFun products are designed for quality and enjoyment. If you encounter any issues or have questions regarding your 3D puzzle, please contact the CubicFun Customer Service Team. Our friendly professionals are always ready to assist you.

For support, please visit the official CubicFun website or refer to the contact information provided in your product packaging.