

[Manuals.plus](#) /

› [hofstein](#) /

› Hofstein Tieva Modern Black Outdoor Wall Light (Model H3014110) - E27, Max 60W Instruction Manual

hofstein H3014110

Hofstein Tieva Modern Black Outdoor Wall Light

Model: H3014110

INTRODUCTION

This instruction manual provides essential information for the safe installation, operation, and maintenance of your Hofstein Tieva Modern Black Outdoor Wall Light (Model H3014110). Please read this manual thoroughly before installation and retain it for future reference. Incorrect installation or use can lead to hazards.

IMPORTANT SAFETY INSTRUCTIONS

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with local wiring regulations. Always switch off the main power supply at the fuse box before commencing any installation, maintenance, or bulb replacement.
 - **Voltage:** This fixture operates on 230 Volts. Ensure your power supply matches this requirement.
 - **Bulb Type:** Use only E27 bulbs with a maximum wattage of 60W. Do not exceed the specified wattage to prevent overheating and damage.
 - **Outdoor Use:** This product is designed for outdoor use with an IP44 rating, providing protection against solid objects larger than 1mm and splashes of water from any direction. Ensure all seals are correctly fitted during installation to maintain this rating.
 - **Handling:** Handle glass components with care to avoid breakage.
 - **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Avoid abrasive cleaners or solvents.
-

PACKAGE CONTENTS

Please check that all components are present and undamaged before installation.

- 1 x Hofstein Tieva Outdoor Wall Light Fixture (Model H3014110)
 - Mounting hardware (screws, wall plugs)
 - Instruction Manual
 - *Note: E27 bulb is not included and must be purchased separately.*
-

SETUP AND INSTALLATION

Warning: Ensure the main power supply is switched off at the circuit breaker before beginning installation.

1. **Prepare the Installation Area:** Choose a suitable outdoor location for the wall light. Ensure the mounting surface is flat and sturdy. Consider the dimensions of the fixture for proper placement.



Image: Dimensions of the Hofstein Tieva Outdoor Wall Light. The fixture measures 20 cm in depth, 28 cm in height, and 14.5 cm in length. The mounting plate is approximately 18cm x 12cm.

2. **Mark Drilling Points:** Carefully remove the mounting bracket from the light fixture. Hold the bracket against the wall at the desired installation point and mark the drilling holes with a pencil.
3. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your wall type. Insert the provided wall plugs into the drilled holes.
4. **Secure Mounting Bracket:** Attach the mounting bracket to the wall using the provided screws. Ensure it is firmly secured.
5. **Electrical Connection:** Connect the household wiring to the terminal block on the light fixture. Ensure correct polarity (Live, Neutral, Earth) according to local electrical codes. All connections must be secure.
6. **Attach Fixture Body:** Carefully align the light fixture body with the mounting bracket and secure it using the provided screws. Ensure all seals are properly seated to maintain the IP44 rating.

7. **Install Bulb:** Insert an E27 bulb (max 60W, not included) into the lamp holder. Do not overtighten.



Image: The Hofstein Tieva Outdoor Wall Light, fully assembled and installed, demonstrating its aesthetic on an exterior wall.

8. **Restore Power:** Once installation is complete and all components are securely fastened, restore power at the circuit breaker. Test the light fixture.

OPERATING INSTRUCTIONS

Turning On/Off

The Hofstein Tieva Outdoor Wall Light is operated via your standard wall switch connected to the fixture's power supply. Flip the switch to turn the light on or off.

Bulb Replacement

Warning: Always switch off the main power supply before replacing the bulb.

1. Ensure the light is off and has cooled down completely.

2. Carefully remove the glass shade or access panel to reach the E27 lamp holder.
3. Unscrew the old E27 bulb counter-clockwise.
4. Screw in a new E27 bulb (max 60W) clockwise until snug. Do not overtighten.
5. Reattach the glass shade or access panel, ensuring it is securely fastened to maintain the IP44 rating.
6. Restore power and test the new bulb.

Dimming Functionality

This fixture supports external dimmers (not included). If you wish to use a dimming function, ensure your E27 bulb is dimmable and that a compatible external dimmer is installed by a qualified electrician.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your outdoor wall light.

- **Cleaning:** Periodically clean the fixture to remove dirt, dust, and debris. Ensure the power is off before cleaning. Use a soft, damp cloth for the metal frame and glass. Avoid harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the finish or glass.
- **Inspection:** Annually inspect the fixture for any signs of wear, damage, or loose connections. Check the integrity of the seals to maintain the IP44 rating. If any damage is found, consult a qualified electrician for repair or replacement.
- **Bulb Type:** Always use the correct E27 bulb type and wattage (max 60W) as specified.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Faulty bulb. Loose wiring connection. Faulty wall switch.	Check circuit breaker and main power supply. Replace bulb with a new, working E27 bulb (max 60W). Switch off power and check all wiring connections. Consult an electrician if unsure. Test the wall switch. Consult an electrician if faulty.
Light flickers.	Loose bulb. Incompatible dimmer (if applicable). Loose wiring.	Tighten the bulb. Ensure dimmable bulb is used with a compatible dimmer. Switch off power and check wiring connections.
Water ingress/condensation inside fixture.	Improperly sealed during installation. Damaged seals.	Switch off power. Disassemble and reassemble, ensuring all seals are correctly seated. Inspect seals for damage and replace if necessary.

If you encounter problems not listed here or if the suggested solutions do not resolve the issue, please contact customer support or a qualified electrician.

SPECIFICATIONS

Model Number	H3014110
Type	Outdoor Wall Light
Dimensions (L x W x H)	14.5 cm x 14.5 cm x 28 cm (5.7 x 5.7 x 11 inches)
Depth	20 cm (7.9 inches)
Weight	2.48 kg (5.47 lbs)
Material (Fixture)	Metal
Material (Shade)	Glass
Color (Fixture)	Black
Color (Shade)	Transparent
Bulb Socket	E27
Number of Bulbs	1
Max Wattage per Bulb	60 Watts
Bulb Included	No
Dimmable	Yes, with external dimmer (not included) and dimmable bulb
Power Supply	230 Volts
Ingress Protection (IP) Rating	IP44 (Splash-proof)
Protection Class	Class I
Style	Modern
Shape	Square / Quadrilateral
Specific Uses	Outdoor, Exterior, Facade, Terrace

WARRANTY AND SUPPORT

For information regarding warranty terms and conditions, please refer to the purchase documentation or contact your retailer. For technical support or inquiries, please visit the official Hofstein website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Hofstein Official Website: [Visit Hofstein Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08CZHH4RK>

More documents and user manuals: <https://manuals.plus/>