

[Manuals.plus](#) /

› [Homemory](#) /

› Homemory Flickering Flameless Votive Candles User Manual - Model HMNHQDZS24

Homemory HMNHQDZS24

Homemory Flickering Flameless Votive Candles User Manual

Model: HMNHQDZS24

1. INTRODUCTION

Thank you for choosing Homemory Flickering Flameless Votive Candles. These battery-operated LED tealights are designed to provide a warm, ambient glow with the realistic flickering effect of traditional candles, without the associated fire hazards. They are suitable for various indoor and outdoor decorative purposes.



Image 1.1: A collection of Homemory Flickering Flameless Votive Candles, showcasing their amber yellow glow.

2. SAFETY INFORMATION

WARNING: This product contains a button cell battery. Ingestion of a button cell or coin battery can cause severe injury or death. Keep new and used batteries out of reach of children. Seek immediate medical attention if a battery is suspected to have been swallowed or inserted inside any part of the body.

- Do not expose candles to extreme temperatures or direct sunlight for prolonged periods.
- Do not immerse candles in water. They are not waterproof.
- Ensure the battery compartment is securely closed after battery replacement.
- Dispose of used batteries responsibly according to local regulations.

3. PRODUCT FEATURES

- **Long-Lasting Battery:** Each candle includes a pre-installed CR2032 battery, providing over 200 hours of illumination.
- **Realistic Flickering Effect:** Advanced LED beads emit a bright, uniform warm yellow light with a realistic flickering flame.
- **High-Quality Material:** Constructed from polypropylene with a natural-looking ivory color when unlit.
- **Compact Size:** Each votive measures approximately 1.5" (diameter) x 1.6" (height), fitting most standard votive holders.



Image 3.1: Visual representation of the votive candle's dimensions (1.5" x 1.6") and key features like realistic appearance, long-lasting light, and childproofed battery design.

4. SETUP AND INITIAL USE

1. **Unpacking:** Carefully remove the candles from their packaging.
2. **Battery Activation:** The CR2032 battery is pre-installed. Locate the small slide switch on the bottom of each candle.
3. **Turning On:** Slide the switch to the 'ON' position to activate the candle. The LED will illuminate with a flickering effect.
4. **Turning Off:** Slide the switch to the 'OFF' position to turn off the candle.

For models that include a remote control (check your specific package contents):

- Ensure the candles are in the 'ON' position using the bottom switch.
- Remove the plastic tab from the remote control's battery compartment to activate it.
- Use the 'ON' button on the remote to turn all candles within range on.



Video 4.1: An official Homemory video demonstrating the flameless votive candles in various decorative settings, highlighting their flickering effect and ease of use.

5. OPERATING INSTRUCTIONS (WITH REMOTE CONTROL)

If your package includes a remote control, you can utilize additional features:

- **ON/OFF:** Press the 'ON' button to turn on all candles. Press 'OFF' to turn them off.
- **Timer Function:** Set the candles to automatically turn off after 2, 4, 6, or 8 hours. The timer will reset daily.
- **Mode:** Switch between 'Candle' (flickering light) and 'Light' (steady glow) modes.
- **Brightness:** Adjust the brightness level using the '+' and '-' buttons.



Video 5.1: An official Homemory video showcasing the flickering flameless votive candles in various decorative arrangements, demonstrating their ambient light.

6. MAINTENANCE

- **Cleaning:** Wipe the candles with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Replacement:** When the light dims significantly or stops working, it's time to replace the CR2032 battery.
 - a. Locate the battery compartment on the bottom of the candle.
 - b. Use a small screwdriver or coin to open the compartment cover.
 - c. Remove the old CR2032 battery and insert a new one, ensuring correct polarity (+/-).
 - d. Securely close the battery compartment.

7. TROUBLESHOOTING

- **Candle does not light up:**
 - Ensure the slide switch on the bottom is in the 'ON' position.
 - Check if the battery is correctly installed with the correct polarity.
 - Replace the CR2032 battery if it is depleted.
- **Remote control is not working:**
 - Ensure the plastic tab has been removed from the remote's battery compartment.
 - Check if the candles' bottom switches are in the 'ON' position.
 - Replace the remote control's battery if necessary.

8. SPECIFICATIONS

Feature	Detail
Brand	Homemory

Model Number	HMNHQDZS24
Product Dimensions	1.5"D x 1.5"W x 1.6"H
Item Weight	11.3 ounces (for 24 pack)
Material	Polypropylene
Light Source Type	LED
Light Color	Warm Yellow
Power Source	Battery Powered (CR2032)
Battery Life	200+ hours
Control Method	Slide Switch, Remote Control (if included)
Indoor/Outdoor Usage	Outdoor (Not Water Resistant)

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Homemory customer service directly. Contact details can typically be found on the product packaging or the official Homemory website.