

ELECDER D19

ELECDER D19 True Wireless Earbuds User Manual

Model: D19 | Brand: ELECDER

1. INTRODUCTION

The ELECDER D19 True Wireless Earbuds are designed to provide a superior audio experience with advanced features such as Bluetooth 5.0 connectivity, noise cancellation, and IPX7 waterproofing. This manual provides comprehensive instructions for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity.

Key Features:

- Bluetooth 5.0:** Fast and stable wireless transmission with CVC8.0 noise cancellation for clear calls.
- Premium Hi-Fi Stereo Audio:** APTX audio for lossless transmission, delivering immersive sound with crystal clarity and deep bass.
- IPX7 Waterproof:** Resistant to sweat, water, and rain, ideal for workouts and outdoor activities.
- Ergonomic Design:** Lightweight (5g per earbud) with flexible silicone ear-fins and S/M/L ear caps for a secure and comfortable fit.
- Quick Pairing Technology:** Automatic power-on and pairing upon removal from the charging case.
- USB Quick Charge & Wireless Charging:** Up to 4.5 hours of music on a single charge, with an additional 18 hours from the charging case, supporting both USB and wireless charging.

2. PRODUCT OVERVIEW



Figure 2.1: ELECDER D19 True Wireless Earbuds in their charging case. The earbuds are black, sleek, and designed for in-ear use, while the compact charging case is also black with a smooth finish.

What's in the Box:

- ELECDER D19 True Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Ear Tips (S/M/L sizes)
- User Manual (this document)

3. SETUP GUIDE

3.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The charging case supports both USB cable charging and wireless charging.

1. **USB Charging:** Connect the provided USB cable to the charging port on the case and plug the other end into a

USB power source (e.g., computer, wall adapter). The indicator light on the case will show charging status.

2. **Wireless Charging:** Place the charging case on a compatible wireless charging pad. The indicator light will flash to confirm charging.



Figure 3.1: The ELECDER D19 charging case being charged wirelessly on a charging pad, also showing the Micro USB port for wired charging. This image highlights the dual charging capabilities of the case.

A full charge for the earbuds provides approximately 4.5 hours of music playback, and the charging case provides an additional 18 hours of battery life.

3.2 Pairing with Your Device

The ELECDER D19 earbuds feature quick pairing technology for seamless connection.

1. **Step 1:** Open the charging case and take out both earbuds. They will automatically power on and pair with each other.
2. **Step 2:** On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.

3. **Step 3:** Search for available devices and select "Elecder D19" from the list to connect.

Full-automatic Pairing

Deliver the easiest way to start the music



01.
Take out D19 from the charging case



02.
Select D19 from Bluetooth list

Figure 3.2: A visual guide demonstrating the automatic pairing process. The image shows the earbuds being taken out of the case and then the "Elecder D19" option appearing in a smartphone's Bluetooth settings for connection.

After the initial pairing, the earbuds will automatically connect to the last paired device when taken out of the charging case.

Stable Connection

Support smart phones, tables, Bluetooth digital devices



Figure 3.3: An illustration showing the stable Bluetooth connection between the ELECDER D19 earbuds and various smart devices, including smartphones and tablets.

4. OPERATING INSTRUCTIONS

4.1 Wearing the Earbuds

For optimal sound quality and comfort, choose the ear tips that best fit your ears. The earbuds come with S, M, and L sizes. Insert the earbuds into your ears and gently rotate them to find a secure and comfortable fit. The ergonomic ear-fin design helps ensure stability during movement.



Figure 4.1: A person wearing the ELECDER D19 earbuds during a workout, demonstrating the secure and comfortable fit provided by the ergonomic design and customizable ear tips.

4.2 Media Control

The ELECDER D19 earbuds feature physical buttons for media control. Specific button functions may vary slightly based on the device and operating system, but common controls include:

- **Play/Pause:** Single press on either earbud.
- **Next Track:** Double press on the right earbud.
- **Previous Track:** Double press on the left earbud.
- **Volume Up:** Triple press on the right earbud.
- **Volume Down:** Triple press on the left earbud.

4.3 Call Management

Manage your calls directly from the earbuds:

- **Answer/End Call:** Single press on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds (e.g., Siri, Google Assistant).

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your ELECDER D19 earbuds.

5.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Use a cotton swab or small brush to gently clean the charging contacts on both the earbuds and the case.
- Avoid using abrasive materials, alcohol, or chemical cleaners.

5.2 Water Resistance (IPX7)

The ELECDER D19 earbuds are IPX7 waterproof, meaning they can withstand submersion in up to 1 meter of water for 30 minutes. This makes them suitable for protection against sweat, rain, and accidental splashes.



Figure 5.1: The ELECDER D19 earbuds shown with water droplets, illustrating their IPX7 waterproof rating, which protects them from sweat, rain, and splashes.

Note: The charging case is not waterproof. Ensure earbuds are dry before placing them back into the charging case.

5.3 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store the case in a cool, dry place away from extreme temperatures and direct sunlight.

6. TROUBLESHOOTING

If you encounter issues with your ELECDER D19 earbuds, refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Earbuds not pairing with device.	Bluetooth is off on device; earbuds not in pairing mode; previously paired device interfering.	Ensure Bluetooth is enabled. Place earbuds back in case, then take them out to re-enter pairing mode. Forget "Elecder D19" from your device's Bluetooth list and re-pair.
Only one earbud working.	Earbuds not paired with each other; low battery on one earbud.	Place both earbuds back into the charging case, close the lid, wait a few seconds, then open and take them out again. Ensure both earbuds are charged.
No sound or low volume.	Device volume too low; ear tips not properly sealed; debris in earbud nozzle.	Increase volume on your device. Adjust earbud position or try different sized ear tips for a better seal. Clean earbud nozzles.
Charging case not charging.	Faulty cable/charger; improper placement on wireless charger.	Try a different USB cable and power adapter. Ensure the case is correctly aligned on the wireless charging pad.
Bluetooth connection unstable.	Interference; distance from device; low earbud battery.	Reduce distance between earbuds and device. Avoid environments with strong Wi-Fi or other Bluetooth signals. Ensure earbuds are fully charged.

7. SPECIFICATIONS

Detailed technical specifications for the ELECDER D19 True Wireless Earbuds:

Feature	Detail
Model Name	ELECDER D19
Connectivity Technology	Wireless (Bluetooth 5.0)
Bluetooth Range	33 Feet
Ear Placement	In Ear
Form Factor	In Ear
Noise Control	Active Noise Cancellation (CVC8.0)
Microphone	Included
Water Resistance Level	IPX7 Waterproof
Battery Life (Earbuds)	Up to 4.5 hours (music) / 4 hours (calling)
Charging Case Additional Playtime	18 hours
Charging Time	Approximately 2 Hours
Charging Interface	Micro USB, Wireless Charging
Item Weight	1.92 ounces (total) / 5g (each earbud)
Product Dimensions	3.89 x 3.89 x 1.65 inches
Compatible Devices	iOS and Android Smartphones

Feature	Detail
Material	Silicone (ear tips)
Color	Black




Figure 7.1: An infographic detailing the battery life of the ELECDER D19 earbuds and charging case, showing 4 hours for calls, 4.5 hours for music, and a total of 18 hours with the 500mAh charging case.

8. WARRANTY AND SUPPORT

ELECDER products are manufactured to high quality standards. For information regarding warranty coverage, technical support, or service inquiries, please refer to the contact information provided with your product packaging or visit the official ELECDER website.

For further assistance, you may also contact the retailer where you purchased the product.

Documents - ELECDER – D19

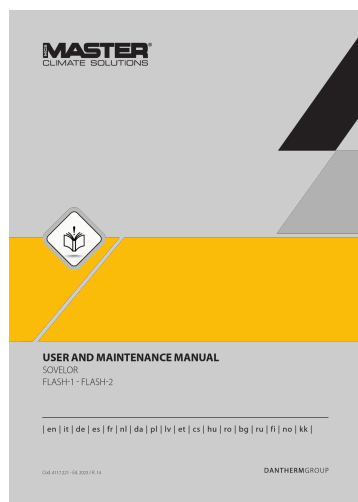

[\[pdf\]](#) User Manual Decleration of Conformity

Master Sovelor FLASH 1 2 user manual 4117 221 Multipanne chauffage SOVELOR Autres chauffagesMaster Multiwww mentreparer doc 52176 Multi |||

USER AND MAINTENANCE MANUAL SOVELOR FLASH-1 - FLASH-2 en it de es fr nl da pl lv ... DU PANNEAU DE COMMANDE CONTROL PANEL LABEL 45 4117.058 LED LED 46 4117.093 JOINT CAOUTCHOUC **D19** MM GASKET 47 4117.797 KIT FILS DE PANNEAU DE COMMANDE CONTROL PANEL WIRES KIT 48 4117.409... lang:af **score:10** filesize: 29.41 M page_count: 156 document date: 2023-08-30