

[Manuals.plus](#) /

› [Faber](#) /

› Faber 12 Place Dishwasher FFSD6PR12S Neo User Manual

Faber FFSD6PR12S Neo

Faber 12 Place Dishwasher FFSD6PR12S Neo User Manual

Model: FFSD6PR12S Neo

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Faber 12 Place Dishwasher, model FFSD6PR12S Neo. Please read these instructions carefully before using the appliance and retain them for future reference.

The Faber FFSD6PR12S Neo is designed for household use, offering 12 place settings and 6 wash programs to accommodate various dishwashing needs. Its features include adjustable and foldable racks, salt and rinse aid indicators, and an Aqua Stop safety system.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for domestic use only.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Sharp items should be loaded with points down to prevent injury.
- The Aqua Stop feature helps prevent water leakage, but regular inspection is recommended.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended to have the appliance installed by a qualified technician.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage incurred during transit. The included components are: 1 Dishwasher unit, Inlet pipe, Outlet pipe, and this User Manual.

3.2 Positioning

The Faber FFSD6PR12S Neo is a freestanding dishwasher. Place it on a level, stable surface. Ensure there is adequate space for opening the door and for water and electrical connections.



Image: Dishwasher dimensions (85H x 60W x 60D cm) shown next to a person for scale.

3.3 Water Connection

Connect the inlet pipe to a cold water supply. Ensure the outlet pipe is securely connected to a drain. Refer to the diagrams below for typical connections.

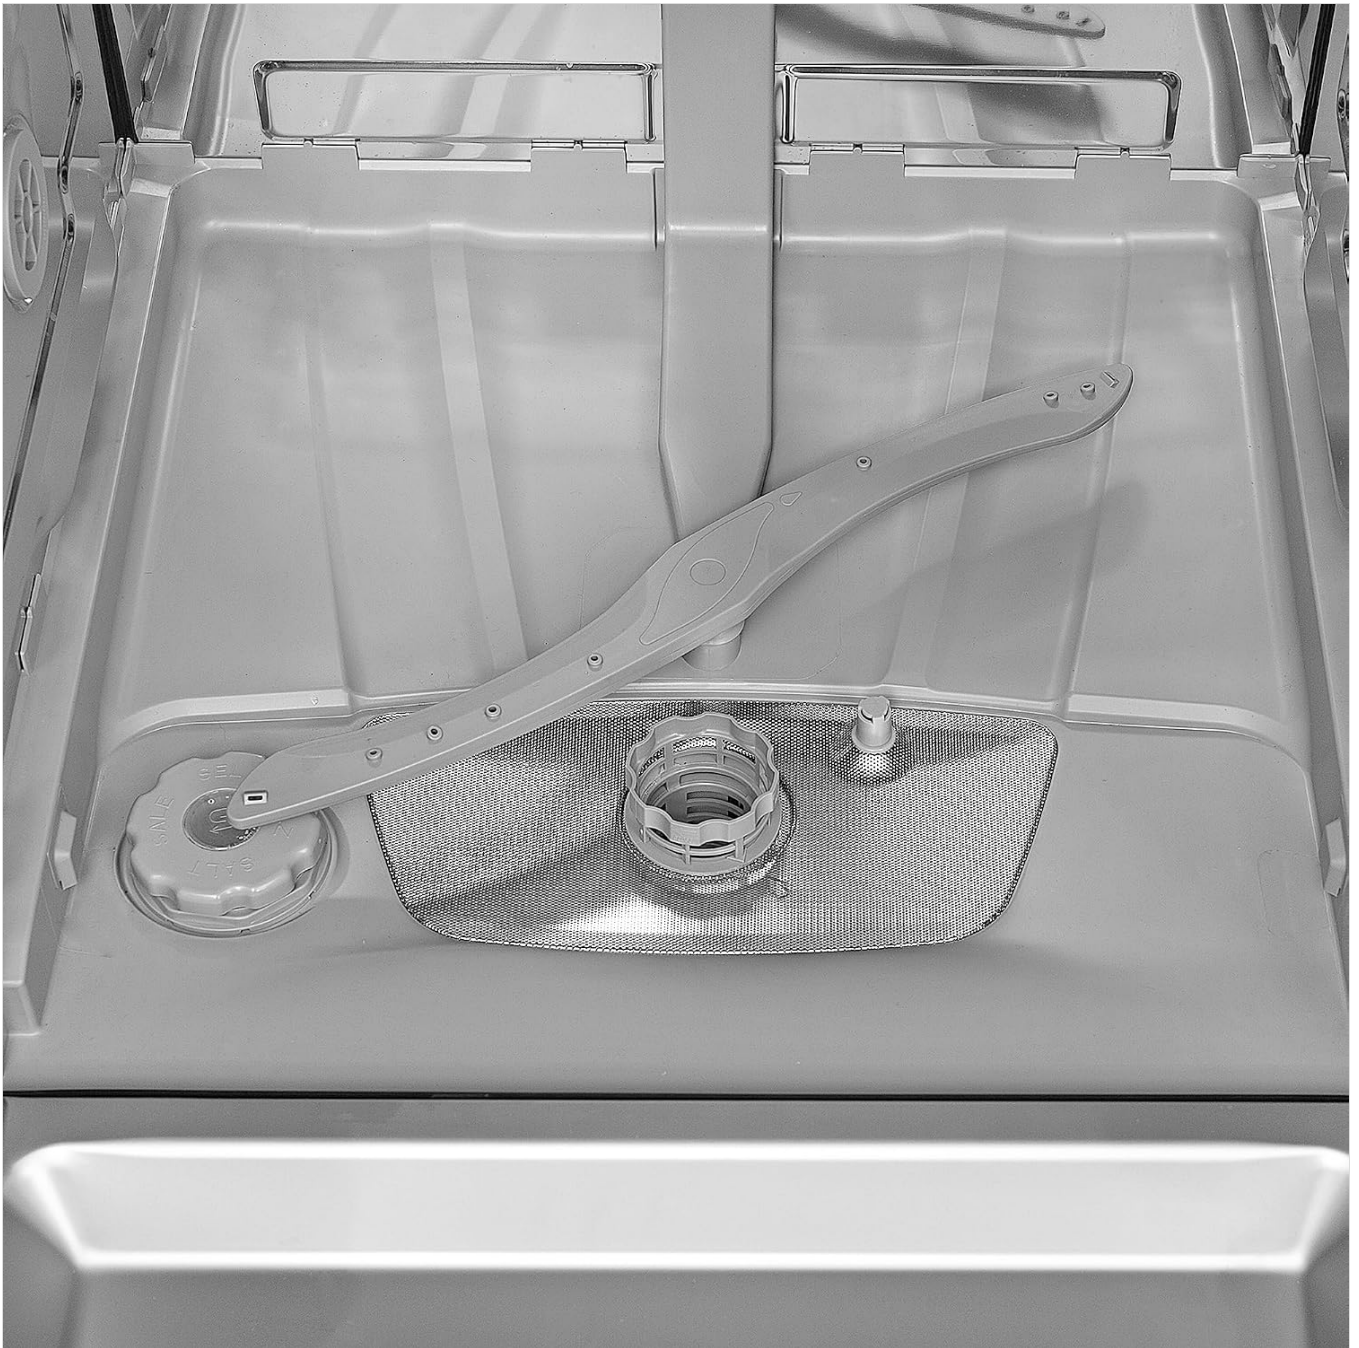 


Image: Rear view of the dishwasher with water inlet and outlet pipes connected.

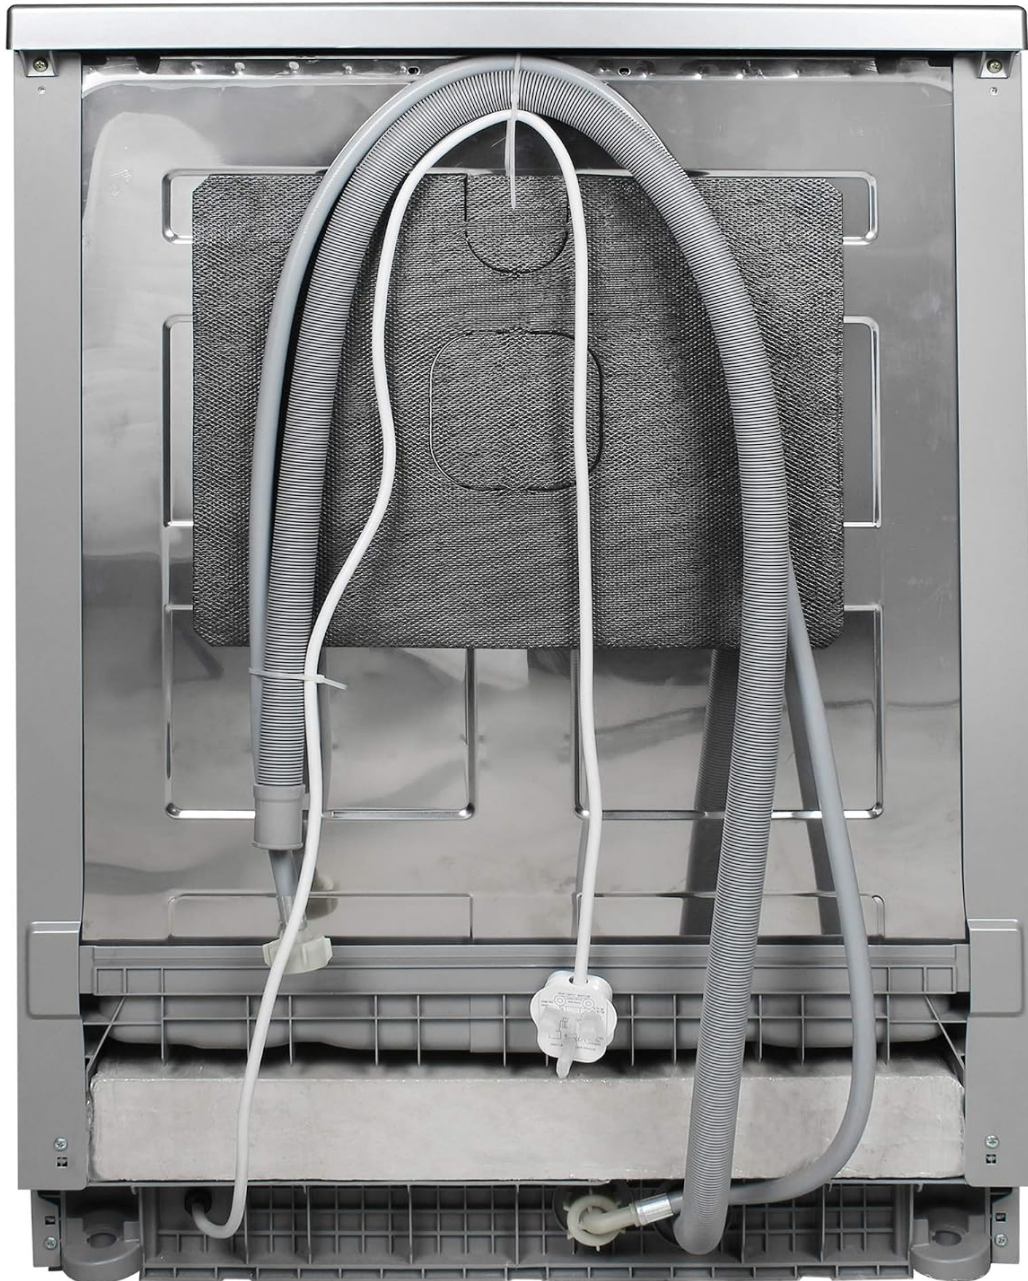 


Image: Detailed view of the water and power connections at the rear of the dishwasher.

3.4 Electrical Connection

Connect the dishwasher to a grounded electrical outlet (220 Volts). Do not use extension cords or adapters.

3.5 Initial Fill (Salt and Rinse Aid)

Before first use, fill the salt dispenser with dishwasher salt and the rinse aid dispenser with rinse aid. The dishwasher features indicators for both to alert you when refills are needed.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and loading procedures for optimal cleaning results.

4.1 Control Panel Overview

The dishwasher features an LED display and semi-integrated controls for program selection and monitoring.



Image: Close-up view of the dishwasher's control panel with various function buttons and LED display.

4.2 Loading the Dishwasher

The dishwasher has a capacity of 12 place settings. Utilize the height-adjustable upper rack and foldable racks to optimize space for various dish sizes and shapes.

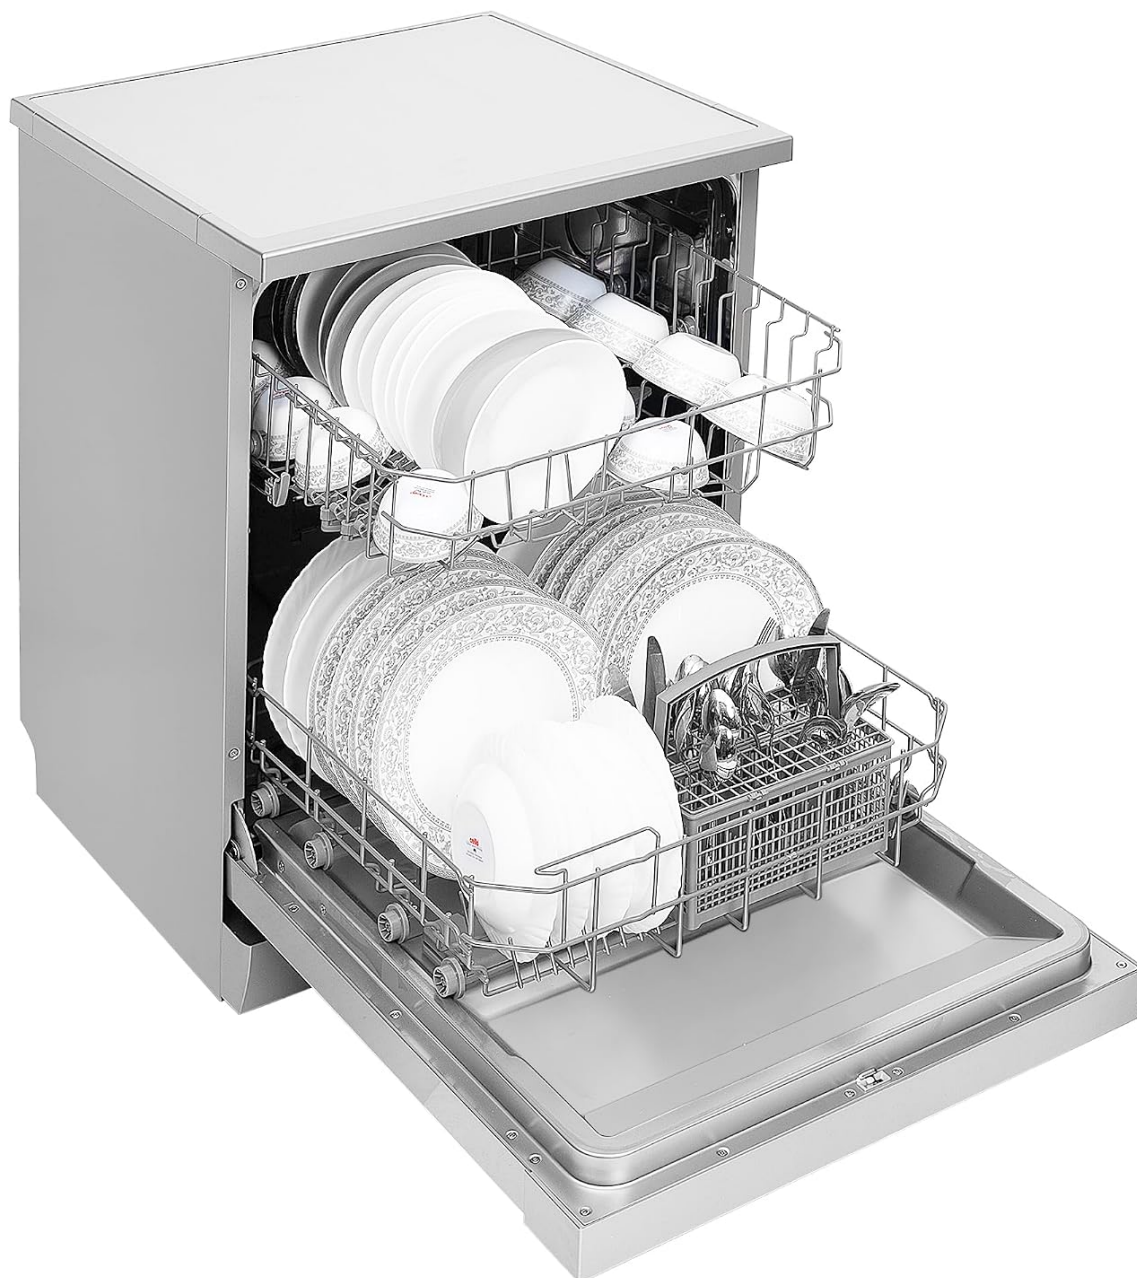 


Image: Interior view of the dishwasher with both upper and lower racks filled with plates, bowls, and cutlery.

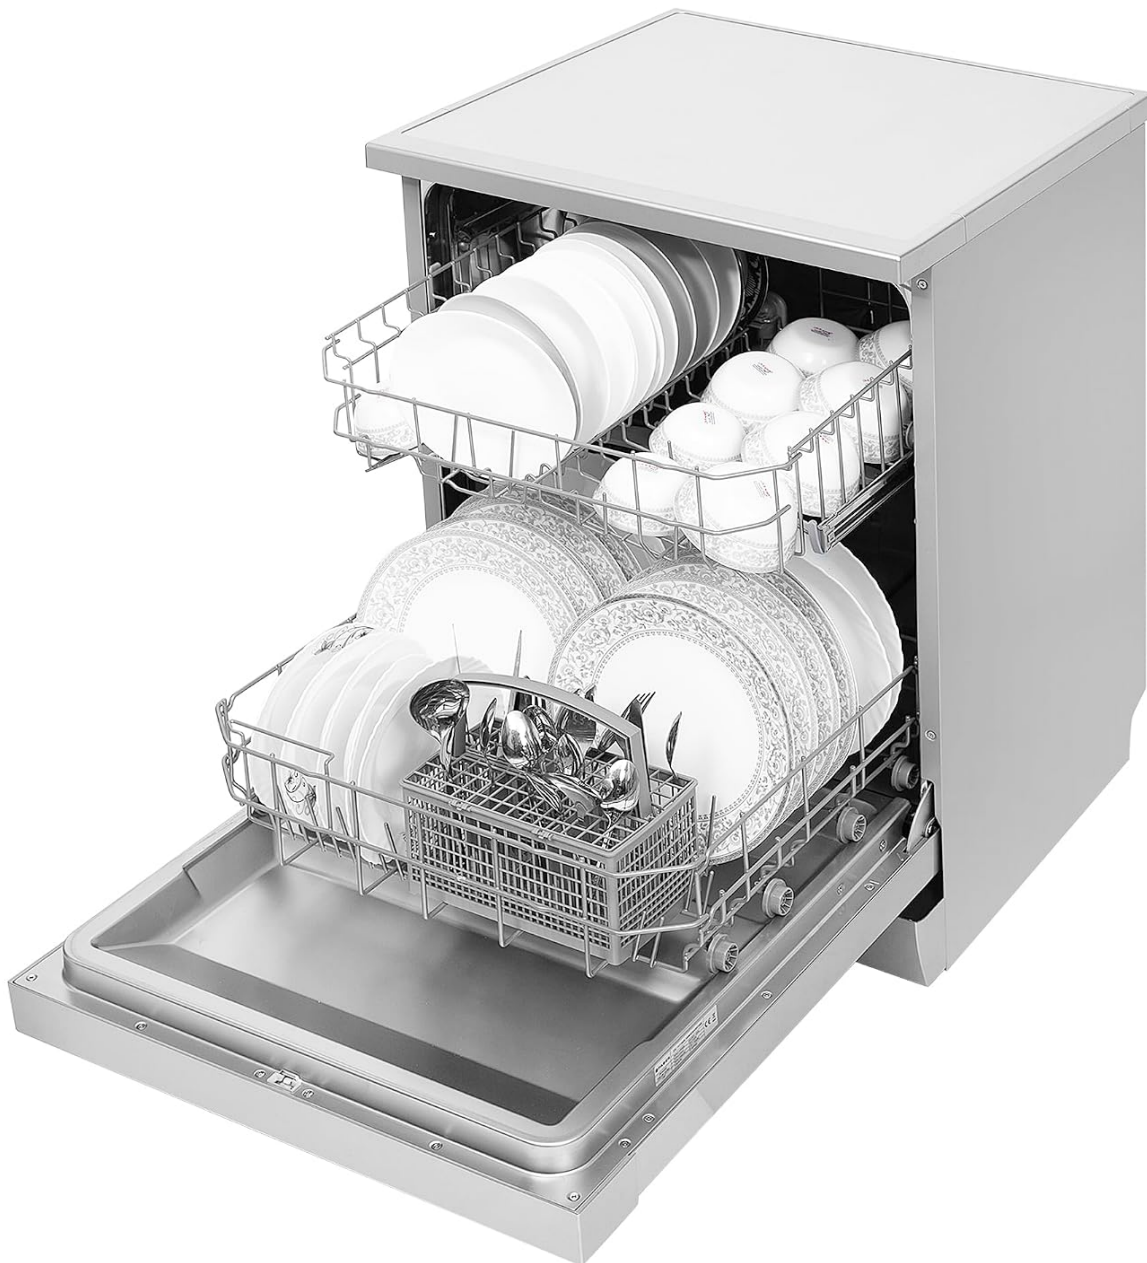 


Image: Another perspective of the dishwasher interior, highlighting the arrangement of loaded dishes and cutlery.

4.3 Adding Detergent

Add the appropriate amount of dishwasher detergent to the dispenser before starting a wash cycle. Refer to the detergent manufacturer's instructions for dosage.

4.4 Selecting a Wash Program

The Faber FFSD6PR12S Neo offers 6 wash programs:

- **Normal:** Suitable for everyday cleaning of normally soiled dishes.
- **Eco:** An energy and water-saving program for normally soiled dishes.
- **90 Minutes:** A quicker wash cycle for moderately soiled items.
- **Glass:** Gentle cleaning for delicate glassware.
- **Rapid:** A fast wash for lightly soiled dishes that do not require drying.
- **Intensive:** Powerful cleaning for heavily soiled pots, pans, and stubborn food residues.

Select the desired program using the control panel and press the start button.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

5.1 Cleaning the Filters

The dishwasher's filter system should be cleaned regularly to prevent blockages and ensure effective washing. Refer to the diagram for filter location.



Image: Detailed view of the dishwasher's bottom interior, showing the main filter and spray arm.

5.2 Refilling Salt and Rinse Aid

Monitor the salt and rinse aid indicators on the control panel. Refill these compartments as needed to ensure proper cleaning and drying performance.

5.3 Exterior and Interior Cleaning

Wipe the exterior with a damp cloth. Clean the interior periodically to remove any food debris or residue. Do not use abrasive cleaners.

6. TROUBLESHOOTING

Before contacting service, review the following common issues and their potential solutions.

- **Dishes not clean:** Check filter for blockages, ensure spray arms are not obstructed, verify correct detergent dosage, select a more intensive wash program.
- **Water remaining in dishwasher:** Check drain hose for kinks or blockages, clean the filter system.
- **Dishwasher not starting:** Ensure the door is fully closed, check power supply, verify a program is selected.
- **Excessive noise:** Ensure dishes are loaded correctly and not obstructing spray arms, check for foreign objects in the pump area.
- **Salt/Rinse Aid indicator remains on after refill:** Ensure the compartment is filled correctly; it may take a short period for the sensor to reset.

If the problem persists after attempting these solutions, contact customer support.

7. SPECIFICATIONS

Key technical specifications for the Faber FFSD6PR12S Neo Dishwasher.

Feature	Specification
Model Name	FFSD 6PR 12S Neo
Brand	Faber
Capacity	12 Place Settings
Wash Programs	6 (Normal, Eco, 90 Minutes, Glass, Rapid, Intensive)
Installation Type	Freestanding
Product Dimensions (LxWxH)	60D x 60W x 85H Centimeters
Item Weight	20 kg
Material	Stainless Steel
Noise Level	49 Decibels
Voltage	220 Volts
Energy Consumption	1.0–1.6 kWh per cycle
Water Consumption	10–17 L per cycle
Energy Rating	A++ (Energy) / A (Cleaning) / A (Drying)
Controls Type	Semi Integrated
Display Type	LED

Feature	Specification
Special Features	6 washing programs, A++/A/A ratings, Inox Finish

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your Faber FFSD6PR12S Neo Dishwasher comes with:

- **2-Year Comprehensive Warranty** on the product.
- **5-Year Warranty** on the inner cavity against rust.

Please retain your purchase receipt as proof of purchase for warranty claims.

8.2 Customer Support

For any queries, technical assistance, or service requests, please contact Faber customer support:

Faber Customer Care: 1800-209-3484

When contacting support, please have your model number (FFSD6PR12S Neo) and purchase details ready.

© Faber. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08CZN9L18>

More documents and user manuals: <https://manuals.plus/>