



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for LG Audio Systems

**Easytry123 COV31069401, AKB36086205, MCT703, MCS703F, MCS703W, COV30849814, CM2520, XA-14, XA-16, XA63, XA66, XAS66F, XA-S16F**

# Easytry123 Replacement Remote Control User Manual

FOR LG MICRO MINI HI-FI AUDIO SYSTEMS

## 1. Introduction

---

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various LG Micro Mini Hi-fi Audio Systems. This infrared remote offers convenient control over your compatible audio system. Please refer to the list of compatible models to ensure this remote meets your needs.

**Compatible LG Audio System Models:** COV31069401, AKB36086205, MCT703, MCS703F, MCS703W, COV30849814, CM2520, XA-14, XA-16, XA63, XA66, XAS66F, XA-S16F.



Figure 1: Front view of the Easytry123 replacement remote control.

## 2. Important Notes

- This is a replacement remote control. It may not support all functions of your original LG remote.
- Verify that your audio system's model number is listed in the compatible models section to ensure functionality.
- Batteries are **not included** with this remote control.

## 3. Setup

To begin using your remote control, you must first install the batteries.

1. **Open the Battery Compartment:** Locate the battery compartment cover on the back of the remote control. Slide the cover downwards or press the latch (if present) and lift to remove it.
2. **Insert Batteries:** Insert two (2) AAA batteries into the compartment. Ensure that the positive (+) and negative (-) terminals of the batteries match the polarity indicators inside the compartment. Incorrect insertion can prevent the remote from functioning.
3. **Close the Battery Compartment:** Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Back of the remote control with the battery compartment open, illustrating correct AAA battery insertion.

## 4. Operating Instructions

This remote control operates using infrared (IR) technology. For optimal performance, ensure a clear line of sight between the remote control and your LG audio system.

1. **Point and Operate:** Aim the front of the remote control directly at the IR receiver on your LG audio system.
2. **Button Functions:** Press the desired button for the corresponding function (e.g., Power, Volume Up/Down, Track Skip, Play/Pause). The ergonomic design ensures comfortable handling during use.
3. **Functionality Note:** As a replacement remote, some advanced or specific functions present on your original LG remote may not be available or may operate differently. Refer to your LG audio system's original manual for specific function details.

## 5. Maintenance

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface and internal components.
- **Battery Care:** If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage, which can cause damage to the remote.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.

## 6. Troubleshooting

If you encounter issues with your remote control, try the following steps:

- **Remote Not Responding:**
  - Check if the batteries are inserted correctly, observing the polarity (+/-) markings.
  - Replace the batteries with new AAA batteries.
  - Ensure there is a clear line of sight between the remote and the audio system's IR receiver. Obstructions can block the signal.
  - Confirm that the audio system is powered on.
- **Certain Functions Not Working:**
  - Remember that this is a replacement remote. It may not support all functions of your original LG remote.
  - Verify that your audio system model is listed as compatible.

## 7. Specifications

<b>Brand</b>	Easytry123
<b>Compatible Devices</b>	LG Micro Mini Hi-fi Audio Systems (Models: COV31069401, AKB36086205, MCT703, MCS703F, MCS703W, COV30849814, CM2520, XA-14, XA-16, XA63, XA66, XAS66F, XA-S16F)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Controller Type</b>	Button Control
<b>Special Feature</b>	Ergonomic design
<b>Batteries Required</b>	2 x AAA (not included)

## 8. Warranty and Support

For warranty information or technical support regarding your Easytry123 replacement remote control, please contact the seller directly through your purchase platform. Specific warranty terms and support procedures are typically provided by the retailer or manufacturer at the time of purchase.