



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Voice Remote Control for Samsung TVs (BN59-01311F and compatible models)

**Easytry123 Easytry10451**

# Easytry123 Replacement Voice Remote Control User Manual

Model: Easytry10451

## INTRODUCTION

---

This manual provides instructions for the Easytry123 Replacement Voice Remote Control, designed for use with various Samsung 4K UHD HDTV TV models, including BN59-01311F, QA65Q900RBW, UE55NU7655UXXC, UE55NU8042TXXH, UE55NU8049TXZG, UE55NU8059TXZG, and UE55NU8075TXXC. Please note that as a replacement item, some advanced functions, particularly voice control, may require specific TV settings or may not be fully compatible with all original features. This remote primarily utilizes infrared (IR) technology for basic TV control.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AA alkaline batteries (not included). Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Remote control with the back cover removed, illustrating the battery compartment.

## 2. Initial Use

Once batteries are installed, point the remote control directly at your Samsung TV. The remote should function immediately for basic controls such as power, volume, and channel selection. For voice control features, if supported by your TV and this replacement remote, refer to your TV's user manual for specific pairing instructions, as this may vary by TV model.

## OPERATING INSTRUCTIONS

---

This remote control provides standard functions for navigating your Samsung TV. Button layout and specific functions may vary slightly from your original remote.



Image: Front view of the remote control with button layout.

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the TV's volume level.
- **Channel Up/Down:** Changes TV channels.
- **Navigation Pad (Up/Down/Left/Right/Enter):** Used to navigate menus and select options on the screen.
- **Back/Exit Button:** Returns to the previous screen or exits a menu.
- **Home/Smart Hub Button:** Accesses the TV's main menu or Smart Hub.
- **Voice Button:** Activates voice command features (functionality may vary).
- **Number Pad:** Direct channel input (if available on your specific remote model).

## MAINTENANCE

---

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

## TROUBLESHOOTING

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with fresh AA alkaline batteries.
  - Ensure there are no obstructions between the remote control and the TV's IR receiver.
  - Make sure you are within the effective range and pointing the remote directly at the TV.
- **Certain buttons not working:**
  - As a replacement remote, some advanced functions or specific buttons may not be fully compatible with all TV models or may require specific TV settings.
  - Verify that your TV model is listed as compatible.
- **Voice control not working:**
  - Voice functionality often requires pairing the remote with the TV via Bluetooth. This remote primarily uses IR. If your original remote used Bluetooth for voice, this replacement may not support it or may require specific pairing steps outlined in your TV's manual.
  - Ensure your TV supports voice control with a replacement remote.

## SPECIFICATIONS

<b>Brand</b>	Easytry123
<b>Model Number</b>	Easytry10451
<b>Compatible Devices</b>	Samsung 4K UHD HDTV TVs (BN59-01311F, QA65Q900RBW, UE55NU7655UXXC, UE55NU8042TXXH, UE55NU8049TXZG, UE55NU8059TXZG, UE55NU8075TXXC)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Controller Type</b>	Button Control
<b>Special Feature</b>	Ergonomic design
<b>Batteries Required</b>	2 AA batteries
<b>Battery Type</b>	Alkaline

## WARRANTY AND SUPPORT

## **Warranty Information**

This product comes with a 90-day quality warranty and hassle-free return policy. Please retain your proof of purchase for any warranty claims.

## **Customer Support**

For further assistance or troubleshooting not covered in this manual, please contact the seller directly through the platform where the purchase was made. Provide your order details and a clear description of the issue for prompt support.