

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CableWholesale](#) /
- › [CableWholesale Gaming RGB LED USB Keyboard \(Model 5012-80107\) Instruction Manual](#)

CableWholesale 5012-80107

CableWholesale Gaming RGB LED USB Keyboard (Model 5012-80107) Instruction Manual

Your guide to setup, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the CableWholesale Gaming RGB LED USB Keyboard. This 104-key keyboard is designed for an enhanced computing experience, featuring vibrant RGB backlighting and a comfortable design. This manual provides essential information for setting up, operating, and maintaining your new keyboard.



Image: Top-down view of the CableWholesale Gaming RGB LED USB Keyboard, showcasing its full 104-key layout and vibrant rainbow backlighting.

2. SETUP

The CableWholesale Gaming RGB LED USB Keyboard is a plug-and-play device, requiring no additional drivers for basic functionality.

2.1 Connecting the Keyboard

1. Locate an available USB port on your computer (desktop, laptop, etc.).
2. Insert the USB connector of the keyboard cable into the USB port.
3. The operating system will automatically detect and install the necessary drivers. The RGB lighting will illuminate upon

successful connection.



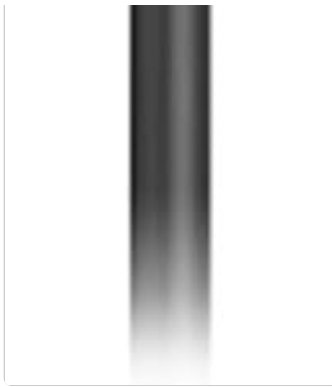


Image: Close-up of the USB connector, ready to be plugged into a computer.

3. OPERATING INSTRUCTIONS

3.1 RGB Backlighting Control

- **Toggle Lighting On/Off:** Press the **FN** key + **Light Bulb Icon Key** (located near the right Ctrl key) to turn the RGB backlighting on or off.
- **Switch Lighting Modes:** Press the **FN** key + **Light Bulb Icon Key** repeatedly to cycle through different lighting modes (e.g., steady-on, breathing).
- **Adjust Brightness:** Press the **FN** key + **Page Up** to increase brightness, or **FN** key + **Page Down** to decrease brightness.



Image: Diagram showing FN + Light Bulb key for toggling modes and FN + Page Up/Down for brightness adjustment.

3.2 Multimedia Shortcuts

Utilize the FN key in combination with the F-keys for quick access to multimedia functions:

- **FN + F1:** Open Media Player
- **FN + F2:** Volume Down
- **FN + F3:** Volume Up
- **FN + F4:** Mute
- **FN + F5:** Stop Playback
- **FN + F6:** Previous Track
- **FN + F7:** Play/Pause
- **FN + F8:** Next Track
- **FN + F9:** Open Email
- **FN + F10:** Open Web Browser

- **FN + F11:** Lock Windows Key
- **FN + F12:** Open Calculator



Image: Visual guide to the multimedia function keys (FN + F1-F12).

3.3 WASD and Arrow Key Swap

For gaming convenience, you can swap the functionality of the WASD keys with the Arrow keys. Press **FN + W** to toggle this function. Repeat the combination to revert to standard WASD functionality.

Your browser does not support the video tag.

Video: Demonstration of the keyboard's RGB lighting and key responsiveness, including the WASD key highlight.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your keyboard.

- **Cleaning:** Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface of the keyboard. Avoid harsh chemicals or abrasive materials.
- **Dust Removal:** Use compressed air to remove dust and debris from between the keys.
- **Spill Prevention:** While the keyboard may offer some spill resistance, it is recommended to keep liquids away from the device to prevent damage.

5. TROUBLESHOOTING

If you encounter issues with your keyboard, refer to the following common solutions:

| Issue | Solution |
|--------------------------|--|
| Keyboard not responding | <ul style="list-style-type: none"> • Ensure the USB cable is securely connected to both the keyboard and the computer. • Try connecting the keyboard to a different USB port. • Restart your computer. |
| RGB lighting not working | <ul style="list-style-type: none"> • Press FN + Light Bulb Icon Key to ensure the lighting is toggled on. • Adjust brightness using FN + Page Up/Down. • Ensure the keyboard is properly connected to a powered USB port. |

| Issue | Solution |
|---------------------------|--|
| Specific keys not working | <ul style="list-style-type: none">• Check for any physical obstructions or debris under the keycap.• If WASD keys are not working as expected, press FN + W to toggle the WASD/Arrow key swap. |

6. SPECIFICATIONS

- **Brand:** CableWholesale
- **Model Number:** 5012-80107
- **Connectivity Technology:** USB (Wired)
- **Keyboard Description:** Gaming
- **Number of Keys:** 104
- **Special Feature:** Backlit (RGB)
- **Color:** Black
- **Compatible Devices:** Laptop, Personal Computer
- **Item Weight:** 0.01 ounces
- **Package Dimensions:** 15.75 x 7.87 x 3.94 inches
- **Included Components:** USB Cable

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact CableWholesale customer service directly. Keep your purchase receipt for any warranty claims.