

Outsunny 84C-117CF

Outsunny 10' x 20' Pop Up Canopy Tent (Model 84C-117CF) Instruction Manual

Brand: Outsunny

IMPORTANT SAFETY INFORMATION

WARNING: This canopy tent is not designed to be left up during adverse or inclement weather conditions, including rain, snow, sleet, and hail. Added weight from precipitation can cause the tent to collapse, leading to potential damage or injury.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- Pop-Up Frame (Pre-assembled)
- Canopy Top Fabric (Silver-coated Oxford fabric)
- 4 Sidewalls (with windows)
- Carrying Bag
- Ground Stakes
- Guy Ropes

SETUP INSTRUCTIONS

This pop-up canopy tent is designed for quick assembly. It is recommended that 2-4 people assist with the setup process to optimize time and ensure proper installation.

1. **Unpack the Frame:** Remove the folded frame from the carrying bag. Place it in the desired setup location.
2. **Partially Expand the Frame:** With two people on opposite sides, gently pull the frame outwards

until it is partially expanded.

3. **Attach the Canopy Top:** Drape the canopy top fabric over the partially expanded frame. Secure it using the "single touch straps" or Velcro attachments. Ensure the canopy is centered and evenly distributed.
4. **Fully Expand and Lock the Frame:** Continue expanding the frame until it is fully open. Push up on the central hub or corner mechanisms until they click into place, locking the frame.
5. **Extend the Legs:** Extend each leg to the desired height. Press the red button or lever on each leg to release the locking mechanism, extend, and then re-engage the lock. The tent features a three-level height adjustment.
6. **Attach Sidewalls (Optional):** If desired, attach the four sidewalls using the provided Velcro or hook-and-loop fasteners. The sidewalls feature windows for visibility.
7. **Secure the Tent:** For outdoor use, always secure the tent using the provided ground stakes and guy ropes. Insert stakes into soft ground surfaces and attach ropes to the tent frame, pulling taut and securing to the stakes. For hard surfaces like concrete, use alternative weights (not included) on each leg.



Figure 1: Pop-Up Design Overview. This image illustrates the sequential steps of setting up the canopy tent, starting from the folded frame, adding the canopy, opening the frame, and finally attaching the sidewalls.



THREE-LEVEL HEIGHT

Raise or lower the height of the entire canopy

Figure 2: Three-Level Height Adjustment. A hand is shown pressing a red button on one of the tent's legs, indicating the mechanism for raising or lowering the canopy's height.

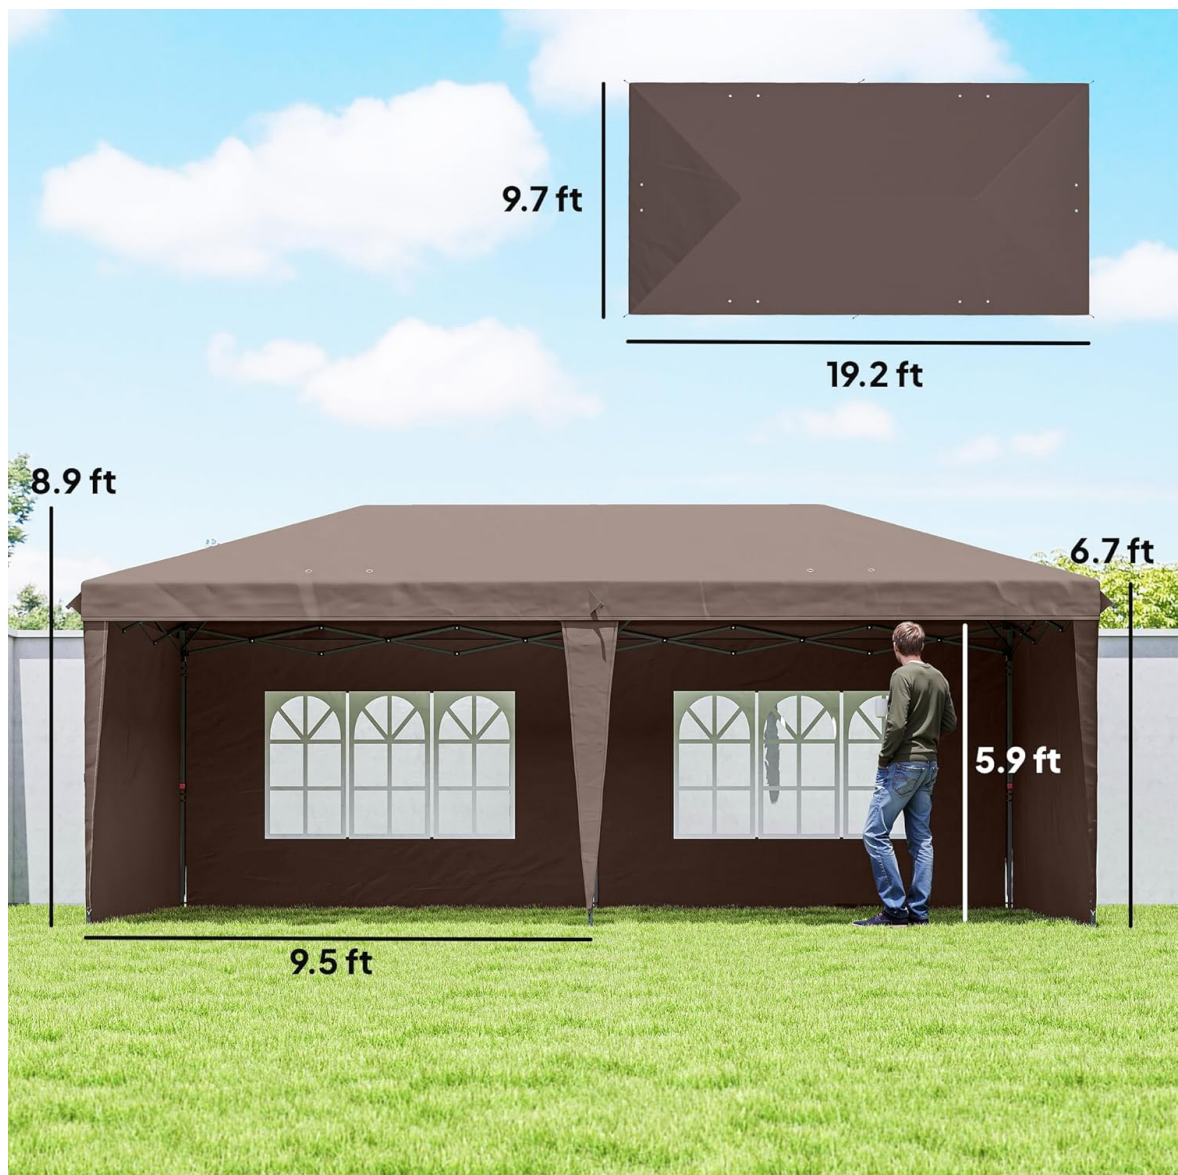


Figure 3: Stable Standing and Anchoring. This diagram illustrates different methods for securing the tent, including the use of guy ropes, spiral ground stakes, and standard ground stakes to ensure stability.

Your browser does not support the video tag.

Video 1: Outsunny Pop Up Canopy Setup. This video demonstrates the setup process for an Outsunny pop-up canopy, showing how to expand the frame and attach components.

OPERATING INSTRUCTIONS

- **Height Adjustment:** To adjust the height, press the red button on each leg and slide the inner leg section up or down to the desired position. Ensure all legs are set to the same height for stability.
- **Sidewall Configuration:** Sidewalls can be attached or removed as needed. They can also be rolled up and secured to allow for airflow while maintaining overhead shade.
- **UV Protection:** The silver-coated Oxford fabric canopy blocks 90% of UV rays, providing shade for outdoor activities.

MAINTENANCE

- **Cleaning:** Clean the canopy fabric and sidewalls with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow all parts to dry completely before storage to prevent mildew.
- **Frame Care:** The powder-coated steel frame is water-safe. Wipe down the frame with a damp cloth as needed. Inspect for any signs of rust or damage before each use.
- **Storage:** When not in use, disassemble the tent and store all components in the provided carrying bag in a cool, dry place.

TROUBLESHOOTING

Problem	Solution
Tent is unstable or wobbles.	Ensure all frame legs are fully extended and locked. Use ground stakes and guy ropes to anchor the tent securely. For hard surfaces, use appropriate weights (e.g., sandbags, water weights) on each leg.
Water pools on the canopy top.	This tent is not designed for heavy rain. Remove the canopy during heavy precipitation. Ensure the canopy is taut and properly attached to prevent sagging.
Difficulty expanding or collapsing the frame.	Ensure all locking mechanisms are disengaged before attempting to expand or collapse. Apply gentle, even pressure. Lubricate moving parts if necessary.

SPECIFICATIONS

Feature	Detail
Brand	Outsunny
Model Number	84C-117CF
Overall Dimensions	19.2' L x 9.7' W x 8.9' H
Eaves Height	6.7' H
Folded Dimensions	13" L x 7.75" W x 45.25" H
Floor Area	186.24 sq ft
Occupancy	18 people
Material	Polyethylene Fabric, Powder Coated Steel
UV Protection	Yes (90% UV block)




Water Resistance	Not Water Resistant (for heavy rain)
Item Weight	60.5 lbs

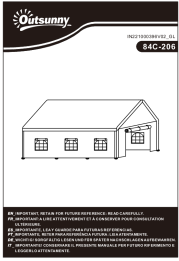
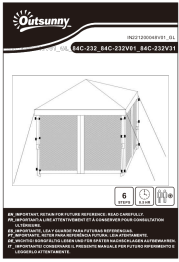

CONTACT AND SUPPORT

For further assistance or inquiries, please refer to the manufacturer's official website or contact customer support.

© 2024 Outsunny. All rights reserved.

Related Documents - 84C-117CF

	<p>Outsunny 12' x 12' Pop-Up Gazebo Assembly and Care Instructions</p> <p>This guide provides detailed instructions for assembling, using, and disassembling your Outsunny 12' x 12' pop-up gazebo. Includes safety warnings, care tips, and contact information for support.</p>
	<p>Outsunny 84C-252 84C-252V01 Gazebo Assembly and Safety Instructions</p> <p>Comprehensive guide for assembling and safely using the Outsunny 84C-252 84C-252V01 Foldable Pop-up Party Tent. Includes warnings, assembly steps, and care instructions in multiple languages.</p>
	<p>Outsunny Canopy Tent Assembly Instructions</p> <p>Step-by-step assembly guide for the Outsunny 84C-023V02 canopy tent, including a detailed parts list and instructions for setting up the frame, canopy, and side panels.</p>

 The image shows the cover of an assembly guide for the Outsunny 84C-206 Heavy Duty Party Tent Canopy Shelter. It features a line drawing of the tent, which has a peaked roof and a small side entrance. The Outsunny logo is in the top left corner, and the model number '84C-206' is in the top right corner. Below the drawing, there is a list of safety warnings in small text.	<p>Outsunny 84C-206 Heavy Duty Party Tent Canopy Shelter - Assembly Guide</p> <p>Detailed assembly instructions and parts list for the Outsunny 84C-206 Heavy Duty Party Tent Canopy Shelter. Provides step-by-step guidance, part identification, and customer support contact information.</p>
 The image shows the cover of an assembly and user guide for the Outsunny 84C-232 series pop-up canopy. It features a line drawing of the canopy, which has a flat top and a small side entrance. The Outsunny logo is in the top left corner, and the model number '84C-232, 84C-232V01, 84C-232V01' is in the top right corner. Below the drawing, there is a list of safety warnings in small text.	<p>Outsunny Pop-Up Canopy Assembly and User Guide</p> <p>Detailed guide for assembling and using the Outsunny 84C-232 series pop-up canopy. Includes safety warnings, parts list, and step-by-step instructions.</p>
 The image shows the cover of an assembly and safety guide for the Outsunny 8x4m Garden Gazebo. It features a line drawing of the gazebo, which has a peaked roof and a small side entrance. The Outsunny logo is in the top left corner, and the model number '84C-369V02, 84C-375V03' is in the top right corner. Below the drawing, there is a list of safety warnings in small text.	<p>Outsunny 8x4m Garden Gazebo Assembly and Safety Guide</p> <p>Comprehensive guide for assembling and safely using the Outsunny 8x4m Garden Gazebo (models 84C-369V02, 84C-375V03). Includes packing details, a part list, step-by-step assembly instructions, and important safety warnings.</p>