

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Fingerscan Digital Padlock User Manual

Sharper Image 874a9652-3d63-47f8-8868-c77d1b437822

Sharper Image Fingerscan Digital Padlock User Manual

Model: 874a9652-3d63-47f8-8868-c77d1b437822

INTRODUCTION

Welcome to the user manual for your new Sharper Image Fingerscan Digital Padlock. This biometric keyless smart lock offers advanced security with the convenience of fingerprint access. Designed for durability and portability, it is suitable for various applications including lockers, bikes, doors, and gates. Please read this manual carefully to ensure proper setup and operation of your device.



The Sharper Image Fingerscan Digital Padlock, shown with its retail packaging.

PRODUCT FEATURES

- **Biometric Fingerprint Lock:** Unlock with your unique fingerprint, eliminating the need for keys or combinations.
- **Portable and Waterproof:** Compact design with an IP66 waterproof rating, making it suitable for both indoor and outdoor use.
- **Mechanical Knob Control:** Features a thumbprint sensor for unlocking and a mechanical knob for secure locking.
- **Rechargeable Battery:** Equipped with a built-in rechargeable battery that provides long-lasting power, up to 1 year on standby or 2000 unlocks per charge.
- **Multiple Fingerprint Storage:** Capable of storing up to 10 unique fingerprints for multi-user access.



Overview of the padlock's key features: biometric access, secure alloy construction, IP65 weatherproofing, and rechargeable battery.



Visual representation of additional features: splash resistant, no keys, stores up to 10 fingerprints, 2000 unlocks between charges, and rechargeable battery.

What's Included

Your Sharper Image Fingerscan Digital Padlock package includes the following items:

- 1 x Digital Fingerprint Padlock
- 1 x Micro USB Charging Cable



The package includes the digital fingerprint padlock and its Micro USB charging cable.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your digital padlock:

- **Metal Shackle:** The U-shaped part that secures the lock.
- **Fingerprint Sensor:** Located on the front, used for biometric unlocking.
- **Micro USB Port:** For charging the internal battery.
- **Indicator Light:** Provides visual feedback on lock status (e.g., unlocked, low battery).



Labeled diagram of the padlock's physical features, including the metal shackle, metal sliding front door, dimples for grip, and logo.

SETUP

Initial Charging

Before first use, fully charge the padlock using the provided Micro USB cable. Connect the cable to the Micro USB port on the padlock and plug the other end into a USB power source (e.g., computer, wall adapter). The indicator light will show charging status and turn off when fully charged.



The padlock features a Micro USB port for convenient recharging.

Adding Fingerprints (Administrator)

The first fingerprint registered will be the administrator. This fingerprint is required to add or remove other user fingerprints.

1. Ensure the padlock is charged.
2. Press and hold the fingerprint sensor until the indicator light flashes blue.
3. Place your finger on the sensor. Lift and repeat several times as prompted by the light (e.g., green flash for successful scan, red for error).
4. Once successfully registered, the light will confirm.

Adding User Fingerprints

After the administrator fingerprint is set, you can add up to 9 additional user fingerprints (total of 10, including administrator).

1. Unlock the padlock using an administrator fingerprint.
2. While unlocked, press and hold the fingerprint sensor until the indicator light flashes blue.
3. Place the new user's finger on the sensor. Lift and repeat several times as prompted.
4. Once successfully registered, the light will confirm.

Removing All Fingerprints (Factory Reset)

To remove all registered fingerprints and restore factory settings:

1. Unlock the padlock using an administrator fingerprint.
2. While unlocked, press and hold the fingerprint sensor for approximately 10-15 seconds until the indicator light flashes red rapidly.
3. Release the sensor. All fingerprints will be deleted. You will need to register a new administrator fingerprint to use the lock again.

OPERATING INSTRUCTIONS

Unlocking the Padlock

To unlock the padlock, simply place a registered finger on the fingerprint sensor. The indicator light will flash green, and the shackle will pop open. If the fingerprint is not recognized, the light will flash red.



Your finger is the key, which allows users to not worry about losing their keys or forget their passwords. A lock collects two administrators and can save up to ten finger prints total.

Unlocking the padlock by placing a thumb on the fingerprint sensor.



The padlock is designed for easy setup and daily use.

Locking the Padlock

To lock the padlock, simply push the shackle down firmly until it clicks into place. The padlock will automatically

lock.

MAINTENANCE

Charging the Battery

The padlock features a rechargeable battery. When the battery is low, the indicator light may flash red or behave erratically. Connect the padlock to a USB power source using the provided Micro USB cable to recharge. A full charge can last up to 1 year on standby or provide approximately 2000 unlocks.

Cleaning

Wipe the padlock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or internal components. Keep the fingerprint sensor clean and free of dirt or moisture for optimal performance.

Water and Dust Resistance

The padlock has an IP66 rating, meaning it is protected against powerful water jets and is dust-tight. While it can withstand rain and splashes, it is not designed for prolonged submersion in water.

TROUBLESHOOTING

- Padlock not unlocking with registered fingerprint:**
Ensure your finger is clean and dry. Try repositioning your finger on the sensor. Ensure the battery is charged. If multiple attempts fail, try another registered fingerprint.
- Indicator light not turning on:**
The battery may be completely drained. Connect the padlock to a power source using the Micro USB cable and allow it to charge for at least 30 minutes before attempting to use it.
- Cannot register new fingerprints:**
Ensure you are using an administrator fingerprint to initiate the registration process. Make sure the padlock has enough battery life.
- Padlock feels loose or unresponsive:**
Check for any physical obstructions around the shackle or sensor. If the issue persists, try a factory reset and re-register your fingerprints.

SPECIFICATIONS

Feature	Specification
Brand	Sharper Image
Model Number	874a9652-3d63-47f8-8868-c77d1b437822
Lock Type	Biometric
Special Feature	Fingerprint
Material	Alloy Steel, Stainless Steel
Item Dimensions (L x W x H)	1 x 2 x 4 inches

Feature	Specification
Item Weight	1.15 pounds
Water Resistance Rating	IP66
Battery Life (Standby)	Up to 1 year
Unlocks per Charge	Up to 2000
Fingerprint Capacity	Up to 10

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video provides a visual introduction to the Sharper Image Digital Fingerprint Padlock, highlighting its key features and ease of use. It demonstrates the biometric unlocking mechanism, durable construction, and rechargeable battery, showcasing its application for various security needs.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Sharper Image website. You can also find a PDF version of the user manual [here](#).

© 2023 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question