

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LIORQUE](#) /

› [LIORQUE Mini Digital Alarm Clock YGH5248 User Manual](#)

## LIORQUE YGH5248

# LIORQUE Mini Digital Alarm Clock YGH5248 User Manual

Model: YGH5248

## INTRODUCTION

Thank you for choosing the LIORQUE Mini Digital Alarm Clock, Model YGH5248. This compact and portable alarm clock is designed to provide reliable timekeeping, alarm functions, and additional features such as temperature display and a backlight, making it ideal for travel and daily use. Please read this manual carefully to ensure proper operation and to fully utilize all features of your new alarm clock. This device operates silently, without a ticking sound, ensuring it does not disturb your sleep or concentration.

## PRODUCT FEATURES

- Snooze Function:** Provides an additional 9 minutes of sleep after the alarm sounds.
- Weekend Mode:** Prevents the alarm from sounding on weekends and holidays.
- Backlight:** Illuminates the display for easy viewing in low-light conditions.
- Date and Day Display:** Shows the current month, day, and day of the week.
- Temperature Display:** Displays the ambient temperature.
- 12/24 Hour Format:** Switch between 12-hour (AM/PM) and 24-hour time formats.
- Button Lock Function:** Prevents accidental button presses, especially useful during travel.
- Compact and Portable Design:** Slim and lightweight with a foldable stand for easy carrying and storage.



## Small but Powerful



Ultra LCD Display



12/24 Hour Conversion



Date & Week Display



Temperature Display



9 Minute Snooze



World Time Table



Click to Backlit



Button Lock

Image: Overview of the LIORQUE Mini Digital Alarm Clock's key features, including its ultra LCD display, 12/24 hour conversion, date and week display, temperature display, 9-minute snooze, world time table, backlight, and button lock.

### PACKAGE CONTENTS

- 1 x LIORQUE Mini Digital Alarm Clock (Model YGH5248)
- 1 x User Manual

### SETUP

#### Battery Installation

1. Locate the battery compartment on the back of the alarm clock.
2. Remove the insulating strip from the button cell battery (CR2302) before first use.
3. Ensure the battery is correctly inserted with the positive (+) side facing up.
4. Close the battery compartment cover securely.

**Note:** If the display flickers during normal use, replace the battery with a new CR2302 button cell battery.



 **Click to Backlit**  
1 battery for 6 months usage

Image: The alarm clock display with an illustration highlighting the button cell battery location for power, indicating it provides approximately 6 months of usage.

## OPERATING INSTRUCTIONS

---

### Setting Time and Date

1. Press the **MODE** button (often labeled with a clock icon or 'M') to enter time setting mode.
2. Use the **UP** (+) and **DOWN** (-) buttons to adjust the hour.
3. Press **MODE** again to move to minute setting, then adjust with **UP** (+) and **DOWN** (-).
4. Continue pressing **MODE** to cycle through year, month, and day settings, adjusting each with **UP** (+) and **DOWN** (-).
5. Press **MODE** one last time or wait a few seconds for the settings to save and return to normal display.



## What day is it today ?

Update the Date & Week together

Image: The alarm clock showing the time and date, alongside a calendar, demonstrating how the clock updates and displays the current date and day of the week.

### Setting the Alarm

1. Press the **ALARM** button (often labeled with a bell icon) to view the current alarm time.
2. Press and hold the **ALARM** button until the alarm hour starts flashing.
3. Use the **UP** (+) and **DOWN** (-) buttons to set the desired alarm hour.
4. Press **ALARM** again to move to minute setting, then adjust with **UP** (+) and **DOWN** (-).
5. Press **ALARM** one last time or wait a few seconds to save the alarm setting.
6. To activate/deactivate the alarm, press the **ALARM** button once while in normal time display mode. An alarm icon will appear/disappear on the screen.

### Snooze Function

- When the alarm sounds, press the **SNOOZE** button (often labeled 'Zz' or a large button on top).
- The alarm will pause and sound again after approximately 9 minutes.
- To turn off the alarm completely, press any other button (e.g., **MODE**, **ALARM**, **UP**, **DOWN**).

### Weekend Mode

- To activate Weekend Mode, locate the dedicated **WEEKEND** button or a setting within the alarm menu.
- When Weekend Mode is active, the alarm will not sound on Saturdays and Sundays. This feature is ideal for users who do not require an alarm on these days.
- Deactivate Weekend Mode if you need the alarm to sound on weekends.

## Backlight Activation

- To activate the backlight, press any button on the alarm clock.
- The backlight will illuminate the display for a few seconds, allowing you to view the time in dark environments.

## Temperature Display and 12/24 Hour Format

- The alarm clock displays the ambient temperature.
- To switch between Celsius (°C) and Fahrenheit (°F) temperature units, or between 12-hour and 24-hour time formats, locate the corresponding button (often labeled **°C/F** or **12/24H**) and press it.



## 12/24H Clock & Temperature

27°C → 81°F      Temperature (°C/°F)

18:30 → 6:30      Time(12/24H)

Image: The alarm clock demonstrating the conversion between Celsius and Fahrenheit for temperature display, and between 12-hour and 24-hour formats for time display.

## Button Lock Function

- The alarm clock features a button lock switch, usually located on the back or side of the device.
- Slide the switch to the **LOCK** position to disable all buttons. This prevents accidental changes to settings while traveling or when the clock is stored in a bag.
- Slide the switch to the **UNLOCK** position to enable button functionality.



Travel Around the World with One Clock

Image: The rear of the alarm clock, highlighting the button lock switch, emphasizing its utility for travel by preventing unintended button presses.

## MAINTENANCE

- Clean the alarm clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not shake the alarm clock forcefully.
- If the clock will not be used for an extended period, it is recommended to remove the battery to prevent leakage.

## TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem                           | Possible Cause   | Solution  |
|-----------------------------------|--|---|
| Display is blank or flickering.   | Low or depleted battery.                                   | Replace the CR2302 button cell battery. Ensure the insulating strip is removed. |
| Buttons are unresponsive.         | Button Lock function is activated.                         | Slide the button lock switch to the UNLOCK position.                            |
| Alarm does not sound on weekends. | Weekend Mode is activated.                                 | Deactivate Weekend Mode if you require the alarm to sound on weekends.          |
| Incorrect time or date displayed. | Time/date not set correctly or reset after battery change. | Refer to the "Setting Time and Date" section to re-set the time and date.       |

## SPECIFICATIONS

|                               |   |
|-------------------------------|---|
| <b>Brand</b>                  | LIORQUE   |
| <b>Model Number</b>           | YGH5248   |
| <b>Color</b>                  | Black   |
| <b>Dimensions (L x W x H)</b> | 7.5 x 3.81 x 9.3 cm (2.95 x 1.5 x 3.66 inches)                                      |
| <b>Weight</b>                 | 90 grams (3.17 ounces)  |
| <b>Display Type</b>           | Digital   |
| <b>Power Source</b>           | Battery Powered (CR2302 button cell)  |
| <b>Special Features</b>       | Temperature Display, Calendar Display, Snooze, Backlight, Weekend Mode, Button Lock |
| <b>Material</b>               | Acrylonitrile Butadiene Styrene (ABS)   |



## Portable Travel Clock

### Convenient to be taken anywhere

Image: The compact dimensions of the LIORQUE Mini Digital Alarm Clock, illustrating its portability and slim design, suitable for travel.

#### IMPORTANT SAFETY INFORMATION

- Do not expose the alarm clock to extreme temperatures or humidity.
- Do not shake the alarm clock forcefully.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

#### WARRANTY AND SUPPORT

LIORQUE products are designed for reliability and performance. For any questions, technical support, or warranty claims, please contact LIORQUE customer service through the retailer where the product was purchased or visit the official LIORQUE website for contact information.

Please retain your proof of purchase for warranty purposes.

