

[manuals.plus](#) /› [Fastrack](#) /› [Fastrack Mean Machines Analog-Digital Watch Model 38054PM01 User Manual](#)

## Fastrack NN38054PM01

# Fastrack Mean Machines Analog-Digital Watch Model 38054PM01 User Manual

Model: NN38054PM01

## 1. INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your Fastrack Mean Machines Analog-Digital Watch, Model NN38054PM01. This timepiece combines traditional analog display with modern digital functionalities, offering versatility and precision. It features 5 ATM / 50 m water resistance, a durable metal strap, and a stainless steel back cover, powered by high-precision quartz and digital movements.

## 2. PRODUCT OVERVIEW

The Fastrack Mean Machines watch is designed for durability and functionality. It features a robust stainless steel case and band, an analog display for quick time reference, and a digital display for additional features like date, alarm, and stopwatch. The watch is equipped with multiple buttons for mode selection and setting adjustments.



Figure 2.1: Front view of the Fastrack Mean Machines Analog-Digital Watch. This image displays the watch face with both analog hands and the digital display, highlighting the white dial and silver-tone casing.



Figure 2.2: Side view of the Fastrack Mean Machines Analog-Digital Watch. This image shows the watch's profile, including the crown and function buttons on the side of the case.



Figure 2.3: Back view of the Fastrack Mean Machines Analog-Digital Watch. This image displays the stainless steel back cover, engraved with the Fastrack logo, model number, and water resistance rating.

## 3. SETUP

### 3.1 Setting Analog Time

1. Pull the crown (the small knob on the right side of the watch case) out to the first position.
2. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands to the desired time.
3. Once the correct time is set, push the crown back into its normal position to start the analog movement.

### 3.2 Setting Digital Time and Date

The digital display typically has multiple modes (Time, Alarm, Stopwatch). Refer to the button labels on your watch for specific functions (e.g., MODE, SET, START/STOP, LIGHT).

1. Press the **MODE** button repeatedly until the digital time display starts flashing, indicating it is in setting mode.

2. Use the **SET** or **START/STOP** button to adjust the flashing digit (hours, minutes, seconds).
3. Press the **MODE** button again to cycle through the settings (e.g., hours, minutes, 12/24-hour format, year, month, day).
4. After setting all parameters, press the **MODE** button one last time to exit the setting mode.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Digital Display Modes

Press the **MODE** button to cycle through the following digital display modes:

- **Time Mode:** Displays current digital time (hours, minutes, seconds) and date.
- **Alarm Mode:** Allows setting and activating an alarm.
- **Stopwatch Mode:** Used for measuring elapsed time.

### 4.2 Using the Stopwatch

1. Navigate to the Stopwatch Mode by pressing the **MODE** button.
2. Press the **START/STOP** button to begin timing.
3. Press **START/STOP** again to pause the timing.
4. To resume, press **START/STOP**.
5. To reset the stopwatch to zero, press the **RESET** button (often the same as **SET** or a dedicated button) while the stopwatch is paused.

### 4.3 Using the Alarm

1. Navigate to the Alarm Mode by pressing the **MODE** button.
2. Press the **SET** button to enter alarm setting mode. The alarm hour will flash.
3. Use the **START/STOP** button to adjust the hour.
4. Press **SET** again to move to the minute setting, and adjust with **START/STOP**.
5. Press **MODE** to exit alarm setting.
6. To activate/deactivate the alarm, typically press **START/STOP** while in Alarm Mode (not setting mode). An alarm icon will appear when active.

### 4.4 Backlight Function

Press the **LIGHT** button (usually located on the top left or bottom left of the watch case) to illuminate the digital display for a few seconds in low-light conditions.

## 5. MAINTENANCE

---

### 5.1 Cleaning Your Watch

- Wipe the watch case and metal strap with a soft, dry cloth regularly to remove dust and dirt.
- For stubborn dirt, use a slightly damp cloth with mild soap, then wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.
- Ensure the crown is pushed in completely before cleaning to maintain water resistance.

### 5.2 Water Resistance

Your Fastrack watch is rated for 5 ATM / 50 meters water resistance. This means it is suitable for everyday use, including showering and swimming in shallow water. However, it is **not** suitable for diving or high-impact water sports. Do not operate the crown or buttons while the watch is wet or submerged, as this can compromise the water seal.

## 5.3 Battery Replacement

When the watch battery runs low (indicated by dimming digital display or analog hands stopping), it is recommended to have it replaced by an authorized Fastrack service center or a qualified watch technician. Attempting to replace the battery yourself may void the warranty and compromise water resistance.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Analog hands not moving.	Battery depleted or crown pulled out.	Push the crown in. If still not working, battery replacement may be needed.
Digital display is blank or dim.	Digital battery depleted.	Battery replacement is needed.
Incorrect digital time/date.	Time/date not set correctly.	Refer to Section 3.2 "Setting Digital Time and Date" to reset.
Water inside the watch.	Crown/buttons operated underwater or seals compromised.	Immediately take the watch to an authorized service center for inspection and repair. Do not attempt to dry it yourself.

## 7. SPECIFICATIONS

Model Number	NN38054PM01
Brand	Fastrack
Movement Type	Quartz (Analog and Digital)
Water Resistance	5 ATM / 50 meters
Case Diameter	51.5 Millimetres
Band Material	Stainless Steel
Band Colour	Silver
Item Weight	200 Grams
Product Dimensions (LxWxH)	14 x 10 x 7 Centimeters

## 8. WARRANTY AND SUPPORT

### 8.1 Manufacturer's Warranty

This Fastrack watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. The warranty typically covers manufacturing defects but does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear.

### 8.2 Customer Support

For any questions, service requests, or warranty claims, please contact Fastrack customer support or visit an authorized Fastrack service center. Contact information can usually be found on the Fastrack official website or on your warranty documentation.

You can find more information and support on the official [Fastrack Store on Amazon](#).

© 2023 Fastrack. All rights reserved. Information in this manual is subject to change without notice.

## Related Documents - NN38054PM01

	<p><a href="#">Fastrack S06 Smartwatch User Manual</a></p> <p>Comprehensive user manual for the Fastrack S06 Smartwatch, covering setup, features, maintenance, and safety information.</p>
	<p><a href="#">Fastrack Reflex Play Smartwatch User Manual: Setup, Features, and Troubleshooting</a></p> <p>Comprehensive user manual for the Fastrack Reflex Play smartwatch, covering setup, app connection, features like fitness tracking, heart rate monitoring, notifications, and troubleshooting guides.</p>
	<p><a href="#">Fastrack Reflex Beat+ Smartwatch User Manual: Features, Pairing &amp; Setup</a></p> <p>Comprehensive user manual for the Fastrack Reflex Beat+ Smartwatch. Learn about its features, app installation, watch pairing, health tracking, and technical specifications.</p>
	<p><a href="#">Fastrack FPods FT7 Truly Wireless Earpods Quick Start Guide</a></p> <p>Get started with your Fastrack FPods FT7 Truly Wireless Earpods. This guide covers setup, controls, features like 3C NitroFast Charge, Quad Mic ENC, and low latency gaming mode.</p>
	<p><a href="#">Fastrack FPods FZ100 Truly Wireless Earbuds Quick Start Guide</a></p> <p>Learn how to set up, use, and care for your Fastrack FPods FZ100 Truly Wireless Earbuds. This guide covers pairing, controls, features like gaming mode and voice assistant, charging, and specifications.</p>
	<p><a href="#">Fastrack FPods FS100: Quick Start Guide, Features, and Specifications</a></p> <p>Comprehensive quick start guide for Fastrack FPods FS100 Truly Wireless Earbuds. Learn about setup, controls, features like Quad Mic ENC, 60ms gaming mode, 40-hour playtime, and product specifications.</p>



[\[pdf\] Catalog](#)

Fastrack New 2021 Catalog FINAL 1 cdr Dinesh The materials the new gen form factor and care that we pour into our products is proof re obsessed with style in every staticimg titan co MobileApp Banners WELCOME TO THE We bring you this year s eCatalogue with a completely new avatar - one that really s ... Y - GUYS NN38045PP03 2195 NN38048PP01 2295 NN38053PM01 4195 NN38053PM02 4195 NN38053PM03 4195 **NN38054PM01** 4195 NN38054PM02 4195 NN38054PM03 4195 NN38055PM01 4495 NN38055PM02 4495 NN38055PP0...

lang:en **score:22** filesize: 8.97 M page\_count: 112 document date: 2021-07-12



[\[pdf\] Catalog](#)

Fastrack New 2021 Catalog FINAL cdr Dinesh FASTRACK2021 E catalog brandazzlers 09 Brandazzlers watches The materials the new gen form factor and care that we pour into our products is proof re obsessed with style in every Corporate Gifts Diwali Catalogues gifts for employees |||

WELCOME TO THE We bring you this year s eCatalogue with a completely new avatar - one that really s ... Y - GUYS NN38045PP03 2195 NN38048PP01 2295 NN38053PM01 4195 NN38053PM02 4195 NN38053PM03 4195 **NN38054PM01** 4195 NN38054PM02 4195 NN38054PM03 4195 NN38055PM01 4495 NN38055PM02 4495 NN38055PP0...

lang:en **score:22** filesize: 15.71 M page\_count: 105 document date: 2021-09-21