

KODAK RCF-106

Kodak 10-Inch Touch Screen Digital Picture Frame RCF-106 User Manual

Model: RCF-106

1. INTRODUCTION

Thank you for choosing the Kodak 10-Inch Touch Screen Digital Picture Frame, Model RCF-106. This Wi-Fi enabled frame allows you to display your cherished photos and videos in high definition, keeping your memories alive and easily shareable with family and friends. This manual provides detailed instructions for setting up, operating, and maintaining your digital picture frame.

2. IMPORTANT SAFETY INFORMATION

- Read all instructions carefully before use.
- Keep the device away from water and moisture.
- Do not expose to direct sunlight or extreme temperatures.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Kodak 10-Inch Touch Screen Digital Picture Frame (RCF-106)
- Power Adapter
- User Manual
- Stand (pre-attached or separate)



Image: The Kodak RCF-106 digital picture frame shown with its retail packaging.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your digital picture frame.



TOUCHSCREEN 10 INCH DIGITAL PICTURE FRAME



Image: Front view of the digital picture frame highlighting its 10.6-inch width and 7.3-inch height.

4.1. Ports and Buttons

The frame features various ports for connectivity and media input.

Your browser does not support the video tag.

Video: This video demonstrates the physical features and ports of the Kodak RCF-106 digital picture frame, including SD card slot, earphone jack, USB drive port, USB cable port, and power interface. It also shows the initial setup process.

- **SD Card Slot:** Insert an SD card to display photos and videos.
- **Earphone Jack:** Connect headphones for private audio playback.
- **USB Drive Port:** Connect a USB flash drive to display photos and videos.
- **USB Cable Port:** For connecting to a computer or other devices.
- **Power Interface:** Connect the power adapter to power the frame.
- **Power Button:** Turns the frame on/off and controls sleep mode.
- **Touch Screen:** For interactive navigation and control.

5. SETUP GUIDE

5.1. Initial Power On and Basic Settings

1. Connect the power adapter to the frame's Power Interface and plug it into a wall outlet.
2. Press the Power Button to turn on the frame.
3. On the initial setup screen, select your preferred language.
4. Choose your time zone.
5. Connect to your Wi-Fi network by selecting it from the list and entering the password using the on-screen keyboard.

5.2. Connecting with the Kodak App

The Kodak app allows for easy wireless transfer of photos and videos from your smartphone.

1. On your smartphone, download the "KODAK Classic Frame" app from the Google Play Store or Apple App Store.
2. Open the app and follow the on-screen instructions to create an account or log in.
3. On your digital picture frame, navigate to the "Download the App" screen to display a QR code.
4. In the Kodak app on your phone, use the camera function to scan the QR code displayed on the frame. This will link your phone to the frame.
5. Alternatively, you can manually enter the 10-digit Frame ID displayed on the frame into the app.

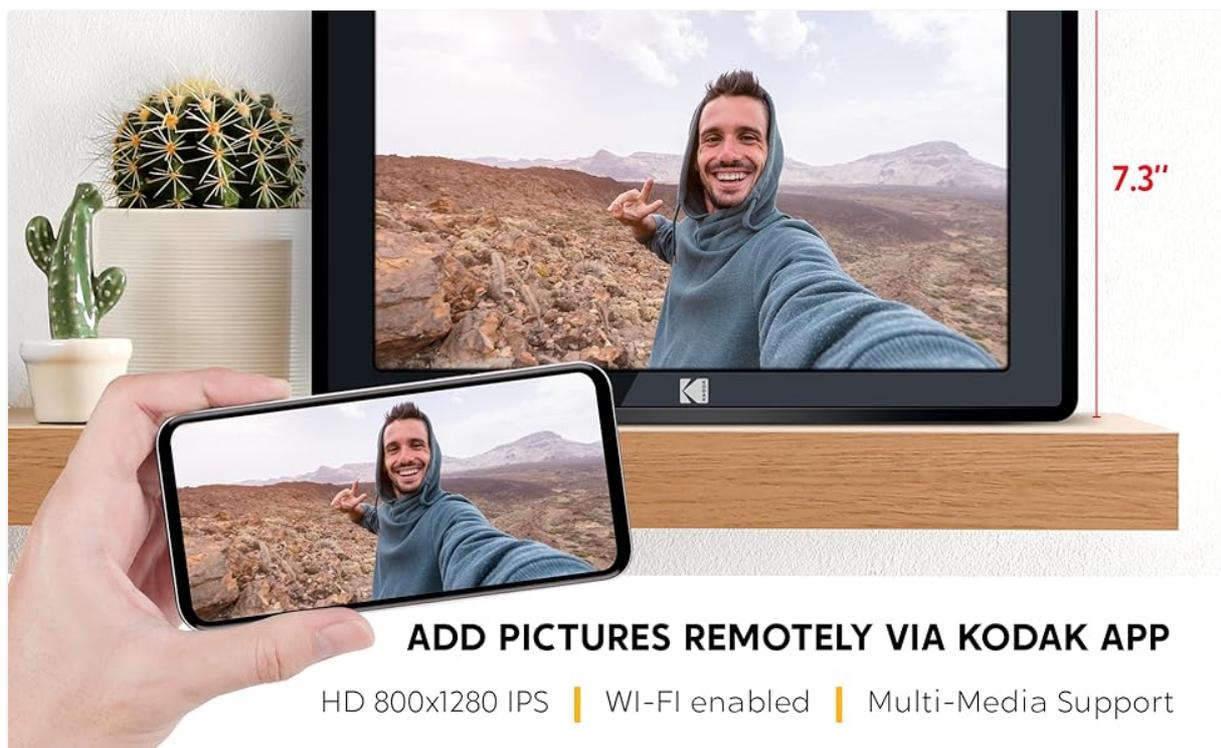


Image: A person interacting with the Kodak app on a smartphone to set up the digital picture frame, illustrating the ease of use.

5.3. Loading Photos and Videos

You can load media using the app or physical storage devices.

- **Via Kodak App:** Once connected, select photos and videos from your phone's gallery within the app and send them directly to the frame.
- **Via SD Card or USB Drive:** Insert a compatible SD card or USB flash drive into the respective slot on the back of the frame. The frame will automatically detect the media and allow you to browse and display content.

16GB

BUILT-IN MEMORY

10GB Mobile Data Transfer | 5GB of Free Cloud Storage
FOR TWO YEARS



Image: The digital picture frame displaying information about its 16GB built-in memory and compatibility with SD cards and USB drives for media transfer.

6. OPERATING INSTRUCTIONS

6.1. Navigating the Touch Screen

The 10.1-inch HD IPS display is fully touch-enabled for intuitive control.

- **Swipe:** Swipe left or right to navigate through photos and videos.
- **Tap:** Tap on an item to select it or open a menu.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out on photos.

6.2. Photo and Video Playback

Your frame will automatically start a slideshow of loaded media. You can customize playback settings in the menu.

- **Slideshow Settings:** Access the settings menu to adjust transition effects, display time for each photo, and playback order.
- **Video Playback:** Videos will play automatically within the slideshow. Tap on a video to pause, play, or adjust volume.
- **Auto-Rotate Function:** The frame automatically adjusts the orientation of photos and videos based

on how the frame is positioned (landscape or portrait).

INSTANT WIRELESS MEDIA SHARING

Showcase your favorite media content straight from your phone.

Get weather, calendar, clock, and location updates.



Image: A hand interacting with the touch screen of the digital picture frame, demonstrating instant wireless media sharing and the auto-rotate feature.

6.3. Sharing with Family and Friends

The Kodak app allows up to 20 members to share photos and videos to the same frame.

- Share your frame's QR code or Frame ID with trusted family and friends.
- Once they connect using the Kodak app, they can send photos and videos directly to your frame from anywhere.

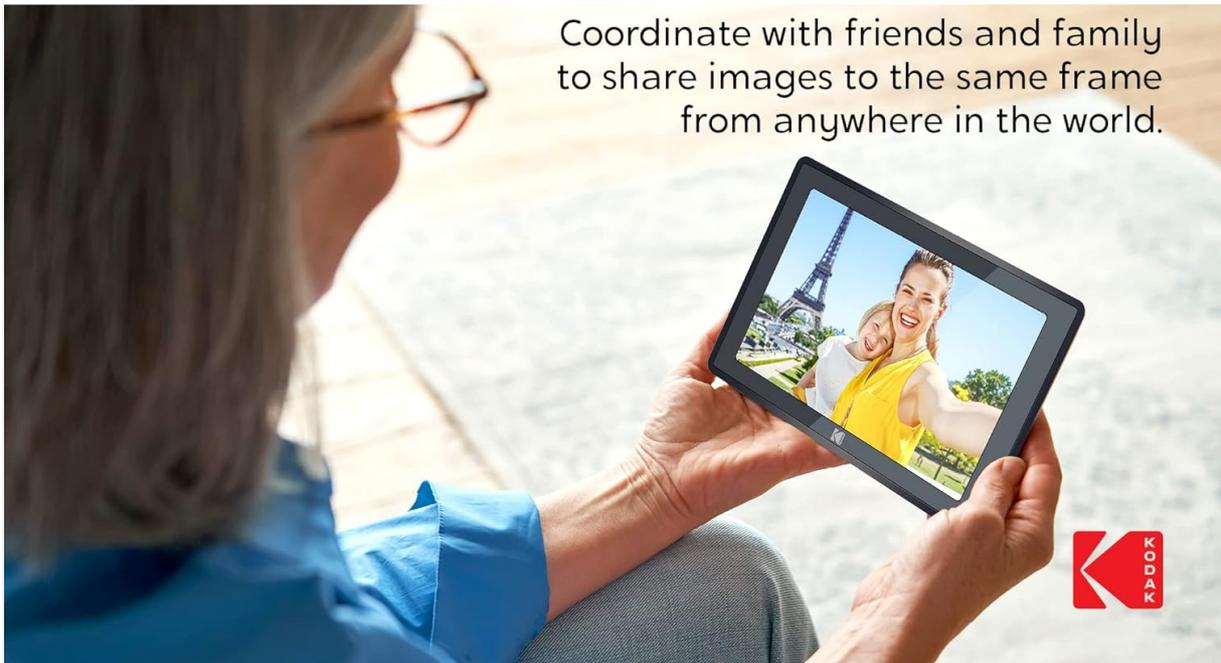


Image: Illustrates how users can share images from their smartphones to the digital picture frame, emphasizing connectivity with friends and family.

6.4. Additional Features

The frame includes several utility features:

- **Clock and Calendar:** Display current time and date.
- **Weather and Location Updates:** Receive local weather and location information (requires internet connection).

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use for extended periods, store the frame in a cool, dry place.
- **Software Updates:** Ensure your frame's software is up to date for optimal performance. The app will notify you of available updates.

8. TROUBLESHOOTING

Problem	Solution
Frame does not turn on.	Ensure the power adapter is securely connected to both the frame and a working power outlet. Try a different outlet.
Cannot connect to Wi-Fi.	Verify your Wi-Fi password. Ensure the frame is within range of your Wi-Fi router. Restart the frame and your router.
Photos are not displaying.	Check if photos are correctly uploaded via the app or if the SD card/USB drive is properly inserted and contains compatible media files. Ensure the frame is not in a menu screen.
App connection issues.	Ensure both your phone and the frame are connected to the internet. Re-scan the QR code or re-enter the Frame ID. Make sure you are using the "KODAK Classic Frame" app.
"Cloud album error" message.	This may indicate an issue with cloud synchronization. Ensure a stable internet connection. If using local storage (USB/SD), this message might be a software glitch; try restarting the frame.

9. SPECIFICATIONS

- **Screen Size:** 10 Inches
- **Resolution:** 1280 x 800 HD IPS Display
- **Internal Memory:** 16GB
- **Connectivity:** Wi-Fi Enabled
- **Compatible Devices:** Personal Computer, Smartphone App, USB Flash Drive, SD Card, Email
- **Product Dimensions:** 7.3 x 10.6 x 0.99 inches
- **Item Weight:** 1 pound
- **Color:** Black
- **Batteries:** 1 Lithium Ion battery required (included)

10. WARRANTY AND SUPPORT

Your Kodak Digital Picture Frame comes with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or visit the official Kodak support website. If you encounter any issues or require technical assistance, please contact Kodak customer support.

Online Support: Visit the [KODAK Store on Amazon](#) for product information and support resources.