

Fastrack NN38054PM03

Fastrack Mean Machines Analog-Digital Watch User Manual

Model: NN38054PM03

1. INTRODUCTION

This manual provides comprehensive instructions for the Fastrack Mean Machines Analog-Digital Watch, Model NN38054PM03. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your timepiece. This watch features a robust design with both analog and digital displays, offering versatile timekeeping capabilities and 5 ATM / 50 m water resistance.

2. PRODUCT OVERVIEW

The Fastrack Mean Machines Analog-Digital Watch is designed for durability and functionality. It features a black dial, a metal strap, and a stainless steel back cover. The watch combines high-precision quartz movement for the analog display with a digital movement for additional features.

- **Analog-Digital Display:** Combines traditional hands with a clear digital readout.
- **Water Resistance:** Rated for 5 ATM / 50 meters, suitable for splashes, rain, and brief immersion.
- **Durable Construction:** Features a metal strap and stainless steel back cover for enhanced longevity.
- **Multi-functional:** Includes various digital functions such as alarm, stopwatch, and date display.



Figure 2.1: Front view of the Fastrack Mean Machines Analog-Digital Watch, showcasing its black dial and metal strap.

3. SETUP

3.1 Initial Time Setting (Analog)

1. Pull out the crown (the knob on the side of the watch) to the first click position.
2. Rotate the crown clockwise or counter-clockwise to set the analog hour and minute hands to the correct time.
3. Push the crown back into its normal position to start the analog movement.

3.2 Digital Display Setup

The digital display typically has multiple modes (Time, Date, Alarm, Stopwatch). Refer to the buttons on the watch for navigation and setting.



Figure 3.1: Side view of the watch, highlighting the control buttons used for digital display settings.

1. Identify the "MODE" button (usually on the left side). Press it repeatedly to cycle through modes (Time, Alarm, Stopwatch).
2. To set the digital time/date, press the "SET" button (usually top-left) while in the time display mode. Digits will flash.
3. Use the "ADJUST" or "LIGHT" button (usually on the right side) to change the flashing value.
4. Press "MODE" again to move to the next setting (e.g., minutes, hour, date, month, day).
5. Once all settings are correct, press "SET" again to exit the setting mode.

3.3 Adjusting the Metal Strap

The metal strap may require adjustment for a comfortable fit. This typically involves removing or adding links. It is recommended to have this done by a professional watch repair service or jeweler to avoid damage to the strap or watch.

4. OPERATING THE WATCH

4.1 Analog Time Display

The analog hands continuously display the current time. Ensure the crown is fully pushed in for accurate timekeeping.

4.2 Digital Time and Date Display

Press the "MODE" button to switch between the digital time display and other functions. The digital display typically shows hours, minutes, seconds, and the day of the week.

4.3 Alarm Function

To set the alarm:

1. Press "MODE" until the alarm setting appears (often indicated by "AL").
2. Press "SET" to activate the setting mode.
3. Use "ADJUST" to set the desired alarm time.
4. Press "MODE" to confirm and exit.
5. To turn the alarm on/off, typically press "ADJUST" while in the alarm display mode.

4.4 Stopwatch Function

To use the stopwatch:

1. Press "MODE" until the stopwatch display appears (often indicated by "ST" or "STOP").
2. Press "ADJUST" to start/stop the stopwatch.
3. Press "SET" to reset the stopwatch to zero.

4.5 Water Resistance (5 ATM / 50 m)

Your Fastrack watch is water resistant to 5 ATM or 50 meters. This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. It is **not** suitable for swimming, diving, or showering with hot water, as steam and pressure changes can compromise the seals. Do not operate buttons or the crown when the watch is wet or submerged.

5. MAINTENANCE

5.1 Cleaning Your Watch

Wipe the watch case and strap regularly with a soft, dry cloth to remove dirt and perspiration. For the metal strap, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials.

5.2 Battery Replacement

When the watch stops or the digital display fades, the battery may need replacement. It is highly recommended to have the battery replaced by an authorized service center or a qualified watch technician to ensure proper sealing and maintain water resistance.

5.3 Water Resistance Care

To maintain the water resistance of your watch:

- Ensure the crown is always pushed in completely.
- Do not operate buttons or the crown when the watch is wet or submerged.
- Avoid exposing the watch to extreme temperature changes (e.g., hot showers, saunas).
- Have the water resistance seals checked periodically (e.g., every 2-3 years) by a professional, especially after battery replacement.

6. TROUBLESHOOTING

6.1 Analog Hands Not Moving

- Check if the crown is fully pushed in.
- The battery may be depleted. Refer to Section 5.2 for battery replacement.

6.2 Digital Display Faint or Blank

- The battery for the digital module may be low. Refer to Section 5.2 for battery replacement.
- Ensure the watch has not been exposed to extreme temperatures.

6.3 Incorrect Time/Date Display

- Re-set the time and date following the instructions in Section 3.1 and 3.2.
- If the issue persists, the watch may require professional inspection.

6.4 Water Inside the Watch

If you notice condensation or water droplets inside the watch, immediately take it to an authorized service center. Do not attempt to dry it yourself, as this can cause further damage.

7. SPECIFICATIONS

Feature	Detail
Model Number	NN38054PM03
Brand	Fastrack
Movement Type	Quartz (Analog) and Digital
Water Resistance	5 ATM / 50 meters
Case Diameter	51.5 Millimetres
Band Material Type	Stainless Steel
Band Colour	Silver
Item Weight	200 Grams
Product Dimensions	14 x 10 x 7 cm
Manufacturer	Titan Company Ltd

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This Fastrack watch comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty. The warranty typically covers manufacturing defects under normal use.

8.2 Customer Support

For any queries, service requests, or technical assistance, please contact Fastrack customer support or visit an authorized Fastrack service center. Contact details can usually be found on the Fastrack official website or on the warranty documentation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question