

- Manuals.plus /
- › Enya /
- › Enya Tenor Mahogany Ukulele with AcousticPlus Pickup, Model EUT-Feather BL Instruction Manual

Enya EUT-Feather BL

Enya Tenor Mahogany Ukulele Instruction Manual

MODEL: EUT-FEATHER BL

1. Introduction

Thank you for choosing the Enya Tenor Mahogany Ukulele with AcousticPlus Pickup. This manual provides essential information for setting up, operating, and maintaining your instrument. Please read it thoroughly to ensure optimal performance and longevity of your ukulele.



Image: Enya Tenor Mahogany Ukulele in Feather Blue.

2. Package Contents

Your Enya Tenor Ukulele package includes the following items:

- Enya EUT-Feather BL Tenor Ukulele
- Deluxe Soft Case
- Audio Cable
- Tuner
- Capo
- Spare Strings (J87 Tenor Strings)

3. Features

The Enya Tenor Mahogany Ukulele is designed with several key features to enhance your playing experience:

- **All Solid Mahogany Construction:** The head, neck, and center back are crafted from a single piece of mahogany wood, contributing to a warm, full sound with good penetration.
- **Unique Hand-Made Inlay:** The Richlite fingerboard features a distinctive inlay design.
- **AcousticPlus Pickup System:** Integrated system provides reverb, chorus, and delay effects without requiring an external amplifier.
- **Ultra-Thin Varnish Finish:** A specialized 18-day varnish wiping process allows the ukulele's natural sound to resonate fully and showcases the wood grain, even with a colorful finish.
- **High-Quality Strings and Tuners:** Equipped with J87 tenor strings and 1:18 die-casting tuners for stable and long-lasting tuning.



One-Body

out of
1 piece mahogany
ultra-thin

Image: Close-up of the ukulele body highlighting the one-piece mahogany construction.

Richlite Fretboard

with Feather inlays
smooth to play



Image: Detail of the Richlite fretboard with feather inlays.



AcousticPlus[®] Pickup

reverb, delay, chorus
within the uke



Image: AcousticPlus pickup controls on the side of the ukulele.

4. Setup

4.1 Unpacking

Carefully remove the ukulele from its deluxe soft case. Inspect the instrument for any signs of damage during transit. Keep all packaging materials in case the instrument needs to be returned or stored.

4.2 Tuning

Before playing, your ukulele needs to be tuned. Use the included tuner by clipping it onto the headstock. The standard tuning for a tenor ukulele is G-C-E-A (from the fourth string to the first string). Adjust the 1:18 die-casting tuners until each string is accurately tuned.



Image: Close-up of the 18:1 ratio machine heads on the ukulele headstock.

4.3 AcousticPlus Pickup System

The AcousticPlus system allows you to add effects without an amplifier. Ensure the system is charged. While a charging block is not included, the system typically charges via a standard USB cable or through the 1/4" output jack when connected to a compatible power source. Refer to the AcousticPlus system's specific instructions for charging details.

5. Operating Instructions

5.1 Playing the Ukulele

Hold the ukulele comfortably against your body. Use your right hand (if right-handed) to strum or pluck the strings over the soundhole, and your left hand to press down on the strings against the fretboard to form chords.

5.2 Using the AcousticPlus Pickup

The AcousticPlus system features controls for Volume, Reverb, and Effects (Chorus/Delay). These controls are located on the side of the ukulele body.

- **Volume:** Adjusts the overall output level of the pickup.
- **Reverb:** Adds a spacious, echoing effect to your sound.
- **Effects:** Controls the intensity of chorus or delay, depending on the selected mode.

Experiment with these controls to find your desired sound. The system can be used acoustically (without an amplifier) or connected to an amplifier via the 1/4" output jack for amplified sound with effects.

Video: Official product video demonstrating the Enya EUT-Feather Blue Ukulele.

6. Maintenance

6.1 Cleaning

Wipe down your ukulele with a soft, dry cloth after each use to remove sweat and oils. For a deeper clean, use a specialized instrument polish sparingly. Avoid harsh chemicals or abrasive materials.

6.2 String Replacement

Strings should be replaced periodically as they wear out or lose their tone. Use the included J87 tenor strings or other high-quality tenor ukulele strings. When replacing strings, change them one at a time to maintain tension on the neck and bridge.

6.3 Storage

Always store your ukulele in its deluxe soft case when not in use. This protects it from dust, humidity changes, and physical damage. Avoid exposing the ukulele to extreme temperatures or direct sunlight.

7. Troubleshooting

If you encounter any issues with your Enya Ukulele, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Ukulele won't stay in tune	New strings stretching, improper winding, worn tuners, environmental changes.	Stretch new strings gently, ensure proper winding around tuning posts, check tuner screws for tightness, allow ukulele to acclimate to environment.
Buzzing sound from strings	Low action, uneven frets, loose internal components (especially with AcousticPlus system).	Check string height at nut and bridge. If buzzing persists or is related to the AcousticPlus system, contact customer support.
AcousticPlus pickup not working	Battery low/dead, loose connection, system malfunction.	Ensure the AcousticPlus system is fully charged. Check cable connections. If the issue persists, contact customer support.

For issues not covered here or if troubleshooting steps do not resolve the problem, please contact Enya Music customer support.

8. Specifications

Feature	Detail
Model Number	EUT-Feather BL
Body Material	Solid Mahogany
Top Material	Mahogany
Back Material	Mahogany
Neck Material Type	Solid Mahogany
Fretboard Material	Richlite
Color	Blue Feather
Number of Strings	4
String Material	Phosphor Bronze (J87 Tenor Strings)
Finish Type	Varnish
Pickup Configuration	AcousticPlus (combination)
Connector Type	1/4" Jack
Item Weight	3.8 pounds
Product Dimensions	30 x 12 x 4 inches

9. Warranty and Support

Enya Music stands behind the quality of its products. For specific warranty information, returns, or technical support, please visit the official Enya Music store or contact their customer service directly.

You can find more information and contact details on the Enya Music brand store:[Enya Music Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08D6L81PJ>

More documents and user manuals: <https://manuals.plus/>