

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YISSVIC](#) /

› [YISSVIC 500W 2L Electric Food Chopper Instruction Manual](#)

YISSVIC 5997

YISSVIC 500W 2L Electric Food Chopper Instruction Manual

Model: 5997

INTRODUCTION

Thank you for choosing the YISSVIC 500W 2L Electric Food Chopper. This appliance is designed for efficient and versatile food preparation, including chopping, mincing, pureeing, and mixing various ingredients. To ensure safe and optimal performance, please read this instruction manual thoroughly before first use and retain it for future reference.



Image: The YISSVIC Electric Food Chopper, showcasing its stainless steel bowl and motor unit, surrounded by fresh ingredients such as meat, corn, carrots, and pomegranates, highlighting its versatility.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the main motor unit in water or any other liquid. Clean the surface of the main unit only with a damp cloth.
- Keep hands and utensils out of the processing bowl while chopping to prevent severe injury to persons or damage to the food chopper. A scraper is provided for this purpose.
- Ensure the appliance is unplugged from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Avoid contact with moving parts. Blades are sharp. Handle with care.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or

instruction concerning use of the appliance by a person responsible for their safety.

- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Continuous operation should not exceed 1 minute to protect the motor from overheating. Allow the chopper to cool for 30 minutes before resuming use.



Image: A close-up diagram illustrating the connection protection device, ensuring the motor unit is securely engaged with the bowl before operation.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your YISSVIC Electric Food Chopper:



Image: An exploded view diagram of the food chopper, clearly labeling its main components: the 2-speed switch, 500W copper motor, safety protection, sealing lid, 4 double-layer blades, 2L stainless steel bowl, and anti-slip mat.

- **Main Motor Unit:** Contains the 500W copper motor and 2-speed control switch.
- **2L Stainless Steel Bowl:** Durable food-grade stainless steel bowl with a maximum capacity of 2 liters.
- **Transparent Lid:** Seals the bowl during operation.
- **Blade Assemblies (x2):** Each assembly features 4 sharp, double-layer stainless steel blades. Two assemblies are included for extended lifespan.
- **Anti-slip Mat:** Provides stability during operation.
- **Scraper:** For safely removing processed food from the bowl.
- **Blade Protectors:** For safe storage of the blades.



Picadora de carne eléctrica 500W



8 Cabezales de corte



Tapa transparente



Raspador



Tazón de acero inoxidable



Protector de la cuchilla

C

Image: A visual representation of all components included with the YISSVIC Electric Food Chopper, laid out neatly on a surface.



Image: A detailed view of the three-dimensional double-layer blade, highlighting its design for efficient chopping.

SETUP INSTRUCTIONS

Follow these steps to assemble your food chopper before use:

- 1. Place Anti-slip Mat:** Position the anti-slip mat on a clean, dry, and stable surface.
- 2. Place Bowl:** Place the stainless steel bowl onto the anti-slip mat.
- 3. Insert Blade:** Carefully place one of the blade assemblies onto the central shaft inside the bowl. Ensure it is securely seated.

- 4. Add Ingredients:** Put your desired food items into the bowl. Do not overfill.
- 5. Cover with Lid:** Place the transparent lid onto the bowl, ensuring it is properly aligned and sealed.
- 6. Install Motor Unit:** Place the main motor unit onto the lid, aligning the motor shaft with the blade assembly. Ensure it clicks into place for safety.



Image: A six-step visual guide demonstrating the assembly process of the food chopper, from placing the mat to installing the motor unit and removing processed food.

OPERATING INSTRUCTIONS

Your YISSVIC food chopper features two speed settings for various ingredients:

- Speed I (Low Speed):** Ideal for softer ingredients such as vegetables, fruits, garlic, and peppers.
- Speed II (High Speed):** Suitable for harder ingredients like meat, carrots, zucchini, and nuts.

Usage Guidelines:

- Ensure the chopper is properly assembled and plugged into a suitable power outlet.
- Press the desired speed switch (I or II) to start operation.
- Process food in short pulses for better control over consistency.
- Do not operate continuously for more than 1 minute. If longer processing is needed, allow the motor to cool

down for at least 30 minutes before resuming. This prevents motor damage from overheating.

- Once processing is complete, release the switch, unplug the appliance, and carefully disassemble. Use the provided scraper to remove food.



2 Velocidades elegir

I es La velocidad baja se aplica para:



ajo



cebolla



pimiento



fruta

II es La velocidad alta es buena para:



nueces



carne



zanahorias



queso

Image: A visual guide to the two speed settings, showing which ingredients are best suited for low speed (I) and high speed (II).

Recommended Processing Times (for 500g portions):

5-10s

15-30s



500g Fruta



500g Verduras



500g Ajo



500g Nueces



500g Carne



500g Rábano



500g Calabazas



500g Queso



Image: A chart indicating approximate processing times for different food types, such as fruits, vegetables, garlic, nuts (5-10 seconds), and meat, radish, pumpkin, cheese (15-30 seconds).



Chopped Garlic



Chopped Meat



Chopped Carrots



Chopped Chili

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your food chopper:

- 1. Unplug:** Always unplug the appliance from the power outlet before cleaning.
- 2. Disassemble:** Carefully disassemble all removable parts: the motor unit, lid, blade assembly, and stainless steel bowl.
- 3. Clean Blades:** Handle the blades with extreme care as they are very sharp. Wash them under running water with a mild detergent. Use a brush if necessary. Store them with the blade protectors.
- 4. Clean Bowl and Lid:** The stainless steel bowl and transparent lid can be washed with warm soapy water or placed in the dishwasher (top rack recommended).
- 5. Clean Motor Unit:** Wipe the main motor unit with a damp cloth. Do NOT immerse the motor unit in water or any other liquid.
- 6. Dry Thoroughly:** Ensure all parts are completely dry before reassembling or storing.



Image: The detachable design of the food chopper components, illustrating how easily the lid and bowl separate for cleaning.

TROUBLESHOOTING

If you encounter issues with your YISSVIC Electric Food Chopper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; motor unit not correctly installed on lid.	Ensure the power cord is securely plugged in. Test the outlet with another appliance. Re-install the motor unit, ensuring it is properly locked into place.
Motor stops during operation.	Overheating protection activated; too much food in the bowl; food is too hard.	Unplug and let the motor cool for 30 minutes. Reduce the amount of food. Cut hard ingredients into smaller pieces.
Food is not chopped evenly.	Too much food; ingredients stuck to the sides of the bowl.	Process smaller batches. Stop the appliance, unplug, and use the scraper to push food down from the sides, then resume.
Unusual noise or odor.	Motor overload; foreign object in the bowl; damaged blade.	Immediately stop and unplug the appliance. Check for any obstructions. If the issue persists, discontinue use and contact customer support.

SPECIFICATIONS

Technical details for the YISSVIC Electric Food Chopper:

Feature	Detail
Brand	YISSVIC
Model Number	5997
Power	500 Watts
Capacity	2 Liters
Voltage	230 Volts
Material	Stainless Steel
Item Weight	1.53 Kilograms
Product Dimensions (L x W x H)	25 x 20 x 8 cm



Image: A diagram detailing the dimensions of the motor base and the 2L stainless steel bowl, providing a clear understanding of the product's size.

WARRANTY AND SUPPORT

Information regarding specific warranty terms and customer support contact details is not available in the provided product data. Please refer to the product packaging or the retailer's website for warranty information and customer service contacts.