

[Manuals.plus](#) /

› [OZARK](#) /

› OZARK Trail Rapid Rider I River Tube Instruction Manual

OZARK Rapid Rider I

OZARK Trail Rapid Rider I River Tube Instruction Manual

Model: Rapid Rider I | Brand: OZARK

INTRODUCTION

This manual provides essential instructions for the safe and proper use, setup, maintenance, and storage of your OZARK Trail Rapid Rider I River Tube. Please read this manual thoroughly before using the product and retain it for future reference.

The OZARK Trail Rapid Rider I is an inflatable water float designed for recreational use in calm waters. It features a 53-inch diameter, a built-in backrest for comfort, two sturdy handles for stability, a mesh bottom, a grab rope, and a cup holder.

SAFETY INFORMATION

WARNING: This is not a life-saving device. Do not leave children unattended while in use. Always supervise children in and around water. Use only under competent supervision.

- Always inspect the tube for damage before each use.
- Do not over-inflate the tube. Inflate until firm to the touch, but not rigid.
- Keep away from sharp objects, heat sources, and open flames.
- Do not use in rough water, strong currents, or during storms.
- Ensure the user's weight does not exceed the maximum capacity of 200 pounds.
- Do not jump or dive onto the tube.
- Always wear a U.S. Coast Guard-approved personal flotation device (PFD) when using this product.
- Avoid prolonged exposure to direct sunlight when not in use, as this can damage the material.

SETUP

Unpacking and Inspection

1. Carefully remove the Rapid Rider I River Tube from its packaging.
2. Unfold the tube on a clean, flat surface, free from sharp objects.
3. Inspect the entire tube for any signs of damage, punctures, or tears. If damage is found, do not proceed with inflation.

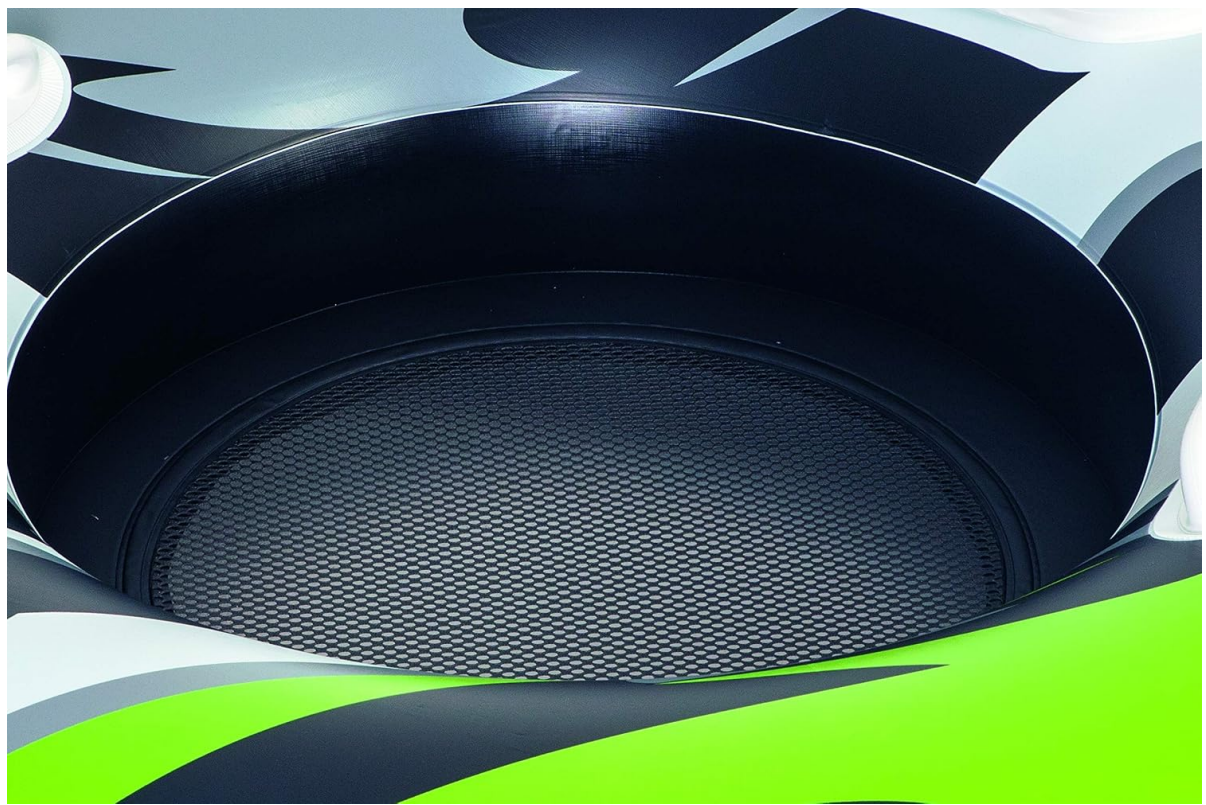


Image: The OZARK Trail Rapid Rider I River Tube in its retail packaging, showing the product features and design.

Inflation

1. Locate the inflation valves on the main body of the tube and the backrest.
2. Open the valve caps.
3. Use a hand or foot air pump (not included) to inflate the main body of the tube. Inflate until the tube is firm to the touch but still has some give. Do not over-inflate.
4. Inflate the backrest separately until it is firm.
5. Securely close all valve caps to prevent air leakage.



Image: A close-up view of the inflated backrest, designed for user comfort.

OPERATING INSTRUCTIONS

Using the River Tube

1. Once fully inflated, carefully enter the tube in shallow water.
2. Sit comfortably with your back against the built-in backrest.
3. Utilize the two sturdy handles for stability and maneuvering.
4. The mesh bottom allows water to pass through, keeping you cool while providing support.
5. The integrated cup holder can be used to secure a beverage.
6. The grab rope can be used to tether to other tubes or for assistance.



Image: A person enjoying the Rapid Rider I River Tube on calm water, demonstrating its use.

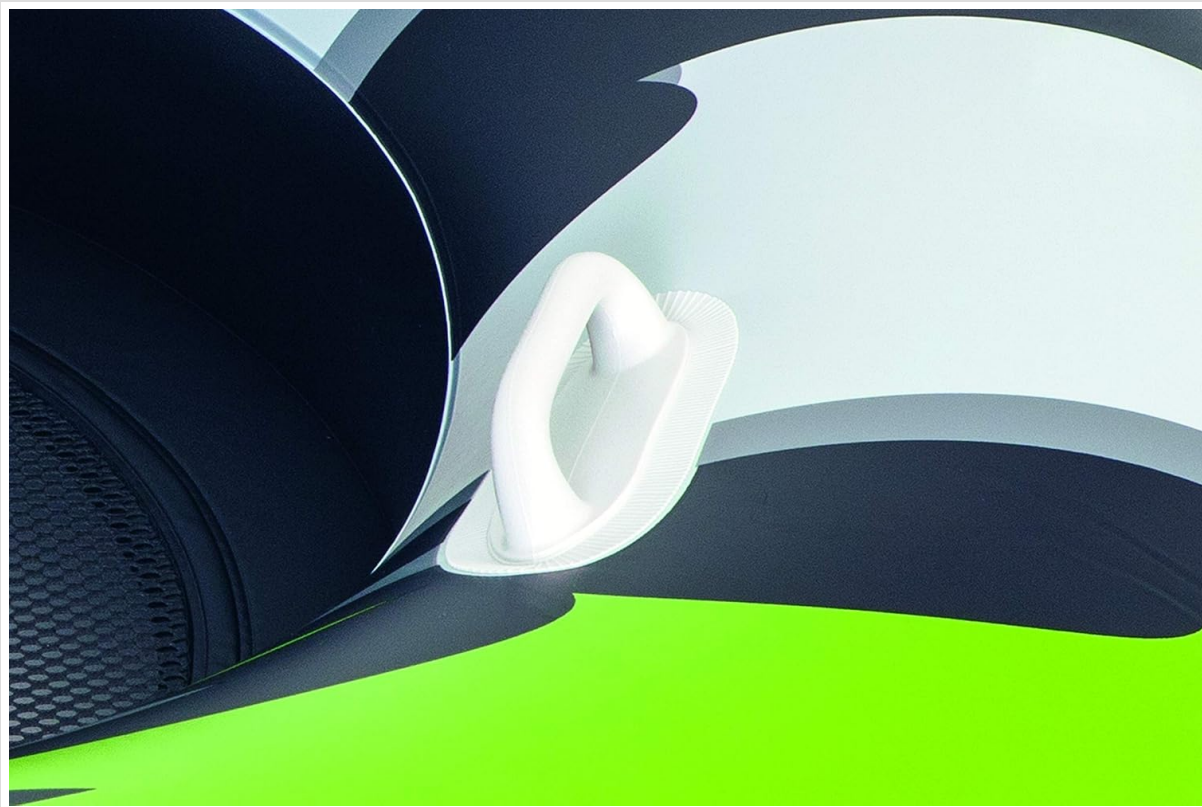


Image: A close-up view of one of the durable handles, providing a secure grip.



Image: A detailed view of the integrated cup holder, designed to keep beverages secure.



Image: A close-up of the attachment point for the grab rope, showing its secure design.



Image: A detailed view of the mesh bottom, which provides comfortable seating and allows water flow.

MAINTENANCE

Cleaning

- After each use, rinse the tube with fresh water to remove chlorine, salt, sand, or dirt.
- Use a mild soap solution and a soft cloth to clean any stubborn stains.
- Do not use harsh chemicals or abrasive cleaners, as these can damage the vinyl material.

Drying and Storage

- Ensure the tube is completely dry before deflating and storing. Drying in the shade is recommended to prevent material degradation.
- To deflate, open the valve caps and gently press on the tube to release air.
- Fold or roll the deflated tube loosely to avoid creases that could lead to cracks over time.

- Store the tube in a cool, dry place, away from direct sunlight, extreme temperatures, and pests.

TROUBLESHOOTING

Air Leakage

- **Check Valve Caps:** Ensure all inflation valve caps are securely closed.
- **Inspect for Punctures:** Inflate the tube and submerge it in water (if possible) or apply soapy water to the surface. Bubbles will indicate a leak.
- **Repairing Small Punctures:** For small punctures, use a vinyl repair kit (not included). Follow the repair kit instructions carefully. Ensure the tube is clean and dry before applying the patch.

Tube Does Not Hold Air

- This usually indicates a significant leak or an improperly sealed valve. Re-check all valves and inspect the entire surface for larger tears. If the damage is extensive, the tube may not be repairable.

SPECIFICATIONS

Model	Rapid Rider I
Brand	OZARK
Product Type	Inflatable River Tube / Water Float
Material	Vinyl
Dimensions (Inflated)	53 inches L x 53 inches W (134.6 cm L x 134.6 cm W)
Item Weight	4.19 Pounds (1.9 kg)
Weight Capacity	200 Pounds (90.7 kg)
Color	Green and White (with black accents)
Features	Built-in backrest, 2 heavy-duty handles, mesh bottom, grab rope, cup holder
Age Range	Adult
UPC	821808012879

WARRANTY AND SUPPORT

Specific warranty information for the OZARK Trail Rapid Rider I River Tube is not provided in this manual. Please refer to the product packaging or contact OZARK customer support directly for details regarding warranty coverage and support services.

For further assistance or inquiries, please visit the official OZARK website or contact their customer service department.

© 2024 OZARK. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.