

Moongiantgo LMW-43-1

Moongiantgo Portable High-Temperature Steam Cleaner LMW-43-1 Instruction Manual

Model: LMW-43-1

1. SAFETY INFORMATION

Please read all safety instructions carefully before using the Moongiantgo Portable High-Temperature Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the power switch is off before connecting or disconnecting the power cord.
- Do not immerse the appliance in water or other liquids.
- Keep children and pets away from the appliance during operation, especially when steam is being discharged.
- The steam is extremely hot (up to 226.4°F / 108°C). Avoid direct contact with skin or eyes.
- Use only clean water. Do not add chemical detergents, perfumes, or other substances to the water tank, as this may damage the appliance or produce harmful fumes.
- Ensure the water tank cap is securely tightened before operating.
- Unplug the appliance when not in use and before cleaning or performing maintenance.
- Do not operate the appliance if the power cord or plug is damaged.

2. PRODUCT OVERVIEW

The Moongiantgo Portable High-Temperature Steam Cleaner (Model: LMW-43-1) is a compact and efficient cleaning device designed for various household tasks. It uses high-temperature steam to clean and disinfect surfaces without the need for chemical detergents.

Key Features:

- **High Power Output:** Quickly discharges high-temperature steam in 20 seconds for convenient cleaning.
- **No Detergent Needed:** Cleans and disinfects using only water, making it environmentally friendly and safe for households with children and pets.

- **Continuous Steam:** Provides continuous 100°C (212°F) steam for efficient cleaning and sanitization.
- **Convenient Water Supply:** Features a water supply hose for direct water intake from a bucket or water tank, eliminating frequent refills.
- **Adjustable Steam Humidity:** A knob allows you to adjust the steam spray humidity according to your cleaning needs.
- **Portable Design:** Lightweight (2.5 kg) and designed for easy, one-handed lifting and storage.

Components:

Familiarize yourself with the parts of your steam cleaner:



Image: Diagram showing the main unit, spray gun, steam hose, water supply hose, power cord, and dimensions (200mm x 90mm x 120mm for main unit, 420mm x 110mm x 300mm for storage case).



Image: Detailed diagram illustrating internal components like pressure switch, control panel, heater, water pump, and external parts such as handle, waterproof power switch, humidity adjustment knob, steam hose, water supply hose, and spray gun.

Included Accessories:



Image: A collection of accessories including a storage case, gloves, towel, flashlight (battery not included), various nozzles/brushes, and the main unit.

3. SETUP

1. **Prepare Water Supply:** Place the water supply hose into a bucket or water tank filled with clean water.
2. **Connect Power:** Plug the power cord into a suitable electrical outlet (110V).
3. **Power On:** Turn on the main power switch located on the unit. The red indicator light will illuminate.
4. **Wait for Heating:** Wait approximately 20 seconds for the unit to heat up. The green indicator light will illuminate when the steam is ready.
5. **Attach Desired Nozzle/Brush:** Select the appropriate nozzle or brush for your cleaning task and securely attach it to the spray gun.

アクセサリ

場所に合わせてご利用いただけます。



セット内容

1. 収納ケース
2. 手袋
3. タオル
4. 懐中電灯（バッテリー別購入）
5. アクセサリ
6. 本体



Image: Visual guide showing steps for water supply, plugging in, adjusting humidity knob, turning on power, and spraying steam.

Video: G-KiKi Steam Cleaner Handling Method

Your browser does not support the video tag.

Video Description: This video demonstrates how to handle the G-KiKi Steam Cleaner, including tank removal, installation, water filling, cleaning the dirty water tank, hose winding, and power cord storage. It also shows how to attach and remove various heads and clean them.

4. OPERATING INSTRUCTIONS

1. **Adjust Steam Humidity:** Rotate the knob on the main unit to adjust the steam spray humidity (refer to the diagram on the unit for settings).
2. **Start Steam Spray:** Press the trigger on the spray gun to release steam. For continuous steam, engage the lock mechanism on the handle.
3. **Cleaning Surfaces:** Hold the nozzle close to the surface you wish to clean. Move the nozzle slowly to allow the steam to penetrate and loosen dirt.
4. **Using Accessories:** Utilize different brushes and nozzles for specific cleaning tasks, such as gap brushes for grout or wider brushes for larger surfaces.

Usage Examples:

アクセサリー

場所に合わせてご利用いただけます



Image: Demonstrates the steam cleaner being used with different attachments for cleaning kitchen surfaces, windows, and other areas.



Image: Before and after comparison of cleaning a range hood filter, a dirty wall, and a car windshield using the steam cleaner, showing effective dirt removal.

Video: Multi-functional Steam Cleaner in Action

Your browser does not support the video tag.

Video Description: This video showcases the multi-functional steam cleaner being used for various cleaning tasks around the house, including sofas, floors, grout, and kitchen appliances. It highlights the ease of use and effectiveness of steam cleaning.

Video: High-Temperature Steam Cleaner Demonstration

Your browser does not support the video tag.

Video Description: This video demonstrates the powerful high-temperature steam cleaning capabilities of the device, showing it effectively removing dirt and grime from various surfaces.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your steam cleaner.

- **Empty Water Tank:** After each use, empty any remaining water from the water tank.
- **Clean Accessories:** Wash and dry all used nozzles, brushes, and cloths.
- **Descaling (if necessary):** If you notice reduced steam output or mineral buildup, descale the machine. A solution of white vinegar or citric acid can be used. Follow the instructions in the detailed manual for descaling.
- **Storage:** Store the appliance and its accessories in the provided storage case in a cool, dry place.

6. TROUBLESHOOTING

If you encounter any issues with your steam cleaner, please refer to the following common solutions:

- **No Steam Output:** Check if the power is connected and the unit is turned on. Ensure the water tank has sufficient water and the unit has heated up (green light on).
- **Weak Steam:** The water tank might be low, or descaling may be required. Ensure the nozzle is not clogged.
- **Water Leakage:** Check that all attachments are securely fastened and rubber rings are properly seated.

For more detailed troubleshooting, please consult the full Japanese instruction manual or contact customer support.

7. SPECIFICATIONS

Attribute	Value
Brand	Moongiantgo
Model Number	LMW-43-1
Item Weight	2.5 Kilograms
Form Factor	Handheld
Heating Time	20 Seconds
Voltage	110 Volts
Maximum Temperature	226.4 Fahrenheit (approx. 108°C)
Recommended Surface Type	Windows, Kitchen, Toilet, Floors, Carpets, Curtains
Color	Spray Gun (variant)
Product Style	Portable
GTIN / UPC	757173844930

8. WARRANTY AND SUPPORT

Moongiantgo products come with a 1-year warranty period to ensure your peace of mind. We strive to provide

high-quality products and excellent customer service.

For any questions, support, or warranty claims, please contact Moongiantgo customer service through your purchase platform or refer to the contact information provided in the original product packaging.

For order-related inquiries, please contact us via your order history page: Order History > Product > Seller (Moongiantgo 2020JP) > 'Ask a Question'.