

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs Replacement Remote Control User Manual for LG AN-MR650 / AN-MR600 Series TVs (Model Dpofirsoziakr4qm3)

Dpofirs Dpofirsoziakr4qm3

Dpofirs Replacement Remote Control User Manual

Model: Dpofirsoziakr4qm3

Compatible with LG AN-MR650, 42LF652v, AN-MR600, 55UF8507 Series TVs

1. INTRODUCTION AND OVERVIEW

This manual provides comprehensive instructions for the Dpofirs Replacement Remote Control, Model Dpofirsoziakr4qm3. This remote is designed as a functional replacement for original remote controls of various LG TV models, including AN-MR650, 42LF652v, AN-MR600, and 55UF8507. It offers essential control over your television, providing a convenient solution for lost or damaged original units.



Image 1.1: The Dpofirs Replacement Remote Control with its USB receiver.

Important Note:

This is a basic replacement remote control. While it offers broad compatibility and essential functions, there may be differences in advanced features or specific button layouts compared to your original TV remote. Please refer to your TV's original manual for specific advanced functionalities.

2. FEATURES

- **Durable Construction:** Made from high-quality ABS material, ensuring wear-resistance and a comfortable grip for extended use.
- **Extended Control Range:** Operates effectively up to approximately 10 meters (33 feet). Actual control distance may vary based on environmental factors and your specific TV model.
- **Direct Replacement:** Serves as an ideal replacement for lost, damaged, or malfunctioning original remote controls.
- **Broad Compatibility:** Specifically designed to be compatible with LG AN-MR650, 42LF652v, AN-MR600, and 55UF8507 series televisions.
- **Simple Power Source:** Requires two (2) AA batteries for operation (batteries not included).

3. PACKAGE CONTENTS

Upon opening your Dpofirs Replacement Remote Control package, please verify that all items listed below are present and in good condition:

- 1 x Dpofirs Replacement Remote Control
- 1 x USB Receiver Dongle



Image 3.1: Contents of the Dpofirs Replacement Remote Control package.



Image 3.2: Detailed view of the USB receiver dongle.

4. SETUP INSTRUCTIONS

Follow these steps to set up your Dpofirs Replacement Remote Control:

1. Install Batteries:

- Open the battery compartment cover located on the back of the remote control.
- Insert two (2) AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
- Close the battery compartment cover securely.



Image 4.1: Installing batteries into the remote control.

2. Connect USB Receiver:

- Locate an available USB port on your LG television.
- Insert the provided USB receiver dongle firmly into the USB port.
- Your TV should automatically detect the receiver. No additional drivers or software installation are typically required.

3. Initial Pairing (if necessary):

- In most cases, the remote will function immediately after the USB receiver is connected.
- If the remote does not respond, try pressing the **Power** button or the **Home** button once to initiate pairing.
- Ensure there is a clear line of sight between the remote and the TV.

Your browser does not support the video tag.

Video 4.1: A demonstration of installing batteries and basic operation of the Dpofirs Replacement Remote Control.

5. OPERATING INSTRUCTIONS

Once set up, the Dpofirs Replacement Remote Control allows you to operate your compatible LG TV. Familiarize yourself with the button layout and their functions:



Image 5.1: Proper handling of the remote control during operation.

- **Power Button (Red Circle):** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (VOL +/-):** Adjusts the television's volume level.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Mute Button (Speaker with X):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up/Down/Left/Right/OK):** Used to navigate menus and confirm selections.
- **Pointer Function:** This remote may feature a pointer function. Move the remote to control an on-screen cursor. Press the **OK** button to select.
- **Back/Exit:** Returns to the previous screen or exits the current menu.
- **Home Button (House Icon):** Accesses the TV's main home screen or smart features.
- **Special Function Buttons (e.g., 3D, Guide, Colored Buttons, STB Menu, Recent):** These buttons provide access to specific TV functions or applications. Their exact functionality may depend on your TV model and its software.

Ensure a clear line of sight between the remote control and the TV for optimal performance. Obstructions can interfere with the signal.

6. MAINTENANCE

Proper care and maintenance will extend the life of your remote control:

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

7. TROUBLESHOOTING

If you encounter issues with your Dpofirs Replacement Remote Control, please refer to the following troubleshooting steps:

Problem	Possible Cause	Solution
Remote not responding or intermittent response.	Dead or low batteries; incorrect battery installation; USB receiver not properly connected; obstruction between remote and TV; remote out of range.	Replace batteries with new AA batteries, ensuring correct polarity. Ensure the USB receiver is fully inserted into a TV USB port. Remove any objects blocking the line of sight to the TV. Move closer to the TV (within 10m/33ft).
Pointer/mouse function is erratic or not working.	Interference; remote not calibrated; TV settings.	Ensure no strong light sources or other devices are causing interference. Some TVs allow recalibration of the pointer in settings. Check your TV's settings for pointer options.
Certain buttons do not work or perform unexpected functions.	Compatibility limitations; TV model specific functions.	This remote is a replacement and may not replicate all advanced or unique functions of an original remote. Refer to your TV's original manual for specific button functions.
TV does not recognize the remote.	USB receiver issue; TV compatibility.	Try inserting the USB receiver into a different USB port on the TV. Ensure your TV model is listed as compatible. Restart the TV by unplugging it for 30 seconds and plugging it back in.

If the problem persists after trying these solutions, please contact the retailer or manufacturer for further assistance.

8. SPECIFICATIONS

Brand:

Dpofirs

Model Number:

Dpofirsoziakr4qm3

Compatible Devices:

Television (LG AN-MR650, 42LF652v, AN-MR600, 55UF8507 Series)

Material:

ABS

Color:

Black

Special Feature:

Universal Replacement

Maximum Control Distance:

Approximately 10m / 33ft

Power Source:

2 x AA Batteries (not included)

Item Weight:

5 ounces

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the specific policies provided by your retailer or visit the official Dpofirs manufacturer website. Keep your purchase receipt as proof of purchase for any warranty claims.

