



[Manuals.plus](#) /

› [ZecRek](#) /

› ZecRek Bluetooth Beanie User Manual

ZecRek B095YYZJMR

ZecRek Bluetooth Beanie User Manual

Model: B095YYZJMR

INTRODUCTION

Thank you for choosing the ZecRek Bluetooth Beanie. This product combines a comfortable winter hat with integrated Bluetooth headphones, allowing you to enjoy music and hands-free calls while staying warm. It features an upgraded Bluetooth chip for stable connectivity, a long-lasting battery, and high-quality speakers. This manual provides instructions for proper setup, operation, and maintenance to ensure optimal performance and longevity of your device.



Image: The ZecRek Bluetooth Beanie, shown in black and white knit, accompanied by a matching neck warmer. This image highlights the product's dual functionality for warmth and audio.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- ZecRek Bluetooth Beanie
- Polar Fleece Neck Warmer
- USB Charging Cable
- User Manual (this document)

SETUP


1. Initial Charging

Before first use, fully charge the Bluetooth beanie. Connect the provided USB charging cable to the charging port located on the control panel of the beanie. Connect the other end to a standard USB power adapter (not included) or a computer's USB port. The indicator light will show charging status and turn off or change color when fully charged.

2. Bluetooth Pairing

1. Ensure the beanie is charged and powered off.
2. Press and hold the Power button on the control panel for approximately 3-5 seconds until the indicator light flashes blue and red, indicating pairing mode.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices. The beanie will appear as "BT-Music" or similar.
5. Select "BT-Music" to connect. Once connected, the indicator light will typically flash blue slowly or turn solid blue.
6. If prompted for a password, enter "0000".

The beanie should automatically reconnect to the last paired device when powered on, if the device's Bluetooth is active and within range.

ZECREK		Other Brand
Upgraded Bluetooth Chip		Cheap Chip
Connected in 3s		> 8s
Upto 33 feet		< 20 feet
Never Drop off		Unstable Connection
Lifetime Warranted Durability		One-time Sale




Image: A diagram illustrating the upgraded Bluetooth chip (RDA) and its stable connection to a smartphone, contrasting it with a generic chip and unstable connection. This highlights the beanie's reliable wireless technology.

OPERATING INSTRUCTIONS

The control panel is located on the right side of the beanie for easy access.

Control Panel Functions

Button/Action	Function
Power Button (Center)	Press and hold for 3-5 seconds: Power On/Off, Enter Pairing Mode Short press: Play/Pause music, Answer/End call
Volume Up / Next Track (+)	Short press: Increase Volume Press and hold: Next Track
Volume Down / Previous Track (-)	Short press: Decrease Volume Press and hold: Previous Track

ZECREK INNOVATED ERGONOMIC DESIGN with right side controller

Other brands are on left side
not User-friendly



Image: A person wearing the ZecRek Bluetooth Beanie, with the control panel clearly visible on the right side. This illustrates the ergonomic design and convenient placement of controls.

Battery Life

The beanie is equipped with a 250mAh battery, providing up to 20 hours of music playback on a single charge. Actual battery life may vary based on volume level and usage.

ZECREK

**THE BEST BATTERY
with 250mAh
Offers
upto 20HRS play time**



Other brands

**Common Battery
with 150mAh
Offers
6HRS Only**



A Fully  =  Working Time

Image: A graphic depicting various outdoor activities (running, skiing, cycling) with a battery icon indicating "20h Working Time," emphasizing the extended battery life of the ZecRek Bluetooth Beanie.

MAINTENANCE

Cleaning Instructions

The ZecRek Bluetooth Beanie is washable, but the electronic components must be removed first.

1. Carefully locate the small opening inside the beanie where the speakers and control panel are inserted.
2. Gently remove both speaker units and the control panel module from their pockets within the beanie.
3. Once all electronic components are removed, the beanie fabric can be machine washed. Follow standard machine wash instructions for knitwear (e.g., cold water, gentle cycle).
4. Allow the beanie to air dry completely before reinserting the electronic components.
5. Reinsert the speakers and control panel into their designated pockets, ensuring the control panel is on the right side and the speakers are positioned over your ears.

Washable When Headphones Are Removed



Image: A close-up of hands carefully removing a speaker module from inside the beanie, with a washing machine in the background. This demonstrates the process for preparing the beanie for washing.

Storage

Store the beanie in a cool, dry place when not in use. Avoid extreme temperatures and direct sunlight, which can affect battery life and material integrity.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause / Solution
Cannot Power On	Battery is depleted. Charge the beanie fully. Ensure the power button is pressed and held for 3-5 seconds.

Problem	Possible Cause / Solution
Cannot Pair with Device	<p>Ensure the beanie is in pairing mode (flashing blue/red light).</p> <p>Make sure Bluetooth is enabled on your device.</p> <p>Move the beanie closer to your device (within 33 feet).</p> <p>Turn off and on Bluetooth on your device, then try pairing again.</p> <p>Forget "BT-Music" from your device's Bluetooth list and re-pair.</p>
No Sound or Low Volume	<p>Increase volume on both the beanie and your connected device.</p> <p>Ensure the beanie is properly connected to your device.</p> <p>Check if the speakers are correctly positioned over your ears inside the beanie.</p>
Choppy or Stuttering Audio	<p>Move closer to your connected device to reduce interference.</p> <p>Ensure there are no major obstructions between the beanie and your device.</p> <p>Disconnect and reconnect the Bluetooth connection.</p> <p>Restart both the beanie and your connected device.</p>

SPECIFICATIONS

- **Model:** B095YYZJMR
- **Brand:** ZecRek
- **Bluetooth Range:** Up to 33 feet (10 meters)
- **Battery:** 250mAh Lithium Ion (included)
- **Playback Time:** Up to 20 hours (at 50% volume)
- **Speaker Output:** Up to 120 dB
- **Material:** Cotton, Polar Fleece
- **Care Instructions:** Machine Wash (electronics removed)
- **Dimensions:** 8.31 x 5.51 x 2.95 inches (Package)
- **Weight:** 5.61 ounces (Package)
- **UPC:** 769894964774
- **First Available Date:** July 20, 2020

WARRANTY AND SUPPORT

ZecRek products are designed for durability and performance. For any questions, technical support, or warranty claims, please contact ZecRek customer service through the retailer where the product was purchased or visit the official ZecRek website for contact information. Please retain your proof of purchase for warranty service.

For more information, you may visit the [ZecRek Brand Page on Amazon](#).