

[Manuals.plus](#) /

> [Bissell](#) /

> Bissell SpotClean ProHeat Portable Carpet Cleaner Instruction Manual

## Bissell SpotClean ProHeat Blue 2694B

# Bissell SpotClean ProHeat Portable Carpet Cleaner

Model: SpotClean ProHeat Blue 2694B  
For Carpet and Upholstery

## IMPORTANT SAFETY INSTRUCTIONS

---

**WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.**

- Always connect to a properly grounded outlet.
- Do not immerse. Use only on surfaces moistened by the cleaning process.
- Use only BISSELL cleaning formulas intended for use with this machine.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Turn off all controls before unplugging.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without filters in place.
- Do not modify the grounded plug.

- Unplug before connecting or disconnecting tools.

## PRODUCT OVERVIEW

---

### Components

The Bissell SpotClean ProHeat comes with the following components:

- Main Unit (Portable Carpet Cleaner)
- Hose with Spray Trigger
- 3-Inch Tough Stain Tool
- 3-in-1 Stair Tool
- HydroRinse Self-Cleaning Tool
- Trial-Size PRO OXY Spot & Stain Formula



Image: The Bissell SpotClean ProHeat unit, showing the main cleaner, the HydroRinse tool, the 3-in-1 stair tool, and the trial-size PRO OXY Spot & Stain formula bottle.

## Key Features

- **HeatWave Technology:** Maintains consistent water temperature for effective cleaning.
- **HydroRinse Self-Cleaning Tool:** Allows for easy rinsing of the hose after each use to prevent buildup and odors.
- **Compact and Portable Design:** Lightweight for easy transport and storage.
- **Versatile Tools:** Includes a 3-inch tough stain tool and a 3-in-1 stair tool for various cleaning needs.
- **Powerful Suction:** Designed to permanently remove tough spots and stains.



Image: A view of the Bissell SpotClean ProHeat unit highlighting the internal Heatwave Technology, which helps maintain water temperature during cleaning.



Image: The included trial-size PRO OXY Spot & Stain formula bottle, the 3-inch tough stain tool, and the HydroRinse self-cleaning tool.

## Intended Use

The Bissell SpotClean ProHeat is designed for cleaning spots and stains on various surfaces, including:

- Upholstery
- Carpets & Rugs
- Stairs
- Auto Interiors



Image: Visual representation of the surfaces the SpotClean ProHeat can be used on: upholstery, carpets and rugs, stairs, and auto interiors.

## SETUP

---

### Assembly

1. Unpack the unit and ensure all components are present.
2. Attach the hose to the unit by aligning the hose connector with the port on the front of the machine and twisting clockwise until it locks into place.
3. Select the desired cleaning tool (3-inch tough stain tool or 3-in-1 stair tool) and attach it to the end of the hose until it clicks securely.

## Filling the Clean Water Tank

1. Remove the clean water tank from the back of the machine by lifting it straight up.
2. Unscrew the black cap at the bottom of the tank.
3. Fill the tank with hot tap water (not boiling) to the 'WATER' fill line.
4. Add BISSELL PRO OXY Spot & Stain formula to the 'FORMULA' fill line. Do not overfill.
5. Replace the black cap and tighten securely.
6. Place the clean water tank back onto the machine, ensuring it is seated firmly.

## OPERATING INSTRUCTIONS

---

### Preparing the Area

- Vacuum the area to be cleaned to remove loose dirt and debris.
- Test a small, inconspicuous area for colorfastness before cleaning. If color is affected, do not use.

### Spot Cleaning

1. Plug the machine into a grounded electrical outlet.
2. Hold the cleaning tool approximately 1 inch above the soiled surface.
3. Press the spray trigger to apply cleaning solution to the stain.
4. Gently scrub the stain with the brush on the tool.
5. Apply downward pressure on the tool and pull it slowly towards you to suction up the dirty solution. Repeat as necessary until the stain is removed.
6. For best results, make several passes over the area without pressing the spray trigger to ensure maximum suction and drying.



# Permanently Removes Spots & Stains

Image: A person using the Bissell SpotClean ProHeat to clean a spot on a carpet, demonstrating its effectiveness in removing stains.



Image: A person utilizing the lightweight and compact design of the Bissell SpotClean ProHeat to clean carpeted stairs.

## MAINTENANCE

---

### Emptying and Cleaning the Dirty Water Tank

1. Remove the dirty water tank from the front of the machine.
2. Unlatch the tank lid and pour out the dirty water.
3. Rinse the tank thoroughly with clean water.
4. Clean the red float stack filter inside the tank by rinsing it under running water.
5. Allow the tank and filter to air dry before reassembling.

### Cleaning the Nozzle

- The nozzle on the cleaning tool can be removed for cleaning. Press the release button (if applicable) and slide the nozzle off.
- Rinse the nozzle under running water to remove any debris or buildup.

- Ensure the spray tip is clear of obstructions.
- Reattach the nozzle securely after cleaning.

## Using the HydroRinse Tool

1. After cleaning, remove the cleaning tool from the hose.
2. Attach the HydroRinse self-cleaning tool to the end of the hose.
3. Place the HydroRinse tool into a sink or bucket.
4. Turn on the machine and press the spray trigger for 10-15 seconds to flush clean water through the hose, removing dirt and odors.
5. Release the trigger and turn off the machine.
6. Remove the HydroRinse tool and store the hose.

## Storage

- Ensure both clean and dirty water tanks are empty and clean before storage.
- Wrap the power cord neatly around the cord wrap.
- Store the machine in a dry, protected area at room temperature. Do not store where freezing may occur.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced spray or no spray	Clean water tank empty Tank not seated properly Pump prime lost Spray nozzle clogged	Refill clean water tank Remove and reseal tank Turn off, then turn on and press spray trigger for 30 seconds Clean spray nozzle
Cleaner not picking up solution	Dirty water tank full Dirty water tank lid not seated properly Hose not securely attached Tool not properly attached Red float stack filter clogged	Empty dirty water tank Remove and reseal tank lid Ensure hose is locked into place Reattach tool securely Clean red float stack filter
Machine not turning on	Power cord not securely plugged in Blown fuse/tripped circuit breaker	Ensure plug is fully inserted into outlet Check/reset fuse or circuit breaker

## SPECIFICATIONS

Feature	Detail
Model Name	SpotClean ProHeat Blue
Item Weight	4.17 kg
Product Dimensions	16.5D x 30.5W x 36.8H Centimetres
Form Factor	Handheld
Power Source	Corded Electric
Liquid Capacity	Approx. 1.05 kg (water/solution)
Assembly Required	Yes
Included Components	3-in-1 Stair Tool, 3-Inch Tough Stain Tool, HydroRinse Tool

Feature	Detail
UPC	011120258493

## WARRANTY AND SUPPORT

---

### Warranty Information

This Bissell SpotClean ProHeat portable carpet cleaner comes with a **3 Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use. Please refer to the warranty card included with your product for full terms and conditions, including exclusions and limitations.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact Bissell Customer Service. Contact information can typically be found on the Bissell website or on the product packaging.