

Reveal Reveal TWS

Reveal TWS True Wireless Stereo Bluetooth Earbuds User Manual

Model: Reveal TWS

[Introduction](#)

[What's in the Box](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

The Reveal TWS True Wireless Stereo Bluetooth Earbuds provide a wireless audio experience with touch controls and a portable charging case. These earbuds are designed for comfort and convenience, featuring Bluetooth 5.0 technology for stable connectivity and a sweatproof design suitable for active use.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 2 x Earphones (Left and Right Earbuds)
- 1 x Charging Case
- 1 x Micro USB Charging Cable



Image: Two Reveal TWS earbuds, showing their wood-inspired design.



Image: The Reveal TWS charging case, featuring a wood-inspired finish and a micro USB port.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the earbuds and the charging case. The charging case can be charged using the supplied micro USB cable or wirelessly on a Qi-enabled wireless charging pad.

1. Place the earbuds into the charging case.
2. Connect the micro USB cable to the charging case and a power source, or place the case on a wireless charging pad.
3. The indicator light on the case will show charging status.

A fully charged case can recharge the earbuds approximately 5 times, providing up to 20 hours of total music playback.

3.2 Pairing with a Device

The earbuds will automatically turn on and connect to each other when removed from the charging case.

1. Open the charging case and remove both earbuds. They will automatically enter pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings.
3. Search for available devices and select "Reveal TWS" from the list.
4. Once connected, you will hear an audio confirmation, and the earbuds' indicator lights will change.

The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.

4. OPERATING INSTRUCTIONS

4.1 Touch Controls

The Reveal TWS earbuds feature touch controls on the outer surface of each earbud. Specific functions may vary slightly by device, but common controls include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud (e.g., Siri, Google Assistant).

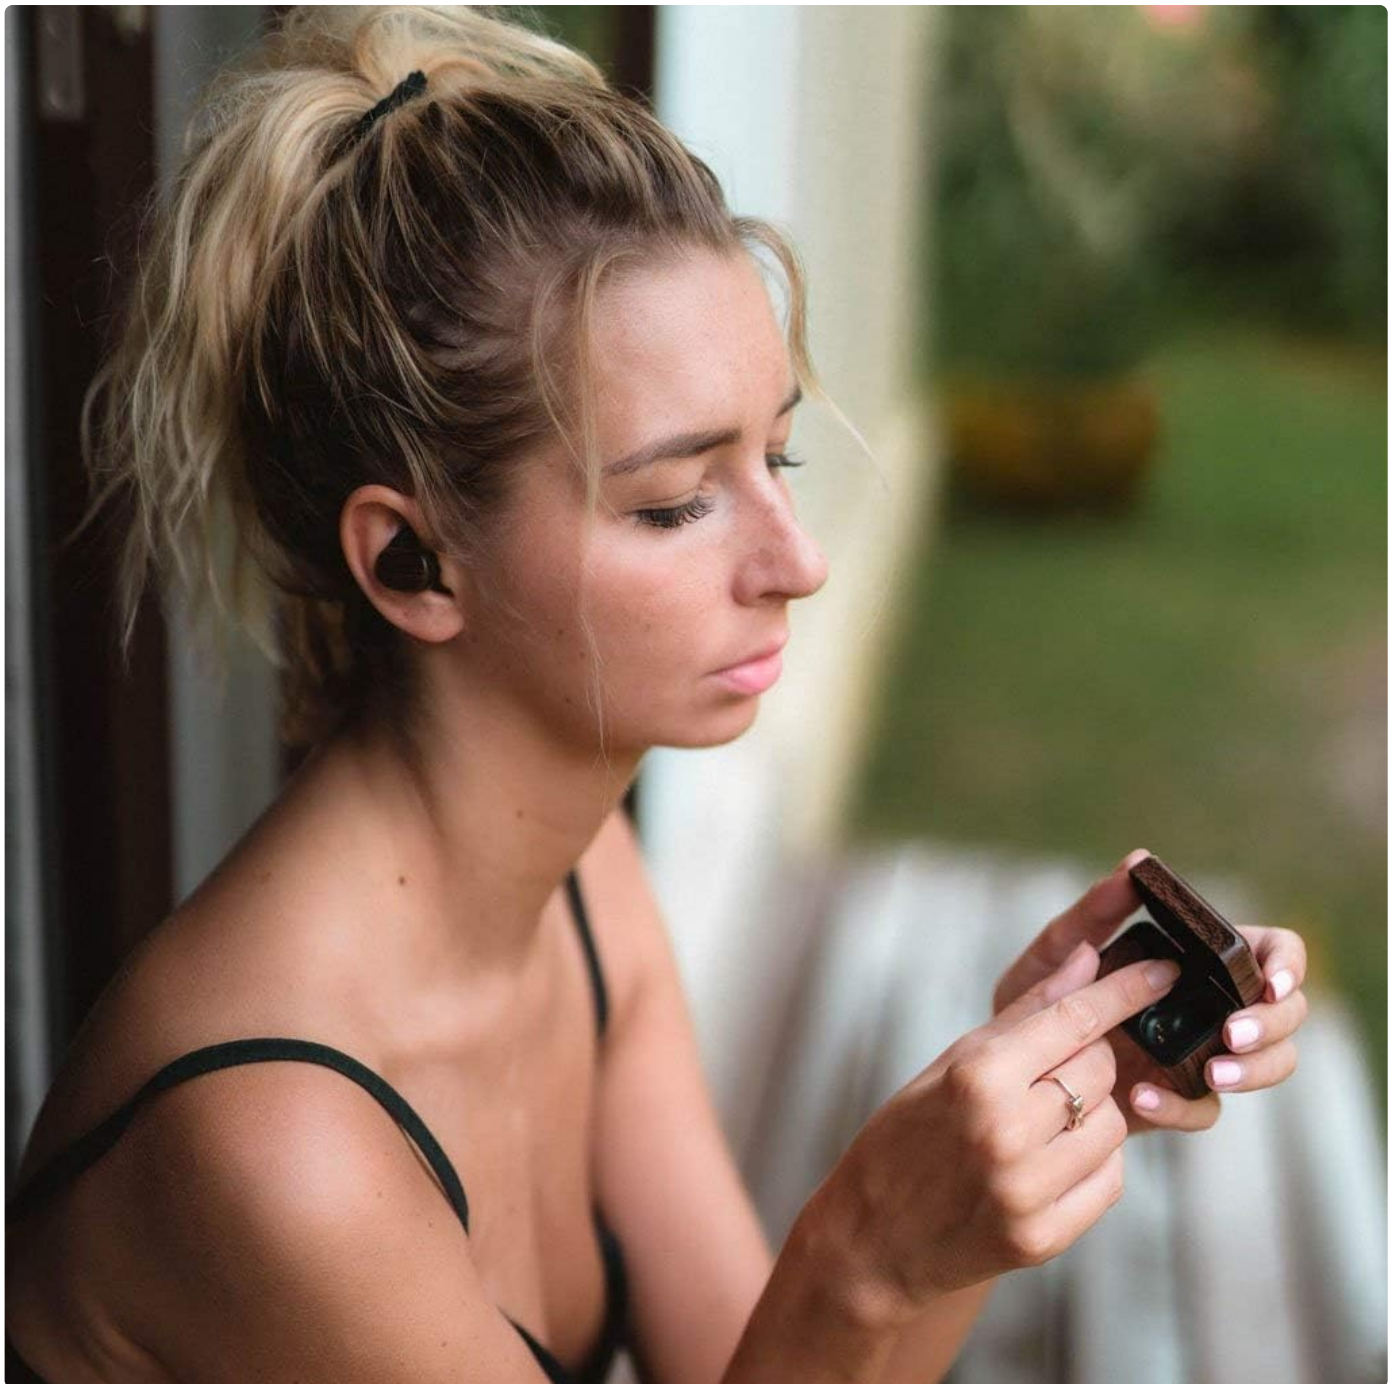


Image: A person wearing a Reveal TWS earbud, demonstrating its in-ear fit.

4.2 Power On/Off

- **Power On:** Remove earbuds from the charging case. They will power on automatically.
- **Power Off:** Place earbuds back into the charging case. They will power off and begin charging automatically.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Reveal TWS earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are sweatproof. Avoid submerging them in water or exposing them to heavy rain. Dry them thoroughly if they get wet.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Temperature:** Avoid exposing the earbuds to extreme temperatures (hot or cold) as this can affect battery life and

performance.

6. TROUBLESHOOTING

If you encounter issues with your Reveal TWS earbuds, refer to the following common solutions:

Problem	Solution
Earbuds not pairing with device.	Ensure earbuds are fully charged. Make sure Bluetooth is enabled on your device. Forget "Reveal TWS" from your device's Bluetooth list and try pairing again. Place earbuds back in the case, close it, then open and remove them to re-enter pairing mode.
Only one earbud is working.	Place both earbuds back into the charging case, close the lid, then open and remove them simultaneously. Ensure both earbuds are charged.
Earbuds not charging.	Ensure the charging cable is securely connected to both the case and the power source. If using wireless charging, ensure the case is correctly positioned on the Qi-enabled pad. Clean the charging contacts on both the earbuds and inside the case.
Poor sound quality.	Ensure earbuds are properly seated in your ears. Check the audio source device for volume and sound settings. Move closer to your paired device to avoid interference.

7. SPECIFICATIONS

Feature	Detail
Brand	Reveal
Model Name	Reveal TWS
Connectivity Technology	Wireless (Bluetooth 5.0)
Ear Placement	In Ear
Form Factor	In Ear
Control Type	Touch Control
Noise Control	Active Noise Cancellation
Battery Average Life (Earbuds)	4 Hours
Charging Case Playtime	Up to 20 Hours (with case recharges)
Item Weight	0.07 Kilograms
Water Resistance Level	Water Resistant (Sweatproof)
Enclosure Material	Wood
Compatible Devices	Bluetooth Compatible Devices such as Smartphones, Tablets and Computers

8. WARRANTY AND SUPPORT

The Reveal TWS True Wireless Stereo Bluetooth Earbuds come with a **1 Year Warranty**. For warranty claims or technical support, please contact Reveal customer service.

You can find more information and support on the official Reveal store page: [Reveal Store](#).

9. PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the Reveal Wood Grain TWS Bluetooth Wireless Earbuds in use, highlighting features like sound quality, touch controls, portable charging, and sweatproof design.

© 2023 Reveal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question