

[Manuals.plus](#) /

› [RPNB](#) /

› RPNB Deluxe Safe and Lock Box User Manual

## RPNB RP36ESA

# RPNB Deluxe Safe and Lock Box

MODEL: RP36ESA

Brand: RPNB

## 1. IMPORTANT SAFETY INFORMATION

---

Please read all instructions carefully before operating your RPNB safe. Keep this manual for future reference.

### Warning:

Check TSA regulations and airline policies before traveling with any portable safe. Do not store loaded firearms in any safe or lock box. Follow local laws for firearm storage.

## 2. PRODUCT OVERVIEW

---

The RPNB Deluxe Safe is designed to provide secure storage for your valuables. It features a reinforced solid steel wall structure and a digital keypad for easy access, complemented by backup keys for reliability.



Figure 2.1: RPNB Deluxe Safe with door open, revealing the spacious interior and a removable shelf holding various items.



Figure 2.2: The RPNB Deluxe Safe seamlessly integrated into a home environment, demonstrating its compact and discreet design.

## Key Features:

- **Strong & Secure:** Constructed from reinforced solid steel, featuring a double-cylinder latch for enhanced security against forced entry.
- **Smart Capacity:** Offers 1.2 cubic feet of storage, with exterior dimensions of 14.15"H × 12.97"W × 12.97"D and interior dimensions of 14.06"H × 12.87"W × 10.63"D, providing ample space for valuables.
- **Easy Operation:** Can be opened using a digital code (3 to 8 digits) or backup keys. Features three different colored indicator lights to show the safe's status (warning, correct, low power).
- **Easy to Install:** Operates on 4 AA batteries (not included) for the digital panel. Includes pre-drilled mounting holes and hardware for secure installation in various locations.
- **Removable Shelf:** The interior includes a removable shelf to customize storage space according to your needs.

## Product Video:

Your browser does not support the video tag.

Video 2.3: An official RPNB video demonstrating the features and operation of the ESA Series Electronic Digital Security Home Safe, including its robust construction and ease of use.

### 3. SETUP INSTRUCTIONS

#### 3.1 Battery Installation

1. Locate the battery compartment on the inside of the safe door.
2. Insert 4 AA batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

**Note:** Use good quality alkaline batteries for optimal performance and longevity. Poor quality batteries may cause the digital lock to malfunction.

#### 3.2 Setting Your Digital Code

The safe comes with a factory default code. It is highly recommended to change this to a personal code immediately after battery installation.

1. With the safe door open, press the red reset button located on the inside of the door, near the hinge. You will hear a beep.
2. Within 5 seconds, enter your desired 3 to 8 digit code on the keypad.
3. Press the "E" or "#" button to confirm your new code. You will hear a confirmation beep.
4. Test your new code with the door open to ensure it works correctly before closing the safe.

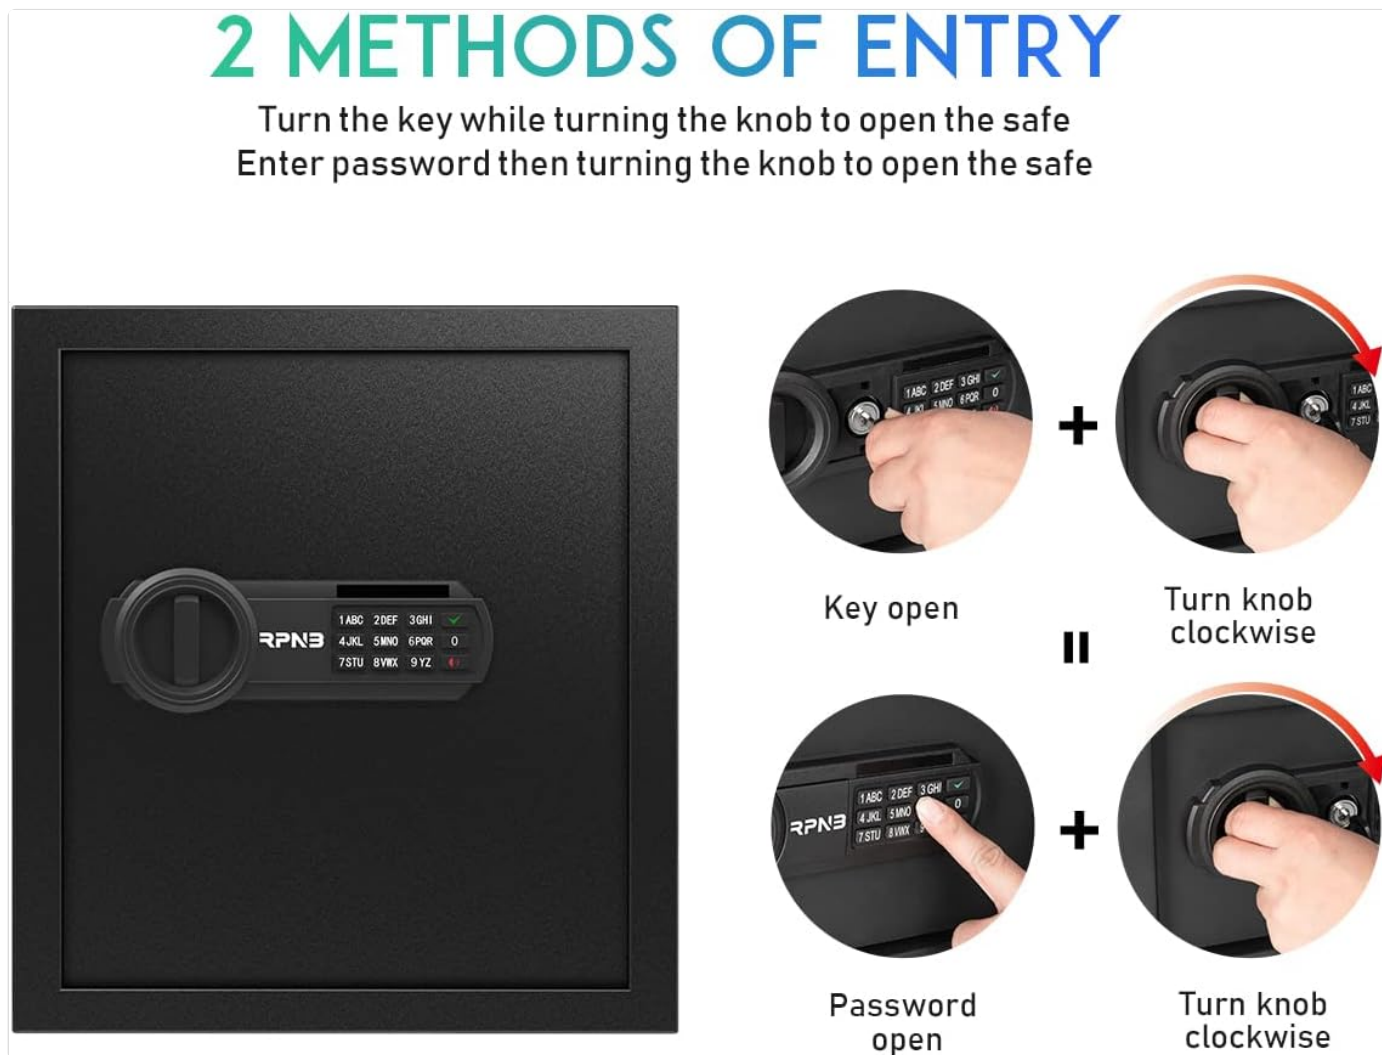


Figure 3.1: Illustration of the two primary methods for opening the safe: using the physical key or entering the digital password.

#### 3.3 Mounting the Safe

The safe features pre-drilled holes on the back and bottom for secure mounting to a wall or floor. Mounting hardware is

included.

1. Choose a suitable location for mounting, ensuring it is a stable surface.
2. Mark the drilling points through the pre-drilled holes on the safe.
3. Drill pilot holes into the wall or floor using an appropriate drill bit.
4. Align the safe with the drilled holes and secure it using the provided mounting hardware.



Figure 3.2: External dimensions of the RPNB Deluxe Safe, useful for planning installation space.

## 4. OPERATING INSTRUCTIONS

### 4.1 Opening the Safe

- **Using Digital Code:** Enter your programmed 3-8 digit code, then press "E" or "#". The green light will illuminate. Turn the knob clockwise to open the door within 5 seconds.
- **Using Backup Key:** If batteries are dead or you prefer manual access, locate the hidden keyhole. This is typically behind the RPNB logo or a small removable panel on the keypad. Insert the backup key and turn it while simultaneously turning the knob clockwise to open the door.

# SLEEK ERGONOMIC DESIGN

Different colored lights represent different states.

RED

GREEN

YELLOW



## COLOR TIPS

RED:WARNING | GREEN: CORRECT | YELLOW:LOW POWER

Figure 4.1: Understanding the indicator lights for safe status.

### 4.2 Closing and Locking the Safe

Close the safe door firmly. Turn the knob counter-clockwise to engage the locking bolts. The safe is now secured.

### 4.3 Silence Mode

To silence the audible beeps from the keypad, press the "0" button on the keypad. This will toggle the sound on or off.

## 5. MAINTENANCE

### 5.1 Battery Replacement

When the yellow indicator light illuminates or the keypad becomes unresponsive, it's time to replace the batteries. Follow the battery installation steps in Section 3.1. Always replace all 4 AA batteries at once with new, high-quality alkaline batteries.

### 5.2 Cleaning

Wipe the exterior of the safe with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish or electronic components.

## 6. TROUBLESHOOTING

| Problem                               | Possible Cause                                                         | Solution                                                                                                                                                                      |
|---------------------------------------|------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Safe does not open with digital code. | Low batteries; Incorrect code entered; Keypad malfunction.             | Replace batteries (Section 5.1). Re-enter code carefully. Use backup key.                                                                                                     |
| Cannot locate the keyhole.            | Keyhole is hidden for security.                                        | The keyhole is typically concealed behind the RPNB logo or a small removable panel on the keypad. Gently pry it open to reveal the keyhole.                                   |
| Keypad beeps but safe doesn't open.   | Locking bolts not fully disengaged; Door not aligned.                  | Ensure you turn the knob clockwise immediately after entering the correct code and hearing the green light/beep. Check for any obstructions preventing the door from opening. |
| Safe makes an alarm sound.            | Anti-theft alarm triggered by multiple incorrect entries or tampering. | Enter the correct code or use the backup key to disarm the alarm. Avoid repeated incorrect entries.                                                                           |

## 7. PRODUCT SPECIFICATIONS

| Feature                | Detail                           |
|------------------------|----------------------------------|
| Brand                  | RPNB                             |
| Product Dimensions     | 12.97"D x 12.97"W x 14.15"H      |
| Lock Type              | Electronic Combination Lock, Key |
| Color                  | Black                            |
| Capacity               | 1.2 Cubic Feet                   |
| Material               | Alloy Steel                      |
| Special Feature        | Anti-Theft, Removable Shelf      |
| Mounting Type          | Wall Mount; Floor Mount          |
| Control Type           | Push Button Control              |
| Included Components    | Backup Keys                      |
| Alarm                  | anti-theft                       |
| Water Resistance Level | Not Water Resistant              |
| Chamber Depth          | 10.63 Inches                     |
| Chamber Height         | 14.06 Inches                     |
| Item Weight            | 26.6 pounds                      |
| Item model number      | RP36ESA                          |
| Size                   | 14.15"×12.97"×12.97"             |

| Feature             | Detail               |
|---------------------|----------------------|
| Batteries Required? | Yes (4 AA batteries) |

## 8. WARRANTY AND SUPPORT

---

RPNB products are manufactured to high-quality standards. For any questions, difficulties, or support needs, please contact RPNB customer service. Refer to the product packaging or the official RPNB website for the most current contact information and warranty details.

You can also visit the RPNB Store on Amazon for more information:[RPNB Store](#)