

[Manuals.plus](#) /

> [RPNB](#) /

> RPNB Deluxe Safe and Lock Box User Manual

RPNB RP23ESA

RPNB Deluxe Safe and Lock Box User Manual

Model: RP23ESA

Your trusted partner for secure storage.

1. INTRODUCTION

Thank you for choosing the RPNB Deluxe Safe and Lock Box. This manual provides essential information for the proper setup, operation, and maintenance of your new safe. Designed with reinforced solid steel and a digital keypad, this safe offers reliable protection for your valuables.



Figure 1.1: RPNB Deluxe Safe with interior view.

Key Features:

- **Strong and Secure:** Made of reinforced solid steel wall structure with a double cylinder latch for enhanced safety and reliability.

- **Smart Capacity:** 1.0 cubic feet interior, suitable for jewelry, cash, documents, and other valuables. Exterior dimensions: 9.04"H x 16.90"W x 14.54"D.
- **Easy Operation:** Access via digital code (3 to 8 digits) or backup keys. Features 3 different colored lights indicating operational status (Red: Warning, Green: Correct, Yellow: Low Power).
- **Easy to Install:** Pre-drilled mounting holes and included hardware allow for secure installation in closets, shelves, or under floors.

Your browser does not support the video tag.

Video 1.1: Overview of the RPNB ESA Series Electronic Digital Security Home Safe, highlighting its features and design.

2. SETUP

2.1 Battery Installation

The safe requires 4 AA alkaline batteries (not included) to power the digital keypad. Ensure batteries are inserted correctly according to polarity markings.

1. Locate the battery compartment on the inside of the safe door, usually behind a cover on the electronic lock mechanism.
2. Remove the battery cover.
3. Insert 4 new AA alkaline batteries, ensuring correct polarity (+/-). You will hear a short beep if inserted correctly.
4. Replace the battery cover securely.

Your browser does not support the video tag.

Video 2.1: Detailed instructions on how to program the RP23ESA Electronic Security Home Safe, including battery installation and code setup.

2.2 Initial Opening (Using Backup Key)

For the first-time opening or if the batteries are dead, use the provided backup keys.

1. Locate the hidden keyhole, typically behind the RPNB logo or a small removable panel on the keypad.
2. Gently remove the cover to expose the keyhole.
3. Insert the backup key and turn it counter-clockwise while simultaneously turning the knob clockwise to open the safe door.
4. Keep backup keys in a secure location outside the safe.

2 METHODS OF ENTRY

Turn the key while turning the knob to open the safe
Enter password then turning the knob to open the safe



Figure 2.1: Illustration of key and password entry methods.

2.3 Mounting the Safe

The safe features pre-drilled holes for secure mounting to a wall or floor. Mounting hardware is included.

- Choose a secure and discreet location for installation.
- Use the provided mounting hardware to secure the safe through the pre-drilled holes in the back or bottom.
- Ensure the safe is firmly attached to a solid surface (e.g., wall studs, concrete floor) to prevent unauthorized removal.



20MM LIVE-ACTION BOLT

go inside of 2 insertion slots in the frame of the safe

2 LOCKING BOLTS

SOLID STEEL

TIGHTLY

Figure 2.2: Detail of the 20mm live-action locking bolts.

3. OPERATING INSTRUCTIONS

3.1 Programming Your Digital Code

The factory default code is 1-5-9. It is highly recommended to change this immediately.

1. With the safe door open, locate the red "PROGRAM" button on the inside of the safe door (usually on the battery compartment cover).
2. Press the "PROGRAM" button once and release it. The green light on the keypad will light up once with one beep.
3. Enter your NEW 3 to 8 digit code.
4. Press the confirming button (✓) to save your new code. The green light will flash twice with two beeps, confirming successful programming.
5. Test your new code with the safe door open to ensure it works correctly before closing.

3.2 Opening the Safe with Digital Code

1. Enter your programmed 3 to 8 digit code.
2. Press the confirming button (✓). The green light will illuminate.
3. Within 5 seconds, turn the knob clockwise to open the safe door.

3.3 Closing and Locking the Safe

Close the safe door and turn the knob counter-clockwise to lock it. The safe will automatically lock once the knob is turned.

3.4 Silent Mode

To set the safe to silent mode (no beeps when pressing keys):

- Press the "Voice Button" (usually marked with a speaker icon or '0'). The green light will light up once.
- To reactivate sound, press the "Voice Button" again.

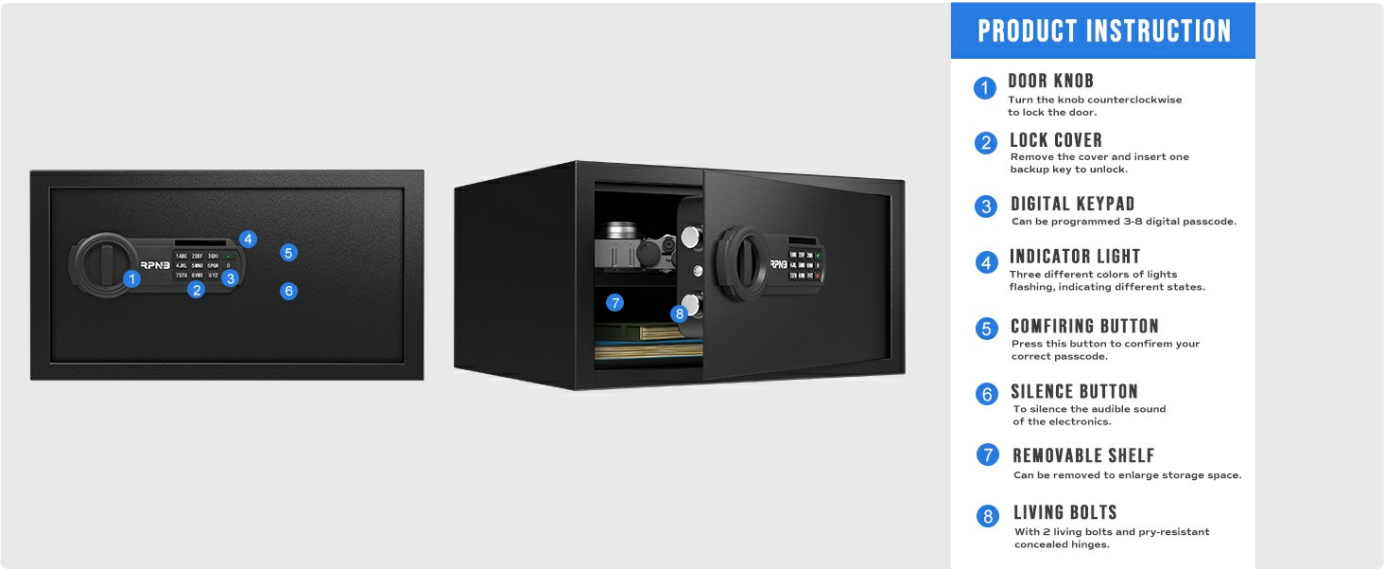


Figure 3.1: Product Instruction Diagram.

4. MAINTENANCE

4.1 Battery Replacement

When the yellow light on the keypad illuminates, it indicates low battery power. Replace all 4 AA batteries promptly to ensure continuous operation.

4.2 Cleaning

Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

4.3 Storage

Store backup keys in a secure location away from the safe. Do not store them inside the safe.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with digital code.	Incorrect code entered, low batteries, or dead batteries.	Re-enter code carefully. Replace batteries. Use backup key to open.
Keypad lights are not working.	Dead batteries.	Replace all 4 AA batteries.

Problem	Possible Cause	Solution
Safe door does not close properly.	Obstruction in the door frame or locking mechanism.	Check for any obstructions. Ensure the knob is turned fully counter-clockwise to engage the lock.
Forgotten digital code.	Code forgotten.	Use the backup key to open the safe. Once open, reprogram a new digital code following the instructions in Section 3.1.

For further assistance, please refer to the support section.

6. SPECIFICATIONS

Feature	Detail
Brand	RPNB
Model Number	RP23ESA
Product Dimensions	14.54"D x 16.9"W x 9.04"H
Lock Type	Electronic Combination Lock, Key
Color	Black
Capacity	1 Cubic Feet
Material	Reinforced Solid Steel
Special Features	Portable, Anti-Theft, Removable Shelf
Mounting Type	Wall Mount; Floor Mount
Control Type	Push Button Control
Included Components	Backup Keys
Item Weight	10.5 Kilograms (23.1 pounds)
Water Resistance Level	Not Water Resistant



Figure 6.1: Product Dimensions.

7. WARRANTY & SUPPORT

RPNB is committed to providing high-quality products and customer satisfaction. If you have any questions or encounter difficulties with your safe, please do not hesitate to contact us. We are glad to help you.

For detailed support and additional resources, please refer to the official user manual PDF available for download:

[Download User Manual
\(PDF\)](#)

Important Safety Information: Check TSA regulations and airline policies before traveling with any portable safe. Do not store loaded firearms in any safe or lock box. Follow local laws for firearm storage.