

[Manuals.plus](#) /

› [Intex](#) /

› Intex Action Sports Play Center, 128in x 105in x 40in, for Ages 3+ User Manual

Intex 57147EP

Intex Action Sports Play Center User Manual

Model: 57147EP

PRODUCT OVERVIEW

The Intex Action Sports Play Center offers a versatile and engaging water play experience for children. Designed for multiple sports activities, this inflatable play center provides hours of fun with its integrated features for soccer, volleyball, and baseball.

Key Features

- Fun sports activities include soccer ball, volleyball, and baseball.
- Capacity: 3.25 inches of wall height, 124 gallons.
- Inflated dimensions: 10ft 8in x 8ft 9in x 3ft 4in.



Image: The Intex Action Sports Play Center fully set up with all included sports accessories, ready for play.

SAFETY INFORMATION

Always supervise children when they are using the play center. Ensure the play area is clear of sharp objects and debris. Do not over-inflate the product. For additional warnings and safety guidelines, please refer to the warnings printed directly on the product itself.

SETUP GUIDE

Before inflation, ensure the play center is laid out on a soft, level surface free of sharp objects. Locate all inflation valves. Inflate each chamber separately using an air pump (not included) until firm but not hard. Do not over-inflate. Once inflated, fill the base with water to the recommended level (3.25 inches of wall height, 124 gallons capacity).



Image: The empty Intex Action Sports Play Center, showing the blue water play area and red inflatable border.



Image: A collection of the inflatable accessories included with the play center: a soccer ball, volleyball, baseball, an inflatable bat, and a

OPERATING INSTRUCTIONS

The Intex Action Sports Play Center allows for three different sports activities within its water-filled base.

Volleyball

Attach the inflatable volleyball net to the designated posts on either side of the play center. Use the included inflatable volleyball for water volleyball games. The net is designed to be easily set up and removed.



Image: The play center configured for volleyball, showing the inflatable net stretched across the middle with a volleyball on the blue surface.

Soccer

Place the two inflatable soccer goals at opposite ends of the play area. Use the included inflatable soccer ball to play water soccer. The goals are lightweight and can be repositioned as needed.



Image: A top-down view of the play center set up for soccer, with two inflatable goals and a soccer ball.



Image: A closer view of the two inflatable soccer goals positioned within the play center.

Baseball

Utilize the inflatable baseball tee and bat for a water-friendly baseball experience. The tee holds the inflatable baseball in place, allowing children to practice their swing. This activity is best enjoyed in the shallower areas of the play center.



Image: A child holding an inflatable bat, preparing to hit an inflatable baseball from the tee in the play center.

Alternative Play

Beyond sports, the play center can also be used as a large ball pit by filling it with play balls (not included), providing another engaging activity for younger children.



Image: The play center filled with numerous colorful plastic balls, demonstrating its use as a ball pit.

CARE AND MAINTENANCE

To ensure the longevity of your Intex Action Sports Play Center, follow these care instructions:

- **Cleaning:** After each use, drain all water from the play center. Clean the surfaces with mild soap and water. Rinse thoroughly and allow to air dry completely before deflating.
- **Drying:** Ensure the play center is completely dry before folding and storing to prevent mold and mildew growth.
- **Storage:** Deflate the play center and all accessories. Fold neatly and store in a cool, dry place away from direct sunlight and extreme temperatures. Keep away from rodents and insects.
- **Patching:** In case of small punctures, use the included repair patch kit according to its instructions.

TROUBLESHOOTING

If you encounter any issues with your Intex Action Sports Play Center, refer to the following common solutions:

Problem	Possible Cause	Solution
Play center deflates slowly	Small puncture or loose valve cap.	Check all valve caps are securely closed. Inspect for small holes using soapy water (bubbles will appear at the leak). Use the repair patch kit to seal any punctures.

Problem	Possible Cause	Solution
Difficulty inflating	Valve obstruction or insufficient pump power.	Ensure the inflation valve is clear. Use a pump with adequate power for inflatable products.
Water does not stay in	Hole in the base or drain plug not secured.	Check the drain plug is fully inserted and sealed. Inspect the bottom of the pool for any tears or punctures and repair as needed.

PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	128 x 105 x 40 inches
Item Weight	15.8 ounces
Country of Origin	China
ASIN	B08DCQH3Q1
Item Model Number	57147EP
Manufacturer Recommended Age	3 years and up
Release Date	November 1, 2020
Manufacturer	Intex

WARRANTY AND SUPPORT

Intex products are manufactured to the highest standards of quality and durability. For specific warranty information and details on how to obtain support for your Intex Action Sports Play Center, please refer to the documentation included with your purchase or visit the official Intex website.

You can also visit the [Intex Store on Amazon](#) for more product information and customer service options.

Official Product Videos

No official product videos from the seller are available for embedding at this time. The available videos are from an influencer and do not meet the criteria for inclusion in this manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question