

## Wireless Gear G0687

# Wireless Gear True Wireless Case Earbuds User Manual

Model: G0687

## INTRODUCTION

Thank you for choosing the Wireless Gear True Wireless Case Earbuds. These in-ear headphones are designed for comfort and convenience, offering a seamless audio experience with advanced features. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new earbuds to ensure optimal performance. Key features include:

- **Hands-Free Microphone:** Integrated microphone for seamless transition between music and calls.
- **Comfortable Fit:** Flexible Fit-Gel ear gels ensure a secure and comfortable fit for extended wear.
- **Extended Playtime:** Up to 8 hours of continuous play and talk time.
- **Portable Charging Case:** The included charging case provides 4-5 full recharges, extending total playtime significantly.
- **Extreme Bass Sound:** High-performance wireless earbuds delivering rich, superior sound with ultra-deep bass.

## PACKAGE CONTENTS

Please check the box for the following items:

- Wireless Gear True Wireless Case Earbuds (Left and Right)
- Portable Charging Case
- USB Charging Cable
- User Manual
- Multiple sizes of Fit-Gel ear tips

## PRODUCT OVERVIEW

Familiarize yourself with the components of your Wireless Gear True Wireless Case Earbuds.



Image 1: The Wireless Gear True Wireless Earbuds resting inside their open charging case. The earbuds are black with a sleek design, and the case is also black with a translucent lid, showing the charging indicators.





Image 2: Front view of the retail packaging for the Wireless Gear True Wireless Case Earbuds. The box prominently displays the product name, brand logo, and key features such as "8 HRS" playtime, "4-5 RECHARGES PER FULL CASE", and "EXTREME BASS".



WIRELESS GEAR<sup>®</sup>  
TRUE WIRELESS  
CASE EARBUDS



# WIRELESS GEAR®

## TRUE WIRELESS CASE EARBUDS



## EXTREME BASS

High performance wireless earbuds provide superior rich sound and ultra deep bass.



### HANDS-FREE MICROPHONE

**Built-in microphone for hands-free calling, an easy and convenient way to make and receive phone calls**



#### EVIS TECHNOLOGY

Stream your music via  
wireless connection



MODEL: G0687



6 80985-  
Designed in USA | Made in China

## EXTREME BASS

Image 3: Back view of the retail packaging, highlighting additional features like "Hands-Free Microphone" and "TWS Technology". The model number G0687 and UPC 0680988106873 are visible at the bottom.

## Earbud Components:

- **Multi-function Touch/Button Area:** For controlling playback, calls, and voice assistant.
- **Microphone:** For hands-free calling.
- **LED Indicator:** Shows pairing status, charging status, and power.
- **Charging Contacts:** Located at the bottom of each earbud.

## Charging Case Components:

- **Earbud Charging Slots:** Securely hold and charge the earbuds.
- **Charging Case LED Indicators:** Show the charging status of the case and earbuds.
- **USB Charging Port:** For charging the case itself.

## SETUP

### 1. Initial Charging

1. Place both earbuds into the charging case. Ensure they are properly seated so the charging contacts align.
2. Connect the USB charging cable to the charging port on the case and the other end to a USB power source (e.g., wall adapter, computer USB port).
3. The LED indicators on the earbuds and/or case will illuminate to show charging status. A full charge for the case and earbuds typically takes 1-2 hours.
4. Once fully charged, disconnect the charging cable. The case holds enough power for 4-5 full earbud recharges.

### 2. Pairing with Your Device

1. **Power On:** Open the charging case, or remove the earbuds from the case. They should automatically power on and enter pairing mode. The LED indicator on one earbud will flash, indicating it's ready to pair.
2. **Activate Bluetooth:** On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings and turn on Bluetooth.
3. **Search for Devices:** Your device will scan for available Bluetooth devices. Look for "Wireless Gear Earbuds" or a similar name in the list.
4. **Connect:** Select the earbuds from the list. Once connected, the LED indicator on the earbud will stop flashing or change color. You will hear an audible confirmation.
5. **Automatic Reconnection:** After the initial pairing, the earbuds will automatically connect to the last paired device when removed from the case and Bluetooth is active on your device.

*Note: If pairing fails, turn off Bluetooth on your device, place earbuds back in the case, close and reopen, then try again.*

## OPERATING INSTRUCTIONS

### Basic Controls (Touch/Button Functions):

Function	Action

Function	Action
Power On	Remove from charging case.
Power Off	Place back into charging case.
Play/Pause Music	Single tap on either earbud.
Next Track	Double tap on the Right earbud.
Previous Track	Double tap on the Left earbud.
Answer/End Call	Single tap on either earbud during an incoming call.
Reject Call	Press and hold either earbud for 2 seconds during an incoming call.
Activate Voice Assistant	Triple tap on either earbud.
Volume Up	Press and hold Right earbud.
Volume Down	Press and hold Left earbud.

*Note: Specific touch/button functions may vary slightly. Refer to the quick start guide included in your package for precise controls if different.*

## MAINTENANCE

### Cleaning Your Earbuds and Case:

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, aerosols, or abrasive cleaners.
- Ensure the charging contacts on both the earbuds and the case are clean and free of debris to ensure proper charging.
- Remove ear tips and clean them separately with water and mild soap if necessary, then dry completely before reattaching.

### Storage:

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures, humidity, and direct sunlight.

### Battery Care:

- To prolong battery life, avoid fully discharging the earbuds and case frequently.
- Charge the device regularly, even if not in frequent use, to prevent deep discharge.

## TROUBLESHOOTING

If you encounter issues with your Wireless Gear True Wireless Case Earbuds, try the following solutions:

1. **Earbuds not pairing with device:**

- Ensure Bluetooth is enabled on your device.
- Make sure the earbuds are charged.
- Place earbuds back in the case, close the lid, wait a few seconds, then open the lid and try pairing again.
- Forget/delete the earbuds from your device's Bluetooth list and re-pair.
- Ensure earbuds are within Bluetooth range (typically 10 meters/33 feet).

## 2. Only one earbud working:

- Ensure both earbuds are charged.
- Place both earbuds back into the charging case, close the lid, and then remove them simultaneously. This often re-syncs them.
- Try resetting the earbuds (refer to specific reset instructions if available in the quick start guide, usually involves holding a button for a long time).

## 3. Earbuds not charging:

- Ensure the charging cable is securely connected to both the case and the power source.
- Check if the charging contacts on the earbuds and inside the case are clean and free of debris.
- Try a different USB cable or power adapter.
- Ensure the charging case itself has power.

## 4. Poor sound quality or intermittent connection:

- Move closer to your paired device to reduce interference.
- Avoid obstacles between the earbuds and your device.
- Ensure there are no other strong wireless signals nearby causing interference.
- Clean the ear tips and earbud speakers.

## SPECIFICATIONS

Feature	Detail
Model Number	G0687
Wireless Communication Technology	Bluetooth
Connectivity Technology	Bluetooth
Form Factor	In-Ear (Intraurales)
Color	Black
Play/Talk Time	Up to 8 hours
Charging Case Recharges	4-5 full recharges
Battery Type	Lithium Ion (rechargeable)
Special Features	Bluetooth, Wireless, Microphone Included
Manufacturer	ESI Wireless Accessories
Product Dimensions	13.97 x 7.62 x 3.81 cm; 226.8 g (Package)

Feature	Detail
ASIN	B08DCTH7DW
UPC	0680988106873

## WARRANTY AND SUPPORT

### Warranty Information:

Wireless Gear products are manufactured to the highest quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Wireless Gear website. Typically, products come with a limited warranty covering manufacturing defects from the date of purchase.

### Customer Support:

If you have any questions, require technical assistance, or need to report an issue, please contact Wireless Gear customer support. You can usually find contact information (phone number, email, or support portal) on the product packaging or the official brand website.

For further assistance, please visit: [Wireless Gear Support Page](#) (Note: This is a placeholder link. Please refer to your product's official documentation for the correct support URL.)

© 2024 Wireless Gear. All rights reserved.

*Information in this manual is subject to change without notice.*