

[Manuals.plus](#) /

› [RPNB](#) /

› RPNB Deluxe Safe and Lock Box User Manual

RPNB RP50ESA

RPNB Deluxe Safe and Lock Box User Manual

Model: RP50ESA

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your RPNB Deluxe Safe and Lock Box. Designed with reinforced solid steel and a double-cylinder latch, this safe offers enhanced security for your valuables. Please read this manual thoroughly before using your safe.

SETUP AND INSTALLATION

Unboxing and Initial Inspection

Upon receiving your RPNB Deluxe Safe, carefully remove it from its packaging. Inspect the safe for any signs of damage. Ensure all components, including backup keys and mounting hardware, are present.



Figure 1: RPNB Deluxe Safe with interior view.

Battery Installation

The safe's digital keypad requires 4 AA alkaline batteries (not included). Locate the battery compartment on the inside of the safe door. Open the cover, insert the batteries according to the polarity indicators, and close the cover. A short beep will confirm correct installation.

Official Product Video: Safe Overview and Setup

Video: A brief overview of the RPNB ESA Series Electronic Security Home Safe, including key features and initial setup.

Mounting the Safe

Your safe comes with pre-drilled mounting holes and hardware for secure installation in a closet, shelf, or under the floor.

For optimal security, it is highly recommended to bolt the safe to a fixed surface to prevent unauthorized removal.

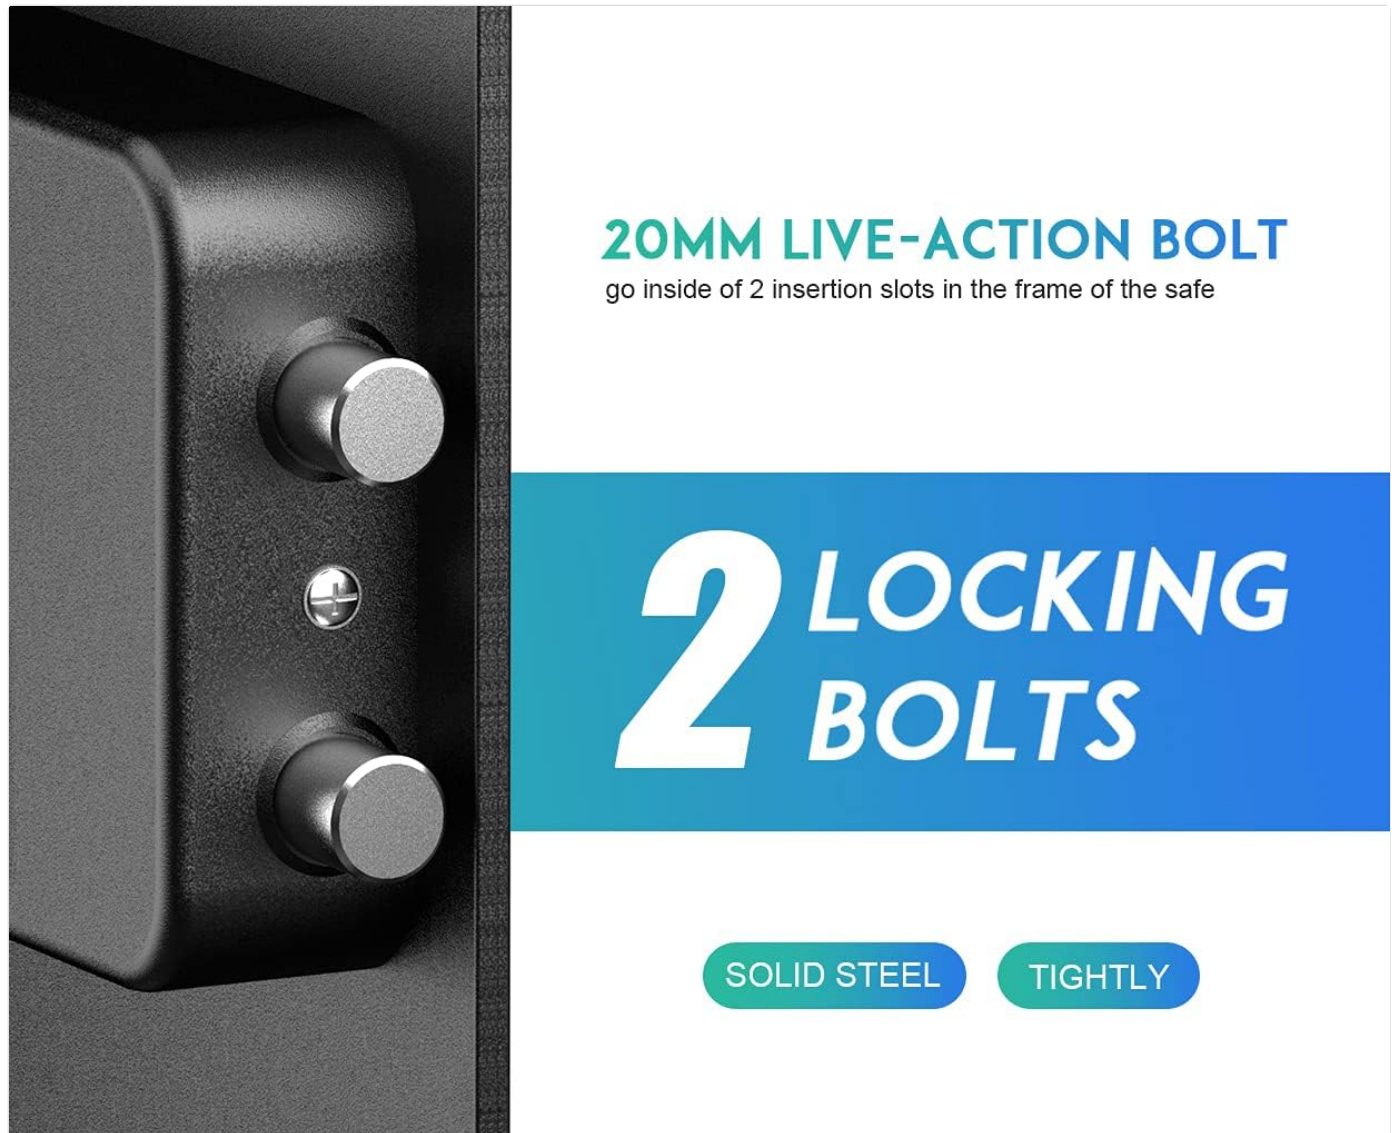 


Figure 2: Safe interior showing pre-drilled mounting holes.

OPERATING INSTRUCTIONS

Opening the Safe for the First Time (Emergency Key)

For initial access, remove the RPNB logo cover to reveal the emergency keyhole. Insert the emergency key and turn it counter-clockwise while simultaneously turning the knob clockwise to open the safe door. Keep emergency keys outside the safe to avoid being locked out.

2 METHODS OF ENTRY

Turn the key while turning the knob to open the safe
Enter password then turning the knob to open the safe

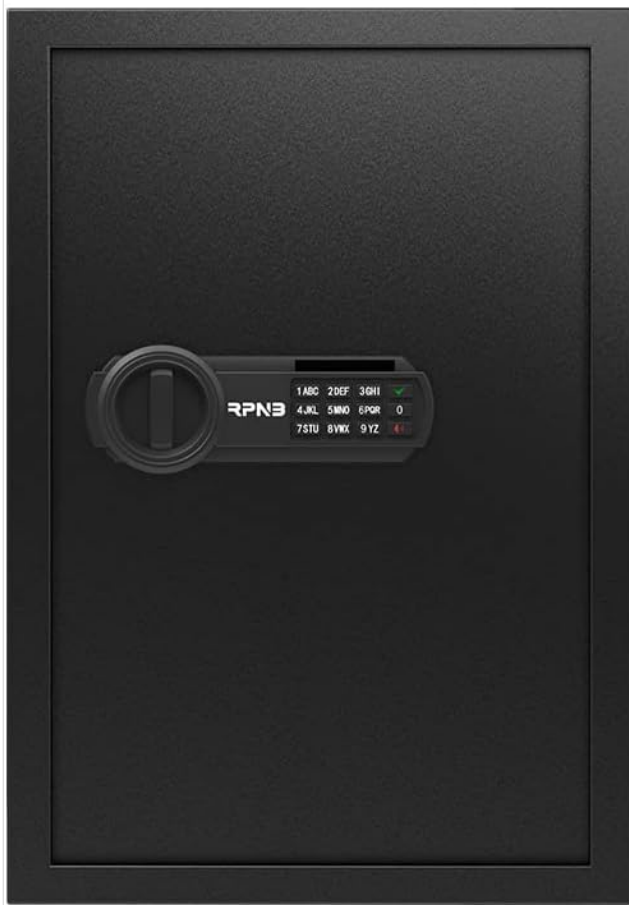


Figure 3: Two methods of entry: Key and Digital Code.

Programming Your Digital Code

With the door open, press the "PROGRAM" button (usually located on the inside of the door near the battery compartment). The green light will illuminate, and you will hear a beep. Enter your new 3 to 8 digit code, then press the confirming button (usually a checkmark or 'E'). A successful programming will be indicated by a beep. If an error occurs, the red light will flash, and you will need to repeat the process.

Opening with Digital Code

Enter your programmed digital code (3 to 8 digits) on the keypad. The green light will illuminate. Turn the knob clockwise within 5 seconds to open the safe door.

Silent Mode

To enable or disable silent mode (keypad sound), press the "Voice Button" (usually indicated by a speaker icon). The green light will flash once to confirm the change.

KEEP VALUABLES

Put your valuables in the safe without worrying about any problems.
Giving you a convenient and safe experience.



File



Passport



Jewelry



Laptop



Lens



Gun



Figure 4: Keypad indicator lights: Red (Warning), Green (Correct), Yellow (Low Power).

MAINTENANCE

Battery Replacement

When the yellow indicator light flashes, it signifies low battery power. Replace all 4 AA alkaline batteries promptly to ensure continuous operation. If batteries completely drain, use the emergency key for access.

Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

TROUBLESHOOTING

Forgotten Code

If you forget your digital code, use the emergency key to open the safe. Once open, you can reprogram a new code following the "Programming Your Digital Code" instructions.

Keypad Not Responding

Check the batteries. If they are low or dead, replace them. Ensure they are inserted with correct polarity. If the issue persists, use the emergency key for access and contact customer support.

Door Alignment Issues

If the door does not close or open smoothly, check for any obstructions around the door frame or hinges. Ensure the safe is mounted on a level surface. If the problem continues, contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	RPNB
Product Dimensions	12.97"D x 13.76"W x 19.65"H
Lock Type	Electronic Combination Lock, Key
Color	Black
Capacity	1.8 Cubic Feet
Material	Alloy Steel
Special Feature	Anti-Theft, Removable Shelf
Mounting Type	Wall Mount; Floor Mount
Control Type	Push Button Control
Included Components	Backup Keys
Alarm	anti-theft
Water Resistance Level	Not Water Resistant
Chamber Depth	10.63 Inches
Chamber Height	40 Centimeters
Chamber Width	13.66 Inches
UPC	779605537234
Manufacturer	RPNB
Part Number	RP50ESA
Item Weight	34.8 pounds
Country of Origin	China
Item model number	RP50ESA
Size	19.65"×13.76"×12.97"
Style	Contemporary
Special Features	Anti-Theft, Removable Shelf

Feature	Detail
Batteries Included?	No
Batteries Required?	Yes
ASIN	B08DCTXNQQ
Customer Reviews	4.5 4.5 out of 5 stars 3,728 ratings 4.5 out of 5 stars
Best Sellers Rank	#26,470 in Tools & Home Improvement (See Top 100 in Tools & Home Improvement) #53 in Cabinet Safes
Date First Available	July 21, 2020

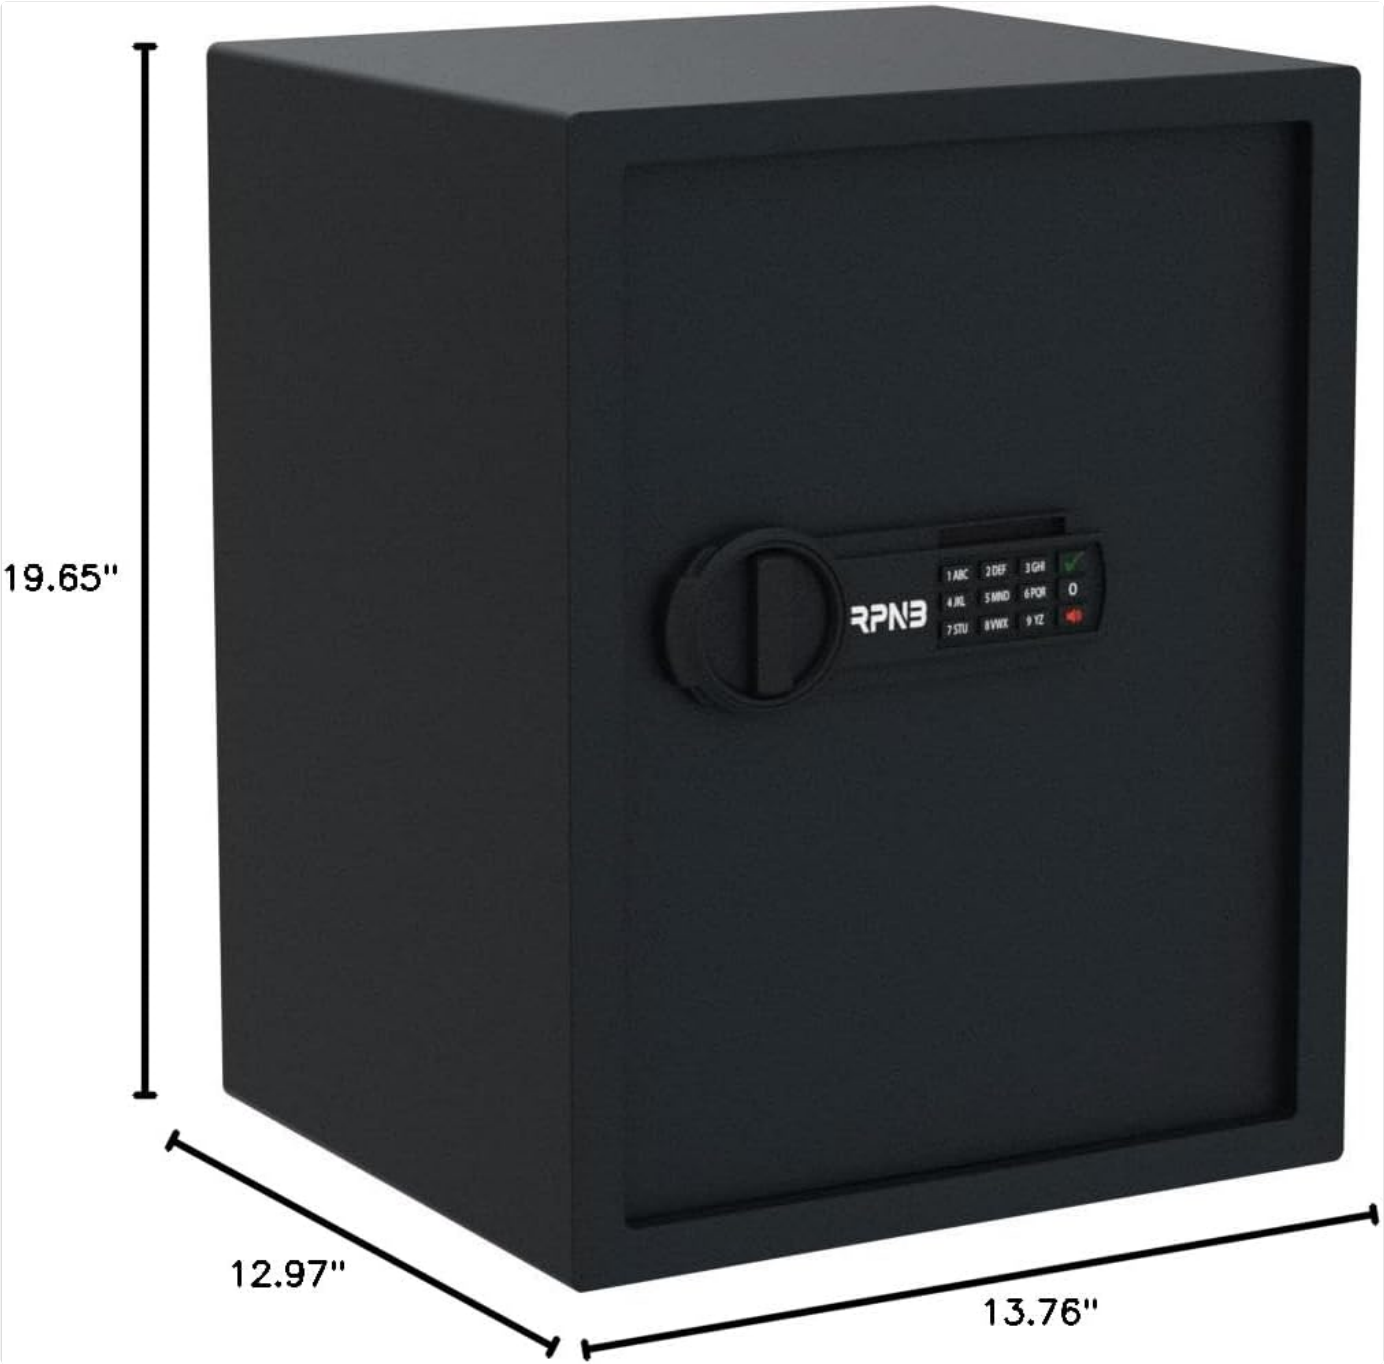 


Figure 5: Exterior Dimensions (19.65"H x 13.76"W x 12.97"D).

WARRANTY AND SUPPORT

RPNB stands behind its products. If you encounter any questions or difficulties with your safe, please contact RPNB customer support. Refer to the official RPNB website or the included user manual PDF for contact information.

For a complete user manual, please download the PDF version:[User Manual \(PDF\)](#)

Visit the official RPNB Store for more products and support:[RPNB Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question