

[Manuals.plus](#) /

› [LELO](#) /

› LELO Soraya Wave Luxurious Massager User Manual

LELO 8144

LELO Soraya Wave Luxurious Massager User Manual

Model: SORAYA WAVE

INTRODUCTION

The LELO Soraya Wave is a luxurious G-spot rabbit vibrator designed to provide a comprehensive pleasure experience. Featuring innovative WaveMotion Technology, this device offers both internal G-spot stimulation and external clitoral stimulation. Crafted from body-safe silicone, it combines elegant design with powerful functionality.



Image: The LELO Soraya Wave device in Midnight Blue, displayed alongside its premium packaging.

PACKAGE CONTENTS

Upon opening your LELO Soraya Wave package, you should find the following items:

- LELO Soraya Wave Massager
- User Manual (this guide)
- Water-based Lubricant Sachet (5 ml / 0.17 fl. oz.)
- USB Charging Cable
- Satin Storage Pouch
- Warranty Registration Card

SORAYA Wave™
luxurious rabbit massager



WARRANTY CARD
verifies product authenticity

MANUAL
how to use guide



MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD
USB cable



SATIN POUCH
for storage

Image: A visual representation of all items included in the LELO Soraya Wave product box.

PRODUCT FEATURES

- **G-Spot & Clitoral Stimulation:** Designed for both internal and external stimulation.
- **WaveMotion Technology:** Features a sculpted tip that surges with a finger-like massage motion.
- **8 Pleasure Settings:** Offers a variety of vibration patterns and intensities.
- **Near Silent Operation:** Engineered for discretion during use.
- **Signature Swedish Design:** Smooth, flexible, body-safe silicone for a realistic sensation and durability.
- **Waterproof & USB Rechargeable:** IPX7 certified for safe use in water and easy charging.
- **Long-Lasting Charge:** Provides extended usage time.



Image: An annotated diagram illustrating the primary features and design elements of the LELO Soraya Wave.

Image: A summary graphic detailing the core benefits and functionalities of the device.

SETUP AND CHARGING

Initial Charging

Before the first use, fully charge your LELO Soraya Wave for **2 hours**. Connect the provided USB charging cable to the device and a USB power source.

Unlocking the Device

To unlock the device, press and hold the **+** and **-** buttons simultaneously for 3 seconds until the indicator light turns on.

OPERATING INSTRUCTIONS

Turning On and Adjusting Intensity

1. Press the **+** button to turn on the device. The LED lights will blink to indicate the battery level.
2. Press the **+** button again to increase the vibration strength.
3. Press the **-** button to reduce the vibration strength.

Switching Vibration Patterns

Press the () button to switch between the 8 available vibration patterns. Note that WaveMotion patterns may vary between modes.

Turning Off

To turn off the device, press and hold the () or **-** button for 3 seconds.

How to use

BEFORE FIRST USE

charge your device for 2 hours

TO TURN IT ON

press the + button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 8 PLEASURE SETTINGS

press the () button

TO DECREASE OR INCREASE THE INTENSITY

use the + and the - buttons

TO TURN IT OFF

press and hold the () or - button for 3 seconds

Image: A visual guide detailing the steps for operating the LELO Soraya Wave.



Image: The LELO Soraya Wave in action, illustrating the unique WaveMotion feature.

CLEANING AND CARE

The LELO Soraya Wave is IPX7 certified, making it completely waterproof. This allows for easy cleaning and safe use in the bath or shower.

- Always clean your device thoroughly before and after each use.
- Wash the device with warm water and a toy cleaner or mild soap.
- Rinse thoroughly and pat dry with a lint-free cloth.
- Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.
- Store the device in its satin pouch in a dust-free environment, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

Device Not Turning On

- Ensure the device is fully charged. Connect it to the charger for at least 2 hours.
- Confirm the device is unlocked by pressing and holding + and - simultaneously for 3 seconds.

Weak Vibrations

- Recharge the device; low battery can affect vibration strength.
- Increase the intensity by pressing the + button.

WaveMotion Not Functioning

- Ensure the device is adequately charged.
- Cycle through the vibration patterns using the () button, as WaveMotion functionality may vary by mode.

SPECIFICATIONS

Brand	LELO
Model Name	SORAYA WAVE
Item Model Number	8144
Color	Midnight Blue
Material	ABS Plastic, Silicone
Product Dimensions	8.58 x 2.83 x 1.81 inches
Weight	6.4 ounces
Batteries	1 Lithium Polymer battery (included)
Waterproof Rating	IPX7
Manufacturer	LELO

SAFETY INFORMATION

Please read all safety instructions before using your LELO Soraya Wave. This device is intended for adult use only.

- Do not use the device if it appears damaged or if the silicone is torn.
- Discontinue use immediately if you experience any discomfort or pain.
- Consult a healthcare professional if you have any medical concerns or conditions before using this product.
- Keep out of reach of children.

Legal Disclaimer

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

WARRANTY AND SUPPORT

LELO offers a **1-year warranty** on the Soraya Wave, alongside a **10-year quality guarantee**. For warranty claims, technical support, or any product-related inquiries, please visit the official LELO website or contact their customer service.

You can find more information and support by visiting the [LELO Store on Amazon](#).

