



Manuals.plus /

› Korona /

› Korona 48100 Hot Beverage Dispenser and Canning Pot Instruction Manual

## Korona 48100

# Korona 48100 Hot Beverage Dispenser and Canning Pot Instruction Manual

**Brand:** Korona | **Model:** 48100

Your versatile 2-in-1 appliance for hot beverages and preserving.

## INTRODUCTION

Thank you for choosing the Korona 48100 Hot Beverage Dispenser and Canning Pot. This 2-in-1 appliance is designed for heating various beverages and for preserving food items. With a generous 27-liter capacity and 1800W power, it offers efficient performance for both tasks. Please read this manual carefully before first use to ensure safe and optimal operation.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.

- Extreme caution must be used when moving an appliance containing hot liquid.
- Ensure the appliance is placed on a stable, heat-resistant surface.

## PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main parts of your Korona 48100 appliance:

- **Main Unit:** The stainless steel pot with a 27-liter capacity.
- **Lid:** Removable lid for covering the pot.
- **Temperature Control Dial:** Adjusts the heating temperature (30°C to 100°C).
- **Timer Dial:** Sets the operating time (up to 120 minutes).
- **Spigot:** Convenient tap for dispensing hot liquids.
- **Insert Grid:** A small grid placed at the bottom for canning jars.
- **Cool-Touch Handles:** For safe handling and transport.

**KORONA**

**BPA frei**

*Nachhaltig und vielfältig*

*Ideal für Obst, Gemüse, Suppen, und heiße Getränke*

**KORONA**

**German Company Since 1992**

Image: Front view of the Korona 48100 appliance, highlighting its dual function for hot beverages and canning.

**KORONA**

**Cool-Touch  
Griffe**



Höhe 46 cm  
Ø 37 cm

*Image: Detail showing the cool-touch handles and the removable insert grid, essential for canning.*

## SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and check for any damage.
2. **Initial Cleaning:** Before first use, clean the interior of the pot, the lid, and the insert grid with warm soapy water. Rinse thoroughly and dry.
3. **Placement:** Place the appliance on a stable, level, and heat-resistant surface, away from flammable materials. Ensure adequate ventilation.
4. **Power Connection:** Ensure the voltage of your power outlet matches the appliance's specifications (220V). Plug the appliance into a grounded wall outlet.

## OPERATING INSTRUCTIONS

### A. Heating Beverages (e.g., Tea, Coffee, Mulled Wine)

1. Ensure the spigot is closed.
2. Fill the pot with the desired beverage, ensuring it does not exceed the maximum fill line.
3. Place the lid on the pot.

4. Set the **Temperature Control Dial** to the desired temperature (e.g., 80°C for hot beverages).
5. Set the **Timer Dial** to "ON" or to a specific time if you want it to turn off automatically.
6. The appliance will begin heating. Once the desired temperature is reached, the indicator light may change or turn off, and the appliance will maintain the temperature.
7. To dispense, open the spigot. Close it securely after use.



Image: Visual guide demonstrating the versatility of the appliance for different applications like preserving soup, making fruit juice, and serving hot drinks.

## B. Canning and Preserving (Weck Jars)

The Korona 48100 is ideal for preserving fruits, vegetables, and other foods in jars.

1. Place the **Insert Grid** at the bottom of the pot. This prevents jars from direct contact with the heating element.
2. Arrange your filled and sealed canning jars (e.g., Weck jars) on the insert grid. Ensure there is sufficient space between jars for water circulation.
3. Fill the pot with water until the jars are covered by at least 2-3 cm (approximately 1 inch) of water. Do not exceed the maximum fill line.
4. Place the lid on the pot.

5. Set the **Temperature Control Dial** to the required canning temperature (typically 90-100°C, refer to your specific canning recipe).
6. Set the **Timer Dial** to the desired canning duration (up to 120 minutes). The timer will start counting down once the set temperature is reached.
7. Once the timer completes, an audible signal will sound, and the appliance will switch off.
8. Carefully remove the hot jars using appropriate canning tongs. Allow them to cool completely before storing.



Image: The Korona 48100 in a canning setup, showing its capacity for multiple jars.

### C. Keep Warm Function

After heating, the appliance can maintain a set temperature for an extended period.

1. Once your beverage or food has reached the desired temperature, you can leave the **Temperature Control Dial** at that setting.
2. Set the **Timer Dial** to "ON" or to a longer duration if continuous warming is needed. The appliance will cycle on and off to maintain the temperature between 30°C and 100°C.

## MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your appliance.

1. **Always unplug the appliance** from the power outlet and allow it to cool completely before cleaning.
2. **Interior Cleaning:** Wash the interior of the pot, the lid, and the insert grid with warm, soapy water. Use a soft sponge or cloth. Rinse thoroughly and dry completely.
3. **Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
4. **Spigot Cleaning:** Ensure the spigot is clean and free of any residue. You may need to flush it with clean water.
5. **Descaling:** If hard water is used, mineral deposits (limescale) may build up. Descale the appliance regularly using a commercial descaling solution suitable for kitchen appliances, or a mixture of water and white vinegar. Follow the descaling product's instructions.
6. **Storage:** Store the clean and dry appliance in a cool, dry place.

***Never immerse the main unit (electrical components) in water or any other liquid.***

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not heat.	Not plugged in; power outlet malfunction; temperature/timer dials set to OFF.	Check power connection; test outlet with another appliance; ensure dials are set correctly.
Heating is slow.	Too much liquid; low power setting; limescale buildup.	Reduce liquid volume if possible; increase temperature setting; descale the appliance.
Liquid leaks from spigot.	Spigot not fully closed; residue in spigot mechanism.	Ensure spigot is firmly closed; clean spigot thoroughly.
Timer not working.	Timer dial set to "ON" instead of a specific time.	Rotate the timer dial to the desired duration.

If the problem persists after trying these solutions, please contact customer support.

## TECHNICAL SPECIFICATIONS

**Brand:** Korona

**Model Number:** 48100

**Capacity:** 27 Liters

**Power:** 1800 Watts

**Voltage:** 220 Volts

**Material:** Stainless Steel

**Color:** White

**Product Dimensions (L x W x H):** 45.9 x 37.2 x 45.5 cm (18.1 x 14.6 x 17.9 inches)

**Item Weight:** 6.1 Kilograms (13.45 lbs)

**Special Feature:** Removable Lid, Timer Function, Spigot, Insert Grid

## WARRANTY AND CUSTOMER SUPPORT

Korona products are manufactured with high-quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical assistance, spare parts, or warranty claims, please contact Korona customer support. Contact details can typically be found on the manufacturer's website or in the product packaging.

**Spare Parts Availability:** 2 Years