

Ufree U-0173

Ufree Cordless T-Blade Hair Trimmer (Model U-0173) Instruction Manual

This manual provides detailed instructions for the safe and effective use of your Ufree Cordless T-Blade Hair Trimmer. Please read thoroughly before first use.

1. INTRODUCTION

The Ufree Cordless T-Blade Hair Trimmer is a versatile grooming tool designed for precision hair trimming, beard grooming, and body shaving. It features a titanium ceramic T-blade, a powerful yet quiet motor, and a rechargeable battery for cordless operation.

Package Contents

- Ufree Cordless T-Blade Hair Trimmer
- 3 Guide Combs (1mm, 2mm, 3mm)
- USB Charging Cable
- Cleaning Brush
- Blade Oil
- Blade Protective Cover



Image: The Ufree Cordless T-Blade Hair Trimmer shown with its included accessories: three guide combs (1mm, 2mm, 3mm), a USB charging cable, a cleaning brush, and a blade protective cover.

2. SAFETY INFORMATION

- Exercise caution when using the trimmer around sensitive areas.
- Always ensure the trimmer is turned off before cleaning.
- Do not immerse the entire clipper in water.
- Store the trimmer properly in a dry place.
- Periodically charge the device to maintain battery health.
- Follow all general safety precautions for electric trimmers.

3. SETUP

Initial Charging

Before first use, fully charge the trimmer for approximately 2 hours using the provided USB charging cable. The charging port is located at the bottom of the device.



Image: The Ufree hair trimmer connected to a USB charging cable, illustrating the 2-hour charging time for 180 minutes of use.

Attaching Guide Combs

To adjust the trim length, select one of the three guide combs (1mm, 2mm, or 3mm). Align the comb with the trimmer blade and gently push until it clicks into place.



SUITABLE FOR ALL HAIRSTYLES

3 Guide combs to meet the needs of different length



Image: The Ufree hair trimmer with its three guide combs (1mm, 2mm, 3mm) attached, showing examples of hairstyles achievable with each length.

4. OPERATING INSTRUCTIONS

General Use

1. Ensure the trimmer is fully charged.
2. Attach the desired guide comb for your preferred hair length. For a close trim, the trimmer can be used without a comb.
3. Press the power button located at the bottom of the device to turn it on.
4. Hold the trimmer against the skin and move it slowly against the direction of hair growth.
5. For detailed lining and edging, use the trimmer without a guide comb, holding the T-blade flat against the skin.
6. After use, press the power button to turn off the trimmer.

Versatile Grooming

The Ufree trimmer is suitable for various grooming needs:

- **Hair Trimming:** Use with or without guide combs to achieve desired hair length and styles.
- **Beard Grooming:** Trim and shape beards with precision.
- **Body Shaving:** Safely remove body hair.
- **Detailing and Lining:** The T-blade is ideal for sharp lines and intricate designs.

MULTIPURPOSE



- **Hair Trimmer**

- **Beard Trimmer**

- **Body Shaver**


Image: The Ufree hair trimmer is shown being used for hair trimming, beard trimming, and body shaving, highlighting its versatility.

Demonstration Video: Beard Trimming

Your browser does not support the video tag.

Video: A seller demonstrating the Ufree trimmer for beard and mustache trimming, showcasing its precision and ease of use.

5. MAINTENANCE

Cleaning

1. Turn off the trimmer.
2. Use the provided cleaning brush to remove any loose hairs from the blade.

3. For a more thorough clean, rinse the blade under running water. **Do not immerse the entire trimmer.**
4. Allow the blade to air dry completely before reattaching the protective cover or storing.



Image: The detachable blade of the Ufree hair trimmer being rinsed under running water for easy cleaning.

Lubrication

Periodically apply a small drop of the included blade oil to the moving parts of the blade to ensure smooth operation and longevity.

Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Use the blade protective cover to prevent damage to the blades.

6. TROUBLESHOOTING

Trimmer not turning on or losing power

- Ensure the trimmer is fully charged. Connect it to the USB charging cable and allow 2 hours for a full charge.
- Check the charging cable and adapter for any damage.
- If the trimmer has not been used for a long period, it may require a longer initial charge.

Blades pulling hair or not cutting effectively

- Clean the blades thoroughly using the cleaning brush and by rinsing under water. Accumulated hair can hinder performance.
- Apply a small amount of blade oil to lubricate the blades.
- Ensure the guide comb is correctly attached and not damaged.

7. SPECIFICATIONS

Feature	Detail
Brand	Ufree
Model Number	U-0173
Blade Material	Titanium Ceramic T-Blade
Motor Speed	6500-7000 RPM
Noise Level	Under 60 decibels
Power Source	Battery Powered, Corded Electric (via USB), USB Adapter
Charging Time	Approximately 2 hours
Working Time	Up to 180 minutes
Item Weight	0.21 Kilograms (7.37 ounces)
Package Dimensions	7.05 x 3.15 x 1.65 inches

8. WARRANTY AND SUPPORT

The Ufree Cordless T-Blade Hair Trimmer comes with a 12-month warranty period. For any product-related inquiries, technical assistance, or warranty claims, please contact Ufree customer service.

Customer Service: 24-hour customer service support is available. Refer to your product packaging or the official Ufree website for contact details.