

[Manuals.plus](#) /

> [NEC](#) /

> NEC VersaPro VX-N Laptop User Manual

NEC VersaPro VX-N (VK26TX-N)

NEC VersaPro VX-N Laptop User Manual

Model: VersaPro VX-N (VK26TX-N)

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your NEC VersaPro VX-N laptop. Please read this manual thoroughly before using your device to ensure proper functionality and longevity.



Image 1.1: The NEC VersaPro VX-N laptop, showcasing its design and keyboard layout.

2. SETUP

2.1 Unpacking

Carefully remove all components from the packaging. Ensure the following items are present:

- NEC VersaPro VX-N Laptop
- AC Adapter and Power Cord
- Wireless Mouse (USB receiver included)
- WPS Office License Card



Image 2.1: The included wireless mouse with its USB receiver, which can be stored in the mouse's base.



Image 2.2: The WPS Office license card, required for activating the office suite.

2.2 Power Connection

1. Connect the AC adapter to the power input port on the side of the laptop.
2. Plug the power cord into a wall outlet.
3. Allow the battery to charge fully before initial use, though you can begin using the laptop while it charges.

2.3 Initial Boot and Windows 10 Setup

1. Open the laptop lid and press the power button.
2. Follow the on-screen instructions to complete the Windows 10 Pro setup. This typically involves selecting your region, language, and creating a user account.

2.4 Connecting Peripherals

- **Wireless Mouse:** Insert the USB receiver into an available USB port on the laptop. The mouse should connect automatically.
- **Wi-Fi:** After Windows setup, click the Wi-Fi icon in the taskbar, select your network, and enter the password.
- **Bluetooth:** To pair Bluetooth devices, go to *Settings > Devices > Bluetooth & other devices* and follow the pairing instructions.

3. OPERATING INSTRUCTIONS

3.1 Power Management

- **Power On:** Press the power button located on the laptop.
- **Shut Down:** Click the *Start* button, then *Power > Shut down*.
- **Sleep Mode:** Close the laptop lid or click the *Start* button, then *Power > Sleep*.
- **Restart:** Click the *Start* button, then *Power > Restart*.

3.2 Keyboard and Touchpad

The laptop features a full-sized keyboard and a multi-touch touchpad. Use the touchpad for cursor control and gestures such as scrolling and zooming. External mice can be connected via USB or Bluetooth.

3.3 External Display Connection

To connect an external monitor or projector:

1. Connect an HDMI cable from the laptop's HDMI port to the external display.
2. Press the *Windows key + P* to open the Project menu and select your desired display mode (e.g., Duplicate, Extend, Second screen only).

3.4 Using the DVD Drive

The integrated DVD drive supports reading and writing various disc formats. To open the tray, press the eject button on the drive itself or right-click the drive icon in *File Explorer* and select *Eject*.

3.5 WPS Office

Your laptop comes with WPS Office pre-installed. Use the provided license card to activate the software. WPS Office is compatible with Microsoft Office file formats and includes applications for word processing, spreadsheets, and presentations.

4. MAINTENANCE

4.1 Cleaning the Laptop

- Use a soft, lint-free cloth slightly dampened with water or a screen cleaner to wipe the display.
- For the keyboard and chassis, use a soft cloth. Avoid harsh chemicals.
- Use compressed air to clear dust from keyboard keys and ventilation grilles.

4.2 Battery Care

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place if not used for extended periods.
- Periodically calibrate the battery by fully charging and then fully discharging it.

4.3 Software Updates

Regularly check for and install Windows updates (*Settings > Update & Security > Windows Update*) and driver updates to ensure optimal performance and security.

4.4 Storage Management

The laptop features a Solid State Drive (SSD). To maintain performance, avoid filling the drive to its maximum capacity. Regularly delete unnecessary files and use Windows' built-in Disk Cleanup utility.

5. TROUBLESHOOTING

5.1 No Power

- Ensure the AC adapter is securely connected to both the laptop and a working power outlet.
- Check if the power outlet is functional by plugging in another device.
- If the battery is completely drained, allow it to charge for at least 30 minutes before attempting to power on.

5.2 No Display

- Ensure the laptop is powered on.
- If an external display is connected, try disconnecting it.
- Adjust the display brightness using the function keys (Fn + brightness keys).

5.3 Wi-Fi Connectivity Issues

- Check if Wi-Fi is enabled in Windows settings.
- Restart your router and modem.
- Ensure you are within range of the Wi-Fi network.
- Forget the network and reconnect.

5.4 Slow Performance

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Run a disk cleanup and defragmentation (for HDD, though SSDs benefit from TRIM, not defrag).
- Scan for malware or viruses.

6. SPECIFICATIONS

Brand	NEC
Model Name	VersaPro VX-N (VK26TX-N)
Operating System	Windows 10 Pro 64-bit
CPU Model	Intel Core i5-4210M
CPU Speed	2.6 GHz
RAM Memory Size	8 GB DDR3 SDRAM
Hard Disk Size	256 GB SSD (Solid State Drive)
Screen Size	15.6 Inches
Display Resolution	1280x720 Pixels

Graphics Coprocessor	Intel HD Graphics 4600
Connectivity	WiFi, Bluetooth, USB 3.0, HDMI
Optical Drive	DVD Drive
Item Weight	2.4 Kilograms
Color	Black

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact your seller directly. Specific warranty terms may vary depending on your region and retailer.