

## AXA RS3676

# AXA Absolute C5 Anti-theft Chain Lock User Manual

Model: RS3676

## 1. INTRODUCTION

---

Thank you for choosing the AXA Absolute C5 Anti-theft Chain Lock. This manual provides essential information for the proper setup, operation, and maintenance of your new lock. Designed for bicycles and scooters, this code-based chain lock offers a security level of 7 out of 15, providing reliable protection for situations with a low risk of theft.

Key features include:

- **Enhanced Security:** Features reinforced steel links with a 5 mm diameter.
- **Keyless Convenience:** Operates with a customizable four-digit code, eliminating the need for keys.
- **Automatic Click-in Function:** Simplifies locking.
- **Scratch Protection:** Equipped with a high-quality black polyester cover to prevent damage to your vehicle's paintwork.
- **Optimal Length:** 90 cm length allows for flexible attachment to various objects.



Image 1.1: The AXA Absolute C5 Chain Lock, showcasing its overall design and length.

## 2. SETTING YOUR PERSONAL CODE

---

Your AXA Absolute C5 lock comes with a factory preset code, usually "0000". It is highly recommended to change this to a personal, memorable four-digit code immediately after purchase.

1. **Open the Lock:** Align the dials to the current opening code (factory default is "0000") and press the release button to open the lock.
2. **Locate the Reset Mechanism:** With the lock open, look for a small reset button or screw on the side or bottom of the lock mechanism. This is often a small, recessed button that requires a pen tip or a small screwdriver to press.
3. **Enter Reset Mode:** Press and hold the reset button/screw. While holding it, rotate the dials to your desired new four-digit code. Ensure the numbers are clearly aligned with the indicator marks.
4. **Confirm New Code:** Release the reset button/screw. Your new code is now set.
5. **Test the Code:** Scramble the dials and then re-enter your new code to ensure it opens the lock correctly. If it does not open, repeat the steps carefully.



Image 2.1: Close-up view of the code setting mechanism on the AXA Absolute C5 lock. The dials are visible, ready for code input.

**Important:** Remember your new code. There is no master key or backdoor to reset the code if forgotten without knowing the current code.

### 3. OPERATING INSTRUCTIONS

### 3.1. Locking Your Bicycle/Scooter

1. **Position the Vehicle:** Park your bicycle or scooter in a secure location, ideally near a fixed object like a bike rack, lamppost, or sturdy fence.
2. **Wrap the Chain:** Loop the chain around the frame of your bicycle/scooter and the fixed object. Ensure the chain passes through a non-removable part of your vehicle, such as the frame, and not just the wheel.
3. **Insert the Pin:** Insert the locking pin into the lock body. The automatic click-in function will secure it.
4. **Scramble the Dials:** Once locked, scramble the code dials to prevent unauthorized access.



Image 3.1: A user demonstrating how to secure a bicycle to a bike rack using the AXA Absolute C5 lock, highlighting the protective polyester sleeve.

### 3.2. Unlocking Your Bicycle/Scooter

1. **Align the Code:** Rotate the dials to align with your personal four-digit code.
2. **Press Release Button:** Press the release button on the lock body. The locking pin will spring open.
3. **Remove the Lock:** Detach the chain from your bicycle/scooter and the fixed object.



Image 3.2: A user in the process of unlocking their bicycle with the AXA Absolute C5, demonstrating the ease of use and the lock's integration with the bike.

## 4. MAINTENANCE

---

Proper maintenance will extend the lifespan of your AXA Absolute C5 lock and ensure smooth operation.

- **Cleaning:** Wipe the lock body and chain cover with a damp cloth to remove dirt and grime. Avoid harsh chemicals.
- **Lubrication:** Periodically apply a small amount of silicone-based lubricant or lock lubricant to the moving parts of the code mechanism and the locking pin. This helps prevent sticking and corrosion, especially after exposure to rain or dust.
- **Storage:** When not in use, store the lock in a dry place to prevent rust and maintain the integrity of the polyester cover.
- **Polyester Cover:** The black polyester cover is designed to protect your bike's paintwork. Inspect it regularly for tears or excessive wear.

## 5. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Dials are stiff or hard to turn.	Dirt, dust, or lack of lubrication.	Clean the dials and apply a silicone-based lubricant to the mechanism. Work the dials back and forth to distribute the lubricant.
Locking pin does not click in or release smoothly.	Debris in the locking mechanism, lack of lubrication, or misalignment.	Ensure the pin is inserted straight. Clean any visible debris. Apply lubricant to the pin and inside the locking hole.
Cannot open the lock with the correct code.	Dials not perfectly aligned, code forgotten, or internal mechanism issue.	Double-check that each number is precisely aligned. Try slightly adjusting each dial. If the code is forgotten, the lock cannot be opened without knowing the code.
Polyester cover is damaged.	Wear and tear, sharp objects.	While minor damage may not affect security, significant tears could expose the chain and potentially scratch your bike. Consider replacing the lock if the cover is severely compromised.

## 6. SPECIFICATIONS

Feature	Detail
Brand	AXA
Model Number	RS3676
Lock Type	Code Chain Lock
Security Level	7 out of 15 (AXA Security Index)
Chain Diameter	5 mm
Chain Length	90 cm
Material	Hardened Steel (chain), Polyester (cover)
Color	Black
Dimensions (L x W x H)	46 x 7 x 3.5 cm (packaged)
Weight	Approximately 635 grams (1.4 lbs)
Manufacturer	Service Best International



Image 6.1: Packaging of the AXA Absolute C5 lock, clearly indicating the security index of 7 out of 15.

## 7. WARRANTY AND SUPPORT

AXA products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official AXA website. For technical support or inquiries, please contact your retailer or the manufacturer directly.




Manufacturer: Service Best International


For more information, you may visit the [AXA official website](#).

© 2024 AXA. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.


## Related Documents - RS3676

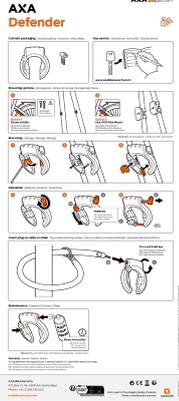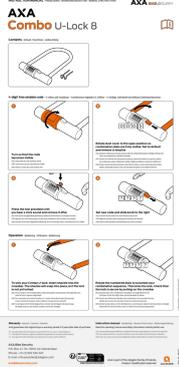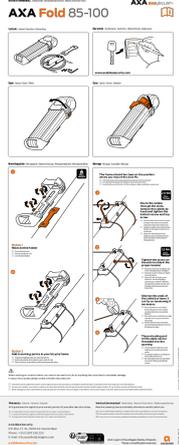	<p><a href="#">AXA Defender Bike Lock Manual: Installation, Operation &amp; Maintenance</a></p> <p>Official instruction manual for the AXA Defender bike lock. Learn how to install, operate, and maintain your lock for optimal security. Includes warranty and product details.</p>
	<p><a href="#">AXA Combo U-Lock 8 Instruction Manual</a></p> <p>Comprehensive guide for setting the combination and operating the AXA Combo U-Lock 8 bicycle lock, including warranty and contact information.</p>
	<p><a href="#">AXA Fold 85-100 Bicycle Lock Installation and User Manual</a></p> <p>Comprehensive guide for installing and using the AXA Fold 85-100 bicycle lock, including mounting options, assembly steps, and warranty information.</p>

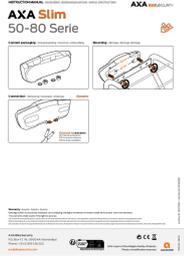


[AXA Slim 50-80 Series Bicycle Light Instruction Manual](#)

Instruction manual for the AXA Slim 50-80 Series bicycle light, covering content packaging, mounting, and dynamo connection. Includes warranty information and company details.

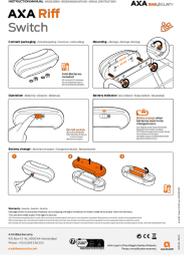

[AXA Riff Switch Bicycle Light Instruction Manual](#)

This document provides instructions for the AXA Riff Switch bicycle light, covering content, mounting, operation, battery indicator, battery replacement, and warranty information.

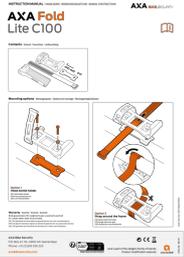

[AXA Fold Lite C100 Instruction Manual](#)

Instruction manual for the AXA Fold Lite C100 bike lock, covering mounting options and code setting procedures.