



Manuals.plus /

› FILCO /

› FILCO Majestouch Minila R Convertible Mechanical Keyboard User Manual

FILCO FFBTR63MRL/ESG

FILCO Majestouch Minila R Convertible Mechanical Keyboard User Manual

Model: FFBTR63MRL/ESG

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your FILCO Majestouch Minila R Convertible mechanical keyboard. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

The FILCO Majestouch Minila R Convertible is a compact 60% mechanical keyboard featuring Cherry MX Red switches and durable double-shot PBT keycaps. It offers versatile connectivity options, supporting both wired USB and wireless Bluetooth 5.1 connections.

2. PACKAGE CONTENTS

Before proceeding with the setup, please verify that all items are present in the package:

- FILCO Majestouch Minila R Convertible Keyboard
- USB Cable
- Keycap Puller
- Replacement Keycaps (e.g., Esc, Del, Ctrl, Win)
- 2 x AA Batteries (pre-installed or included separately)
- User Manual (this document)



Image: The retail packaging box for the FILCO Majestouch Minila R Convertible keyboard, displaying the product name and key features like Bluetooth and MX switches.



Image: A clear plastic tray containing the gray USB cable, a red keycap puller, and several gray replacement keycaps (e.g., Esc, Del, Ctrl, Win).

3. SETUP

3.1 Battery Installation

The keyboard operates wirelessly using two AA batteries. These are typically included with your purchase. To install or replace batteries:

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Insert two AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2 Wired Connection

For a wired connection, use the provided USB cable:

1. Connect the smaller end of the USB cable to the USB port on the back of the keyboard.
2. Connect the larger end of the USB cable to an available USB port on your computer.
3. The keyboard will be automatically recognized by your operating system.

3.3 Bluetooth Connection

The keyboard supports Bluetooth 5.1 for wireless connectivity. It can pair with up to four devices.

1. Ensure the keyboard is powered on and in wireless mode (refer to Section 4.1).
2. Press and hold the **Fn** key and one of the Bluetooth device keys (1, 2, 3, or 4) for approximately 3 seconds until the corresponding LED indicator above the number key flashes rapidly. This indicates pairing mode.
3. On your device (computer, smartphone, tablet), open Bluetooth settings and search for new devices.
4. Select "FILCO Minila R Convertible" from the list of available devices.
5. If prompted, enter the pairing code displayed on your screen using the keyboard and press **Enter**.
6. Once paired, the LED indicator will stop flashing and remain solid for a few seconds, then turn off. The keyboard is now connected.
7. Repeat these steps for up to four different devices, assigning each to a different Bluetooth device key (1-4).

4. OPERATING INSTRUCTIONS

4.1 Switching Between Wired and Wireless Modes

To switch between wired and wireless (Bluetooth) modes, use the switch located on the underside or back of the keyboard. Ensure the keyboard is in the correct mode for your desired connection type.

4.2 Switching Between Paired Bluetooth Devices

To switch between previously paired Bluetooth devices, simply press the **Fn** key along with the corresponding Bluetooth device key (1, 2, 3, or 4) that the device is assigned to. The keyboard will attempt to connect to that device.

4.3 Using Function Keys and Special Commands

Due to its 60% compact layout, many standard keys (like F1-F12, navigation keys, etc.) are accessed via the **Fn** (Function) key combinations. Refer to the keycap legends for specific functions. Typically, these are printed on the front or side of the keycaps.



CHERRY MX linear red switch

Red switch



赤軸

軽くソフトなキータッチで、クリック感なし。黒軸同様に押下げ2mmのところまでスイッチが入る。メカニカルテイストは薄めだが、万人受けする不動の二番人気。

Image: A full top-down view of the FILCO Majestouch Minila R Convertible keyboard, showcasing its compact 60% layout with Sky Grey and light blue keycaps.



Image: A diagram of the keyboard layout, highlighting the main keys in light gray and light blue, and accent keys (like Ctrl, Win, Alt) in a darker gray. This illustrates the keycap color scheme.



Image: A close-up view of the top-right section of the keyboard, showing the 'scroll' and 'caps' lock indicator lights, and the number keys 1, 2, 3, 4, which also serve as Bluetooth device indicators.



Image: A side view of the keyboard, prominently featuring the metallic FILCO logo embedded on the gray casing.

5. MAINTENANCE

5.1 Cleaning the Keyboard

To maintain optimal performance and appearance:

- Disconnect the keyboard from your computer (wired) or turn off (wireless).
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keycaps and casing.
- For dust and debris between keycaps, use compressed air.
- Avoid using harsh chemicals, solvents, or abrasive materials.

5.2 Keycap Removal and Replacement

The keyboard features durable PBT double-shot keycaps. You can remove and replace keycaps using the included keycap puller:

1. Gently place the keycap puller over the keycap you wish to remove.
2. Apply even pressure and pull upwards until the keycap detaches from the switch stem.
3. To replace, align the keycap with the switch stem and press down firmly until it clicks into place.



Image: A close-up view of individual keycaps, showcasing their double-shot PBT construction. One keycap is shown from the top (letter 'A'), another from the bottom (showing the stem mount), and a larger keycap (Ctrl) is also visible.



Image: A detailed view of a Cherry MX Red mechanical switch, characterized by its red stem, indicating a linear, non-tactile, and non-clicky switch type.

6. TROUBLESHOOTING

If you encounter issues with your keyboard, refer to the following common solutions:

- **Keyboard Not Responding (Wired):**

Ensure the USB cable is securely connected to both the keyboard and the computer. Try a different USB port or cable. Restart your computer.

- **Keyboard Not Responding (Wireless):**

Check if the keyboard is powered on and has sufficient battery charge. Ensure the keyboard is in wireless mode. Re-pair the keyboard with your device (refer to Section 3.3). Ensure Bluetooth is enabled

on your device.

- **Bluetooth Connection Drops Frequently:**

Ensure the keyboard is within range of your device. Minimize interference from other wireless devices. Check and replace batteries if low.

- **Specific Keys Not Working:**

Remove the keycap and check for any debris obstructing the switch. Re-seat the keycap firmly. If the issue persists, contact support.

- **Incorrect Key Output:**

Ensure the correct keyboard layout is selected in your operating system settings.

7. SPECIFICATIONS

Model Name	FFBTR63MRL/ESG
Product Dimensions	4.92 x 11.81 x 1.38 inches
Item Weight	1.63 pounds
Manufacturer	Filco
Batteries	2 AA batteries (included)
Compatible Devices	Smartphone, Laptop, Tablet
Connectivity Technology	Bluetooth
Keyboard Description	Mechanical
Recommended Uses	Business, Education, Everyday Use
Special Feature	Bluetooth, USB-A passthrough port (for wired connection)
Color	Cherry MX Red (switch type)
Style	Modern
Material	Polybutylene Terephthalate (PBT)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

FILCO products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official FILCO website. Keep your proof of purchase for warranty claims.

8.2 Customer Support

If you require further assistance, have questions, or encounter issues not covered in this manual, please contact FILCO customer support through their official website or the retailer from whom you purchased the product.

