

**atolla T201**

# atolla Laser Distance Meter User Manual

Model: T201

## 1. INTRODUCTION

Thank you for choosing the atolla Laser Distance Meter, Model T201. This compact and versatile device is designed to provide accurate and efficient measurements for a wide range of applications, from home DIY projects to professional construction tasks. With its advanced laser technology, multiple measurement modes, and user-friendly interface, the T201 simplifies complex measuring processes.



Figure 1: atolla Laser Distance Meter (Model T201) with accessories.

## 2. SAFETY INFORMATION

**WARNING:** This is a Class II laser product. Do not stare into the laser beam. Avoid direct eye exposure.

**Laser output is less than 1mW.**

- Do not attempt to modify or disassemble the device.
  - Keep the device out of reach of children.
  - Use only specified batteries (2 AAA).
  - Do not use the device in explosive environments or near flammable materials.
  - Protect the device from extreme temperatures and direct sunlight.
  - Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- 

## 3. SETUP

### 3.1 Battery Installation

The atolla Laser Distance Meter requires two AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment cover on the rear of the device.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover by sliding it upwards until it clicks into place.

### 3.2 Powering On/Off

- To power on the device, press the **ON/READ** button. The backlit LCD will illuminate.
  - To power off the device, press and hold the **OFF/Return** button for a few seconds, or the device will automatically turn off after 3 minutes of inactivity to conserve battery life.
- 

## 4. OPERATING THE DEVICE

### 4.1 Button Functions Overview

# Function Buttons

60m



Figure 2: Key button functions on the atolla Laser Distance Meter.

- **ON/READ Button:** Powers on the device, initiates a measurement, or confirms a selection.
- **+/- UNIT Button:** Toggles between addition/subtraction mode and changes measurement units (meters, inches, feet).
- **Area/Volume/Indirect Measurement Button:** Cycles through different measurement modes (Area, Volume, Pythagorean).
- **Reference Button / Mute Button:** Changes the measurement reference point (front or rear of the device) or mutes/unmutes the device sounds.
- **History Button:** Accesses the memory to review the last 20 measurements.
- **OFF/Return Button:** Powers off the device or returns to the previous screen/mode.

## 4.2 Changing Measurement Units

The device supports measurements in meters (m), inches (in), and feet (ft). To change the unit:

1. Press the **+/- UNIT** button repeatedly to cycle through the available units.
2. The selected unit will be displayed on the LCD.



## Changing Display Units

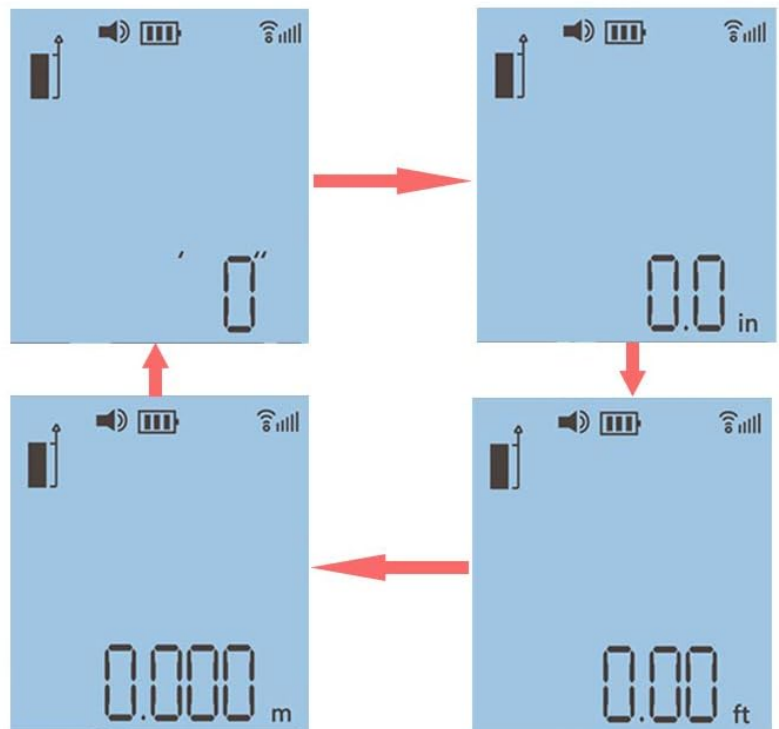 


Figure 3: Displaying measurements in different units.

### 4.3 Setting Reference Point

Measurements can be taken from the front or the rear of the device. The default reference point can be adjusted by +/- 7mm if necessary for calibration.

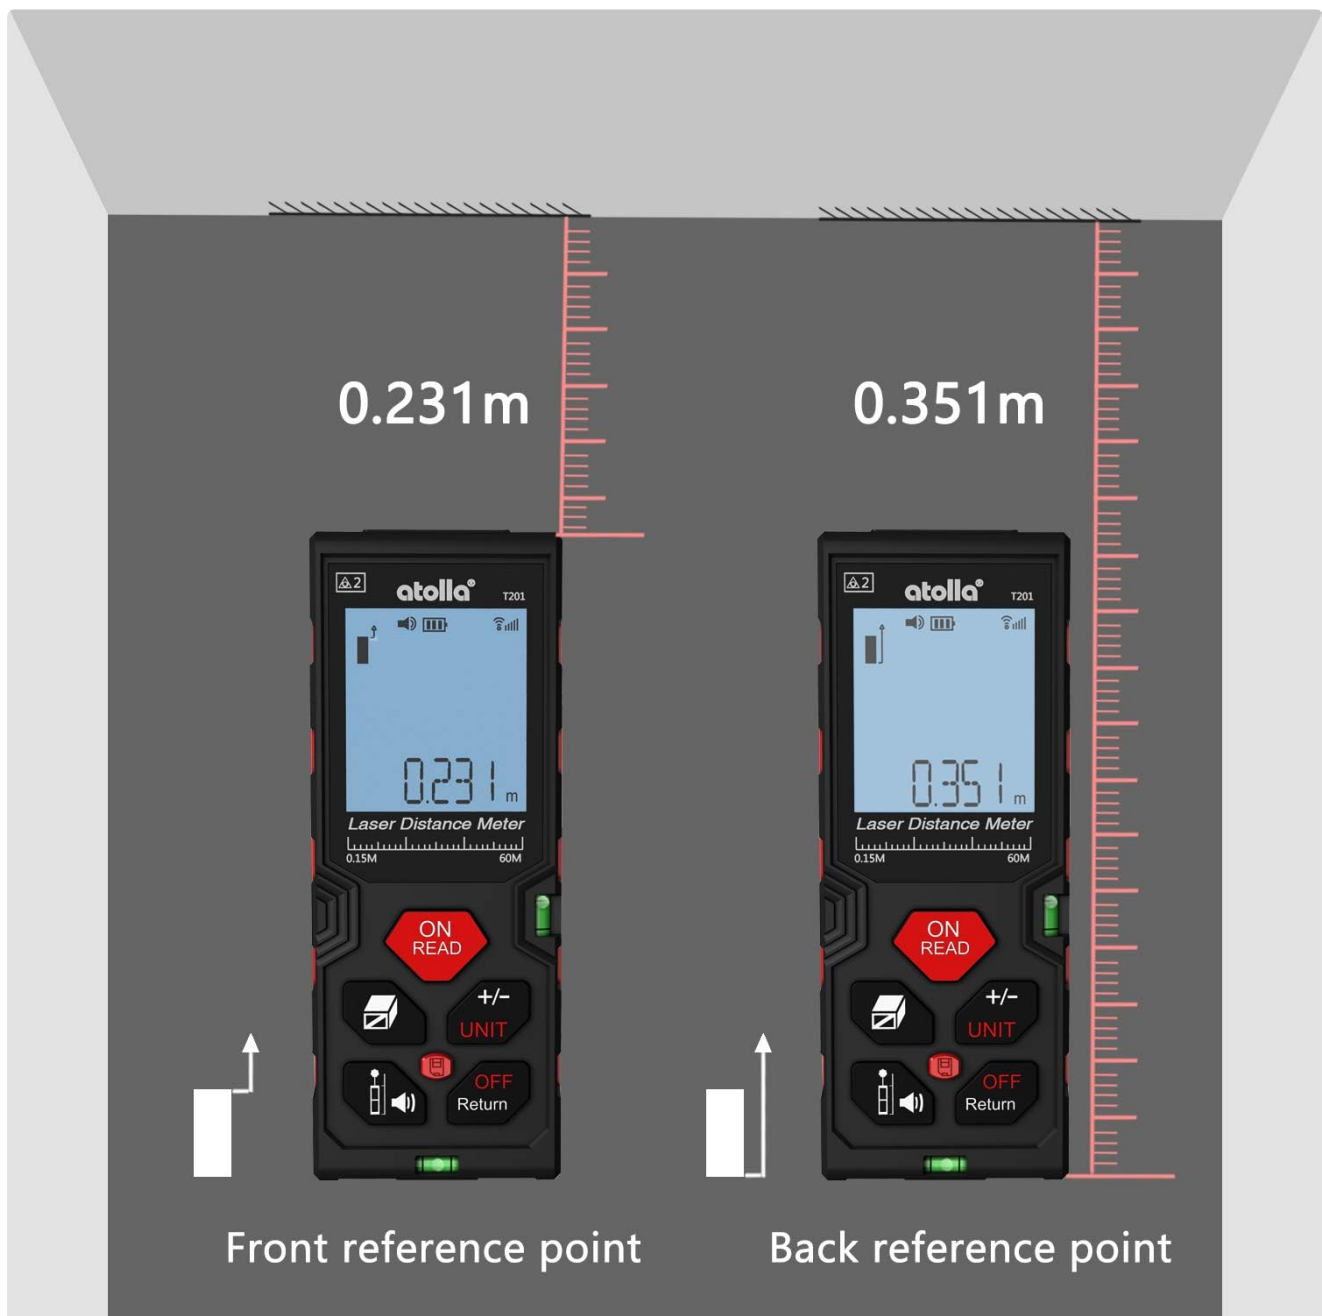 


Figure 4: Front vs. Back Reference Point.

#### 4.4 Measurement Modes

 
The atolla Laser Distance Meter offers several measurement modes:

- **Single Measurement:** Press **ON/READ** once to activate the laser, then again to take a single measurement.
- **Continuous Measurement (Min/Max):** Press and hold the **ON/READ** button to enter continuous measurement mode. The device will continuously measure and display the current, minimum, and maximum distances. Press **ON/READ** again to stop.

# Continuous Measurement



## Max. and Min

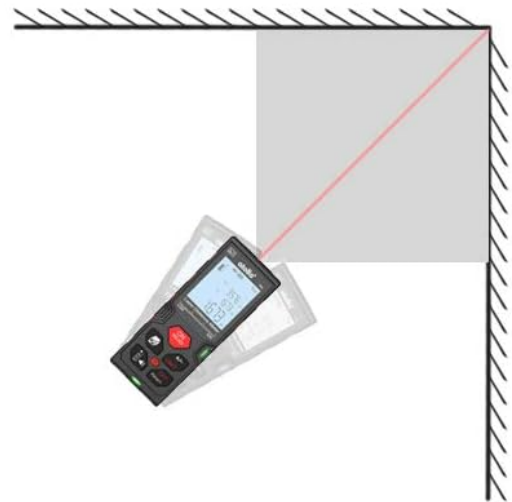

## Measurement


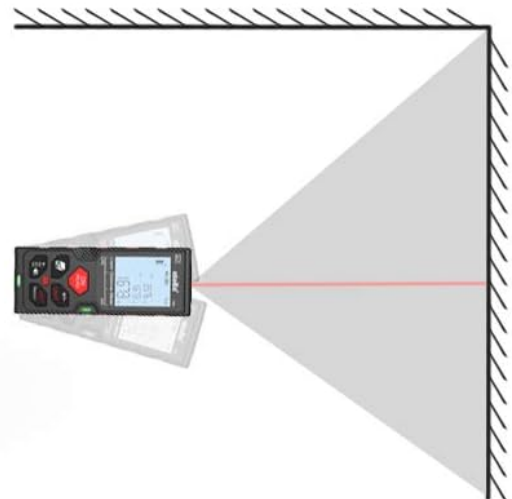 


Figure 5: Continuous Measurement Mode.

- **Area Measurement:** Press the **Area/Volume/Indirect Measurement** button once. The display will show an icon for area. Take two consecutive measurements (length and width). The device will automatically calculate and display the area.
- **Volume Measurement:** Press the **Area/Volume/Indirect Measurement** button twice. The display will show an icon for volume. Take three consecutive measurements (length, width, and height). The device will automatically calculate and display the volume.
- **Pythagorean Measurement:** Press the **Area/Volume/Indirect Measurement** button repeatedly until the desired Pythagorean mode icon appears (e.g., for indirect height or length). Follow the on-screen prompts to

take the required measurements (e.g., hypotenuse and one side). The device will calculate the unknown side.


## Measurements

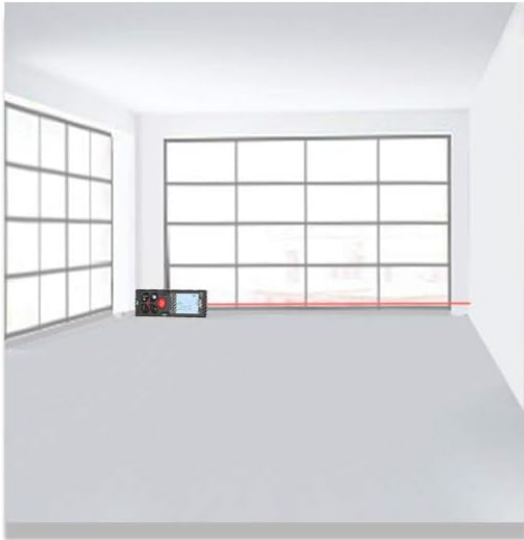 

## Area Measurement


 
## Volume Measurement

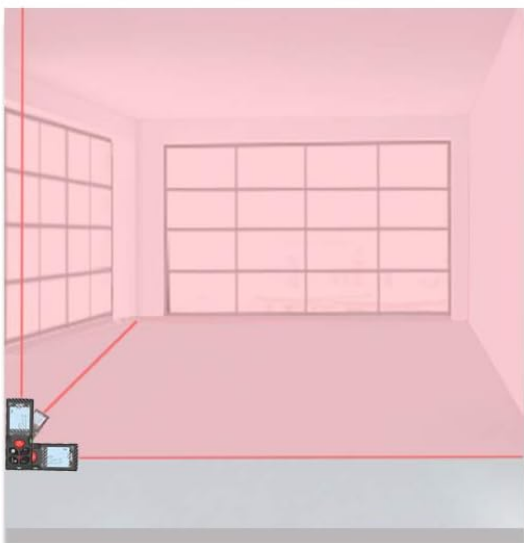

## Using Two Points

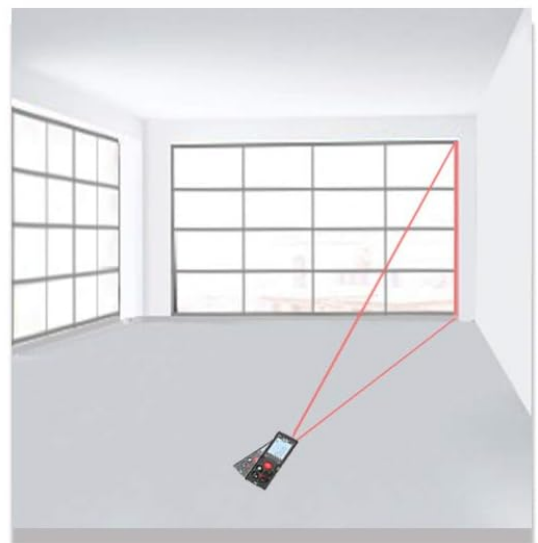 


Figure 6: Area, Volume, and Pythagorean Measurement Modes.

### 4.5 Addition and Subtraction

In measurement mode, press the **+/- UNIT** button to switch between addition (+) and subtraction (-) operations. Take subsequent measurements, and the device will add or subtract them from the previous result.

### 4.6 Mute Function

To mute or unmute the device's sounds (e.g., button presses, measurement confirmations), press the **Reference Button / Mute Button** (speaker icon) briefly.

### 4.7 Reviewing Measurement History

The device can save up to 20 measurement records. To review them, press the **History** button (book icon). Use the **+/- UNIT** buttons to navigate through the stored measurements.



Figure 7: Reviewing Measurement History and Mute Function.

#### 4.8 Product Demonstration Video

Video 1: Official atolla Laser Measure demonstration, showcasing various features and applications.

### 5. MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the device. Do not use abrasive materials or solvents. Ensure the laser lens is kept clean for accurate measurements.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Water and Dust Resistance:** The device has an IP54 rating, meaning it is protected against dust ingress and splashing water from any direction. While resistant, avoid submerging the device in water.

## 6. TROUBLESHOOTING

- **Device not powering on:** Check battery installation and ensure batteries are not depleted. Replace if necessary.
- **Inaccurate measurements:** Ensure the laser lens is clean. Verify the correct reference point is selected (front or rear). Ensure the target surface is reflective enough and the device is stable.
- **Display not visible:** Check battery level. Ensure the backlit display is enabled (if applicable, refer to advanced settings in the full manual).
- **No sound:** Check if the mute function is activated. Press the mute button to toggle sound.

 
## 7. SPECIFICATIONS

| Feature                | Specification                                           |
|------------------------|---------------------------------------------------------|
| Brand                  | atolla                                                  |
| Model Number           | T201                                                    |
| Measuring Range        | 0.15 to 60m (196Ft)                                     |
| Accuracy               | ±2mm                                                    |
| Laser Class            | Class II, <1mW                                          |
| Units of Measurement   | m / in / ft                                             |
| Measurement Modes      | Single, Continuous (Min/Max), Area, Volume, Pythagorean |
| Memory Storage         | Up to 20 records                                        |
| Auto-Off Function      | 3 minutes of inactivity                                 |
| Water Resistance Level | IP54 (Water Resistant & Dustproof)                      |
| Power Source           | 2 x AAA batteries (included)                            |
| Item Weight            | 111 Grams (3.92 ounces)                                 |
| Product Dimensions     | 1.85"L x 0.98"W x 4.8"H                                 |
| Color                  | Black                                                   |

## 8. WARRANTY AND SUPPORT

atolla products are designed for reliability and performance. For warranty information, technical support, or any inquiries regarding your Laser Distance Meter, please visit the official atolla store or contact customer service through the platform where you purchased the product.

Official atolla Store: <https://www.amazon.com/stores/atolla/page/DE747691-F2A8-46A1-96BB-A8B09E82746F>

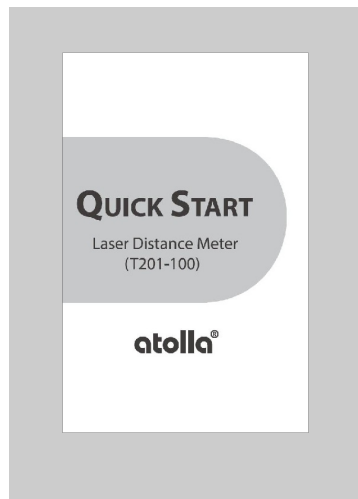

ing Laser Distance Meter T201 100 Misurazione La portata massima di una singola misurazione atolla è  
metri 328 piedi Sia luce solare intensa come pure superfici A1 Sg5ynPuL ref dp product quick view m  
media amazon images I |||

lang: score:10 filesize: 1.12 M page count: 15 document date: 2023-11-07

ing Laser Distance Meter T201 100 Mediciones El medidor de distancia láser atolla tiene un máximo  
rango medición 328 pies m uso con luz solar intensa puede disminuir el A11ZMvdVdKL ref dp product  
quick view media amazon images I |||

lang: score:9 filesize: 1.13 M page\_count: 15 document date: 2023-11-07

DT500 Distance Finder Technical Writing Dept Laser Meter MODELS DT40M DT60M and DT100M the  
Programming Menu section of this manual for details 3 The unit automatically switches OFF after three  
minutes inactivity Long press CLR to switch manually 4 Press cancel last action performed or clear data  
displayed on screen 5 UNIT change measure ft feet in Extech Manual instrumart assets DT Series Meters  
User res cloudinary iwH image upload q auto g center 1 26 USER MANUAL 2 DT40 60 100m en GB v1 8  
17 Contents Introduction Product Instrumart Thank you selecting This meter measures distance up 40m  
131 60m 197 UM extech resources dt40m dt60m dt100m um vn media filedn  
laiO5KRMSHjzTrvKmEMyQ8 FLIR Test og måling DigiKey Instrukcja obsługi ang Dalmierz laserowy  
100m Merazet Poznań EXTECH ETÄISYYSMITTARI LASERETÄISYYSMITTARI 60M Lasermittarit ja  
mittalaitteet Onninen d8ac8a55 49a565df 09727fe4 18418000 merazet pl img kesko onninen pim  
production s3 eu west amazonaws pimddocuments atolla t201 user Download Electronics YIC Stock  
Components Distributor at ■■■■■■■■■■■■■■■■■■■■■■■■■■■■■■■■ ■■■■■ 40 100 yic  
electronics datasheet 5a www cube co th product attachment id 2283 file 5b2efa6210735 5b2ef9a9452ac  
5b2efd594369f dev idlboise sites default files 328 calculates Area Volume Indirect readings 1 Indirect  
Tootekataloog Ronex OÜ E pood Mõõteriistad valveseadmed Tootekataloog valveseadmed » DT100  
srsltid AfmBOooplpZ00rg6DzHUatR3IK34EyX1m oVZ8m7kJFcYpu6yMB b2hL  
AfmBOoodxiqA5ZIkJr7qLcEKhfvoOr8kmqCuZ3vDqMmTkx83hrqpRp  
AfmBOopa7TdMvZorVhJxPdSDS zLMSJ0OuV VNVcAq0MCbSLyRbYldF6d6 AfmBOopwrg  
7i6IBvdjdU8qqc AHYYSZbBlkWLI07h frcx145xes21  
AfmBOopbcCkpkRo9TC5JBTY97ELpXAEB0OCQKgiQSpuksVVoWCbhapJe



AfmBOoqSE2upw34o18CZdZQbHzH XmWDvCg6w8zDkoJBrdFN5v4wTaK5  
AfmBOoogMbgXFytRUcL4hTspMOscqRP pMcls mSUzk5K3UwwGqddo h  
AfmBOoplS2R8R9QiHUiWErb5A ch paxHlubCO37NUOMkTXGPpA 2xmw  
AfmBOopAGDoOaZ4osiDYwJLQJm35UX9QLc Yqfn 6w8 gba VSDGm7cU  
AfmBOope8JmKWOP67cY8SgZUwBSvpYcNqtKFXHktpXBb0eU3nJDi0uw EXTDT40M EN specs  
safetyexpress InstrumartInstrukcja angInstrukcja angDT40M ManualProduct Instrumart2 DT40Matolla  
manualthe inThank forThank forThis readings This readings Thank 1 Thank Indirect This readings the  
inUSER Introduction3 for3 forDalmierz PoznańDalmierz PoznańDT60M DigiKeyThank forDT40M  
YICEXTECH ■■■■ EXTECH OnninenTootekataloog DT100Extech ManualExtech b2hLExtech  
AfmBOoodxiqA5ZiK2Jjr7qLcEKhfvoOr8kmqCuZ3vDqMmTk8x3hrqpRpExtech  
AfmBOopa7TdMvZorVhJxPdSDsZLMSJ0OuvVNVcAq0MCbSLyRbYldFd66Extech frcx145xes21Extech  
AfmBOopbcCkpkRo9TC5JBTY97ELpXAEb0OCQKgiQSpukSvVoWCbhapJeExtech  
XmWDvCg6w8zDkoJBrdFN5v4wTaK5Extech hExtech 2xmwExtech VSDGm7cUExtech  
AfmBOope8JmKWOP67cY8SgZUwBSvpYcNqtKFXHktpXBb0eU3nJDi0uwExtech Manualdt40m  
enDT40M enExtech ManualDT40M enEXTDT40M ENDT40M eninstrumart Manualinstrumart  
b2hLinstrumart AfmBOoodxiqA5ZiK2Jjr7qLcEKhfvoOr8kmqCuZ3vDqMmTk8x3hrqpRpinstrumart  
AfmBOopa7TdMvZorVhJxPdSDsZLMSJ0OuvVNVcAq0MCbSLyRbYldFd66instrumart  
frcx145xes21instrumart  
AfmBOopbcCkpkRo9TC5JBTY97ELpXAEb0OCQKgiQSpukSvVoWCbhapJeinstrumart  
XmWDvCg6w8zDkoJBrdFN5v4wTaK5instrumart hinstrumart 2xmwinstrumart VSDGm7cUinstrumart  
AfmBOope8JmKWOP67cY8SgZUwBSvpYcNqtKFXHktpXBb0eU3nJDi0uwinstrumart AfmBOoqjCU  
ZWuP0to8oqR3XeMWSb7i3BNMrtfj7bP p 7ztHGQTwxres Manualextech enmerazet d8ac8a55merazet  
49a565dfmerazet 09727fe4merazet d8ac8a55extech Manualyic DT40Mwww 5b2efa6210735www  
5b2ef9a9452acwww 5b2efd594369fkesko 18418000extech enextech enfiledn UMinstrumart Manualdev  
enidlboise enspecs ENidlboise forthe 7ztHGQTwxinstrumart  
AfmBOoraxqMDbyRlZLijPcoCIma7997zDiP67criUE9 w1iDqMPgEJq0res w1iDqMPgEJq0instrumart  
AfmBOorNHfgUVSRJMtWTvkSWTN9b0EvpB peQfi WoogUxfQdJitH6oNres  
WoogUxfQdJitH6oNinstrumart  
AfmBOopehEjxFB1zBI8aUWFDWeYTcQ0z7WLDiqZuTE8VYMTSoNfr8Zueres  
AfmBOopehEjxFB1zBI8aUWFDWeYTcQ0z7WLDiqZuTE8VYMTSoNfr8Zueinstrumart  
AfmBOoqb9S11eLLYLucniDtHQcHSngv6DkfgkZxahqnvhlBgHmRNFeGres instrument is designed  
provide years dependable service if following care instructions are Keep dry free from dustthe  
AfmBOoqb9S11eLLYLucniDtHQcHSngv6DkfgkZxahqnvhlBgHmRNFeGinstrumart  
AfmBOopdpYJtw7F9fKF3AAHU8E6l63kasovZEBWBCydS3d0V7bkhxny4res dustThis  
AfmBOorgtaUH2K4tfQN 4zwQ9HlmtA6r fA9PcyJwdMIKpf24sDuZ9XQinstrumart  
AfmBOopdpYJtw7F9fKF3AAHU8E6l63kasovZEBWBCydS3d0V7bkhxny4instrumart AfmBOoqKCGwh  
b7LaUmm4gwHftZ1ffHkM9xnvG UsW2iEle noh1oswures AfmBOoqgDBNdDdZ  
rvmpXJPgdpJYzpZpjRDEKXySQ0Kpb1B75eM8Pi1Tinstrumart AfmBOorwLUOLBzz HekiYpQwtk5UFRg  
zORDqM23G Pyb8q55DCjbu6Sinstrumart |||

## USER MANUAL Laser Distance Meter MODELS DT40M, DT60M, and DT100M

Contents Introduction ..... 3

Safety Instructions ..... 3

Descriptions.....

lang:en score:7 filesize: 880.47 K page\_count: 21 document date: 2017-08-28