

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CanMixs](#) /

› [Canmixs T30 Wireless Earbuds Bluetooth Headphones User Manual](#)

CanMixs T30

Canmixs T30 Wireless Earbuds Bluetooth Headphones User Manual

Model: T30 | Brand: CanMixs

INTRODUCTION

Thank you for choosing the Canmixs T30 Wireless Earbuds. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity. Please read this manual carefully before using the product.

SETUP GUIDE

1. Initial Charging


Before first use, ensure both the earbuds and the charging case are fully charged. Connect the USB Type-C charging cable to the charging case and a power source. The LED display on the charging case will indicate the charging status.

- Insert earbuds into the charging case correctly.
- Close the charging case lid.
- Connect the charging case to a power adapter using the provided USB Type-C cable.
- The LED display on the charging case shows the battery level.

2. Pairing with Your Device

The Canmixs T30 earbuds feature automatic pairing for convenience.

1. Take both earbuds out of the charging case. They will automatically power on and connect to each other within 10 seconds.
2. On your mobile phone or Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "T30" from the list to pair.
4. Once paired, the earbuds will automatically connect to your phone in subsequent uses.

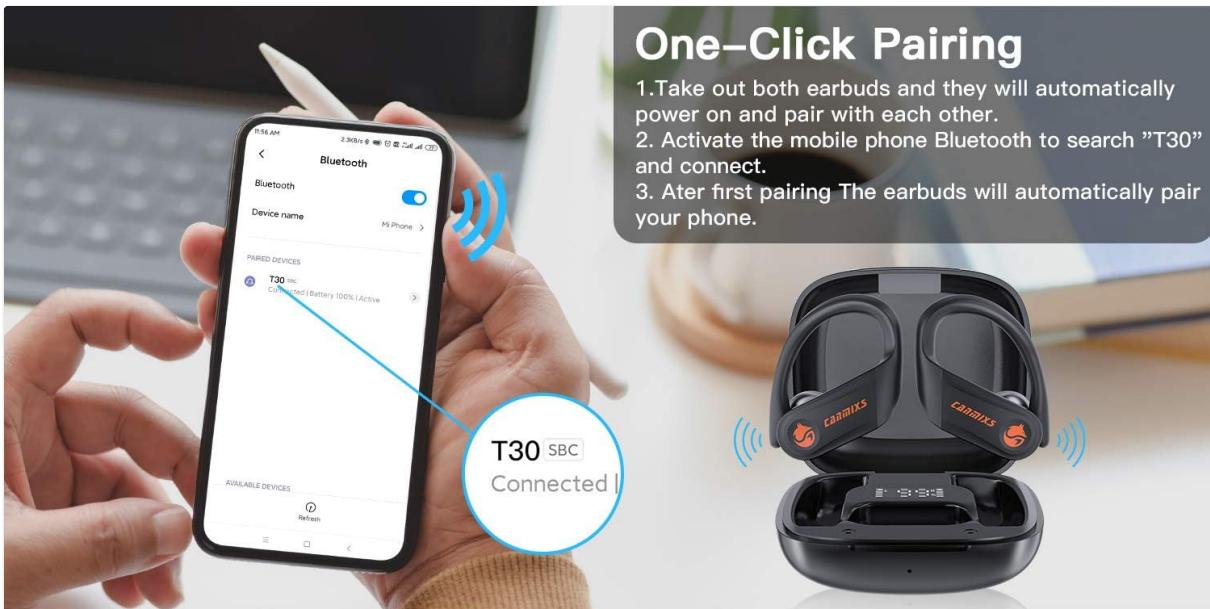

Broad Compatibility

Compatible with 99% of Bluetooth mobile phones and tablets
Computers and other equipment on the market.



Figure 1: One-Click Pairing Process. This image illustrates how to connect the T30 earbuds to a mobile device via Bluetooth, showing the earbuds in their charging case and a phone screen with 'T30 SBC Connected' in the Bluetooth settings.

OPERATING INSTRUCTIONS

1. Multi-function Touch Controls

The Canmixs T30 earbuds feature touch-sensitive controls for various functions. Refer to the diagram below for a visual guide.



Multi-function Button

| | | | |
|---|---|---|---|
|  |  |  |  |
| Automatic Power On/Off | Short Touch Play/Pause | Short Touch Answer Call | Touch Twice L/R Previous/Next Song |
|  |  |  |  |
| Short Touch End Call | Touch Three Times L/R volume -/+ | Touch and Hold for 2s SIRI/S-Voice | Touch and Hold for 2s Reject Call |

Figure 2: Multi-function Button Controls. This image details the physical features of the earbuds and charging case, including the Type-C charging port, microphone, magnetic charging points, and a comprehensive guide to touch control gestures for power, play/pause, call management, track navigation, volume, and voice assistant activation.

- **Automatic Power On/Off:** Earbuds power on automatically when removed from the case and power off when placed back in the case.
- **Play/Pause:** Short touch (single tap) on either earbud.
- **Answer Call:** Short touch (single tap) on either earbud.
- **End Call:** Short touch (single tap) on either earbud.
- **Reject Call:** Touch and hold for 2 seconds on either earbud.
- **Next Song:** Touch twice on the **Right** earbud.
- **Previous Song:** Touch twice on the **Left** earbud.
- **Volume Up (+):** Touch three times on the **Right** earbud.
- **Volume Down (-):** Touch three times on the **Left** earbud.
- **Activate Voice Assistant (SIRI/Voice):** Touch and hold for 2 seconds on either earbud.

2. Wearing the Earbuds

The T30 earbuds are designed with ergonomic ear hooks for a secure and comfortable fit, especially during

sports and active use. Choose the appropriate ear caps for the best fit and sound experience.

- Identify the Left (L) and Right (R) earbuds.
- Place the earbud in your ear canal and gently rotate it to fit snugly.
- Adjust the ear hook over your ear for added stability.

MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds have a waterproof rating. However, avoid prolonged exposure to water or submerging them. Dry them thoroughly if they get wet.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Battery Care:** To preserve battery life, charge the earbuds and case regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

| Problem | Solution |
|----------------------------------|---|
| Earbuds not pairing with device. | <ul style="list-style-type: none">• Ensure earbuds are fully charged.• Make sure Bluetooth is enabled on your device.• Place earbuds back in the case, then take them out again to re-initiate pairing mode.• Forget "T30" from your device's Bluetooth list and try pairing again.• Ensure no other Bluetooth devices are interfering. |
| Only one earbud is working. | <ul style="list-style-type: none">• Ensure both earbuds are charged.• Place both earbuds back into the charging case, then remove them simultaneously to allow them to connect to each other.• If the issue persists, try resetting the earbuds (refer to specific reset instructions if available, otherwise, repeat pairing process). |
| Earbuds not charging. | <ul style="list-style-type: none">• Check if the charging cable is securely connected to both the case and the power source.• Ensure the charging contacts on the earbuds and inside the case are clean and free of debris.• Try a different charging cable or power adapter. |

| Problem | Solution |
|---------------------------------------|---|
| Poor sound quality or disconnections. | <ul style="list-style-type: none"> Ensure the earbuds are within the Bluetooth range of your device (typically 10 meters/33 feet). Reduce obstacles between the earbuds and your device. Check for interference from other wireless devices. Ensure ear caps are properly fitted for optimal sound. |

TECHNICAL SPECIFICATIONS

| | |
|---|--------------------------------|
| Model: | T30 |
| Bluetooth Version: | 5.0 |
| Audio Codec: | HSP, HFP, A2DP, AVRCP |
| Earbud Battery Capacity: | 3.7V / 50 mAh |
| Charging Case Battery Capacity: | 3.7V / 600 mAh |
| Playing Time (single charge): | 4-5 hours |
| Total Playtime with Charging Case: | Up to 35 hours |
| Talking Time (single charge): | 4-5 hours |
| Standby Time: | 120-150 hours |
| Charging Time: | 1-2 hours |
| Charging Port: | USB Type-C / Wireless Charging |
| Charging Voltage: | DC 5V |
| Input Current: | 0.5A-1A |
| Earbud Size: | 48 x 37 x 27 mm |
| Charging Case Size: | 70 x 65 x 38 mm |
| Water Resistance Level: | Waterproof |
| Control Method: | Touch |
| Microphone: | Built-In |
| Material: | Plastic |

Your Best choice for sports

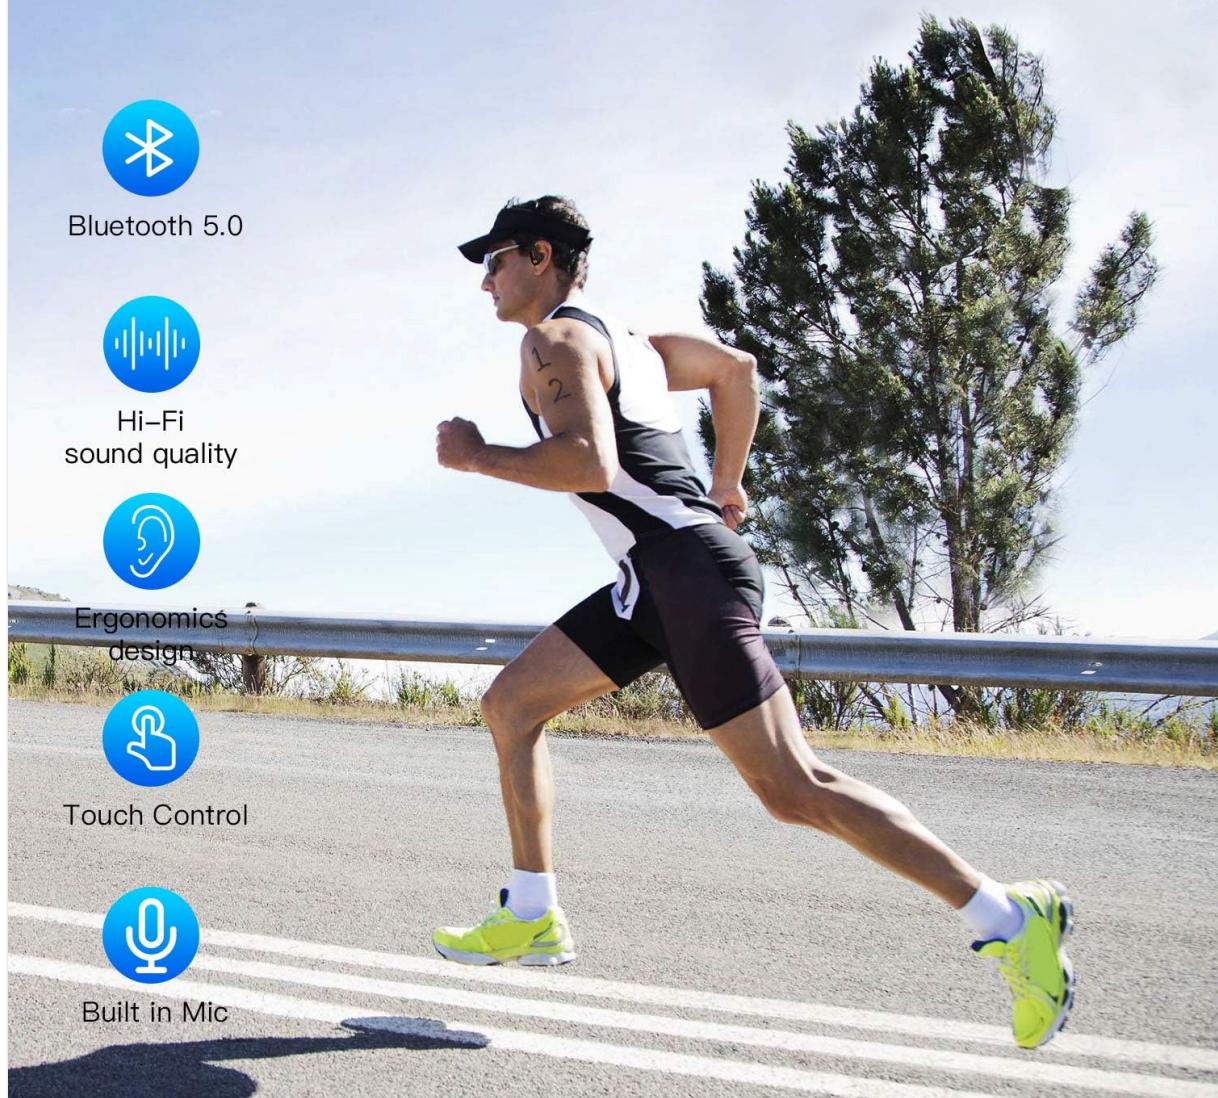


Figure 3: Earbud and Charging Case Dimensions. This image provides a visual representation of the physical size of the T30 earbuds and their charging case, emphasizing their small and lightweight nature for portability.

PACKAGE CONTENTS

The following items are included in your Canmixs T30 Wireless Earbuds package:

- 1 Pair of Wireless Earbuds (Left and Right)
- 1 x USB Type-C Charging Cable
- 1 x Charging Case
- 6 x Ear Caps (two are pre-equipped on the earbuds)
- 1 x Product Manual (this document)

WARRANTY AND SUPPORT

Your Canmixs T30 Wireless Earbuds come with a **24-month hassle-free warranty**. If you encounter any issues or have questions regarding your product, please contact our customer support for assistance. We are committed to providing reliable support and ensuring your satisfaction.

For support, please refer to the contact information provided with your purchase or visit the official CanMixs website.

