

VGR V-099

VGR V-099 Professional Corded Hair Trimmer User Manual

Model: V-099

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

Thank you for choosing the VGR V-099 Professional Corded Hair Trimmer. This manual provides essential information for the safe and effective use, maintenance, and care of your new trimmer. Please read these instructions thoroughly before first use and retain them for future reference.



Image: The VGR V-099 Professional Corded Hair Trimmer kit, including the trimmer, various guide combs, cleaning brush, oil, and power adapter, displayed with its packaging.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- Keep the appliance away from water. Do not use near bathtubs, showers, basins, or other vessels containing water.
- Do not immerse the appliance in water or other liquids.
- Always unplug the appliance immediately after use and before cleaning.
- Do not use the appliance with a damaged cord or plug.
- Keep the cord away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Never drop or insert any object into any opening.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always store the appliance in a dry area.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your VGR V-099 trimmer:

- **Trimmer Body:** The main unit housing the motor and power switch.
- **Precision T-Blade:** The cutting blade for close trimming and detailing.
- **Power Cord:** For continuous corded operation.
- **Guide Combs:** Various sizes for different hair lengths.
- **Cleaning Brush:** For removing hair debris from the blades.
- **Lubricating Oil:** For maintaining blade performance.



Image: The VGR V-099 trimmer with a guide comb attached, showing the precision T-blade and the power button.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Ensure all items listed in the "Product Components" section are present.
2. **Initial Inspection:** Inspect the trimmer for any visible damage. Do not use if damaged.
3. **Blade Lubrication:** Before first use, apply a few drops of the provided lubricating oil to the blades. Turn the trimmer on for a few seconds to distribute the oil evenly. Wipe off any excess oil.
4. **Connecting Power:** Plug the power cord into the trimmer's input port, then plug the adapter into a suitable electrical outlet. The trimmer is designed for corded operation.
5. **Attaching Guide Combs:** Select the desired guide comb. Align the comb with the trimmer blade and push it firmly until it clicks into place. To remove, gently pull the comb away from the blade.



Image: A close-up view of the VGR V-099 trimmer's precision T-blade, showing the VGR logo and model information engraved on the metal plate.

OPERATING INSTRUCTIONS

General Trimming

1. Ensure your hair or beard is clean and dry.
2. Attach the appropriate guide comb for your desired length.
3. Press the power button to turn on the trimmer.
4. Hold the trimmer with the blade flat against the skin or at a slight angle, moving against the direction of hair growth.
5. Use slow, controlled strokes for an even trim.
6. Regularly clear accumulated hair from the guide comb and blades during use.
7. After use, press the power button to turn off the trimmer and unplug it from the power outlet.

Detailing and Edging

- For precise lines and edging, remove all guide combs.
- Hold the trimmer with the blade edge perpendicular to the skin.

- Carefully create desired lines around the neckline, sideburns, or beard.
- The precision T-blade is designed for zero-gap cutting, allowing for very close trims.



Image: A side profile view of the VGR V-099 Professional Corded Hair Trimmer, highlighting its ergonomic design and metallic finish.

MAINTENANCE AND CARE

Cleaning the Trimmer

1. **Unplug:** Always ensure the trimmer is turned off and unplugged before cleaning.
2. **Brush Cleaning:** Use the provided cleaning brush to remove loose hairs from the blades and the trimmer head.
3. **Rinsing Blades:** The blades are waterproof. You can rinse the blade assembly under running water. *Do not immerse the entire trimmer body in water.*
4. **Drying:** After rinsing, shake off excess water and allow the blades to air dry completely before storage or next use.

Lubricating Blades

- To maintain optimal cutting performance and blade longevity, lubricate the blades regularly (after every few uses or as needed).

- Apply 1-2 drops of the lubricating oil across the top of the blades.
- Turn the trimmer on for a few seconds to allow the oil to spread.
- Wipe off any excess oil with a soft cloth.

Storage

- Store the trimmer and its accessories in a cool, dry place, away from direct sunlight and moisture.
- Keep out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Not properly plugged in; power outlet issue.	Ensure the power cord is securely plugged into both the trimmer and a working electrical outlet. Test the outlet with another appliance.
Blades pull hair or cut poorly.	Blades are dirty or not lubricated; dull blades.	Clean the blades thoroughly and apply lubricating oil. If the problem persists, the blades may need replacement.
Trimmer makes unusual noise.	Blades are obstructed or misaligned; lack of lubrication.	Clean and lubricate the blades. Check for any foreign objects. If the noise continues, contact customer support.
Trimmer gets hot during use.	Extended use; dirty or unlubricated blades.	Allow the trimmer to cool down. Clean and lubricate the blades. Avoid excessively long continuous operation.

PRODUCT SPECIFICATIONS

- **Model:** V-099
- **Brand:** VGR
- **Power Source:** Corded Electric
- **Blade Material:** Metal
- **Body Material:** Metal
- **Color:** Black
- **Special Feature:** Waterproof blades (for rinsing)
- **Recommended Uses:** Hair, beard, and body hair trimming
- **Item Weight:** 530 g
- **Package Dimensions:** 21.8 x 15 x 6.6 cm
- **Manufacturer:** VGR
- **ASIN:** B08DG4ZQTL
- **GTIN/UPC:** 754244755324

WARRANTY AND SUPPORT

Warranty Information

VGR products are manufactured to the highest quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, neglect, unauthorized modification, or normal wear and tear.

Customer Support

For any questions, concerns, or assistance with your VGR V-099 trimmer, please contact VGR customer support. Refer to the contact information provided with your purchase or visit the official VGR website for support details.