

Wiko WiSHAKE Vibes

Wiko WiSHAKE Vibes Bluetooth Stereo Speakers User Manual

Model: WKAUNPKBWV

INTRODUCTION

The Wiko WiSHAKE Vibes are compact Bluetooth® stereo speakers designed for portable audio playback. They offer 360° stereo sound and can be magnetically connected to function as a single unit. Featuring a battery life of up to 8 hours on a single charge and colored LED lights, these speakers are suitable for various listening environments.

PACKAGE CONTENTS

- Wiko WiSHAKE Vibes Bluetooth Stereo Speakers (2 units)
- Charging Cable (not explicitly listed but implied for battery-powered device)
- User Manual (this document)

SETUP

1. Charging the Speakers

Before first use, fully charge both WiSHAKE Vibes speakers. Connect the charging cable (not included in the provided product components, but standard for such devices) to the charging port on each speaker and to a compatible USB power source. The LED indicator will show charging status and turn off or change color when fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the Power button on each speaker until the LED indicator lights up.
- **To Power Off:** Press and hold the Power button on each speaker until the LED indicator turns off.

3. Bluetooth Pairing

1. Ensure both speakers are powered on and within close proximity to your Bluetooth device (smartphone, tablet, etc.).
2. On your device, go to Bluetooth settings and enable Bluetooth.
3. Search for available devices. The speakers should appear as 'Wiko WiSHAKE Vibes' or similar.
4. Select the speaker name to initiate pairing. Once paired, a confirmation sound or LED indicator change will occur.
5. If using both speakers for stereo sound, they should automatically connect to each other after being paired with your device. If not, ensure both are powered on and try re-pairing.

4. Magnetic Connection

The two WiSHAKE Vibes speakers can be magnetically connected to form a single unit, resembling a soundbar. Simply bring the flat sides of the speakers together; they will snap into place. This configuration maintains stereo sound output.



Image: Two Wiko WiSHAKE Vibes speakers magnetically connected, forming a single unit.

OPERATING THE SPEAKERS

1. Audio Playback

Once paired, audio from your connected device will play through the WiSHAKE Vibes speakers. The speakers deliver 360° stereo sound.

2. Touch Controls

The speakers feature touch controls for various functions:

- **Play/Pause:** Tap the Play/Pause button.
- **Volume Up/Down:** Use the volume buttons (+/-).
- **Next/Previous Track:** Use the track skip buttons.

3. LED Lights

The integrated colored LED lights can follow the rhythm of your music, adding a visual element to your listening experience. The specific control for LED modes may vary; refer to the quick start guide if included, or experiment with touch controls.



Image: Two Wiko WiSHAKE Vibes speakers on a wooden bench, showcasing their design and portability.

MAINTENANCE

1. Cleaning

Wipe the speakers with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the surface.

2. Storage

Store the speakers in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

3. Water Resistance

The Wiko WiSHAKE Vibes speakers are NOT waterproof. Avoid exposure to water, rain, or excessive moisture to prevent damage.



Image: Two Wiko WiSHAKE Vibes speakers placed on a rocky surface next to a jacket, illustrating their compact size and portability.

TROUBLESHOOTING

- **No Power:** Ensure the speakers are fully charged. Connect them to a power source and allow them to charge for at least 30 minutes before attempting to power on again.
- **No Sound:**
 - Check that the speakers are powered on and successfully paired with your device.
 - Increase the volume on both the speakers and your connected device.
 - Ensure no other Bluetooth devices are connected to the speakers.
- **Pairing Issues:**
 - Turn off and then turn on Bluetooth on your device.
 - Power off and then power on the speakers.

- Forget the 'Wiko WiSHAKE Vibes' from your device's Bluetooth list and attempt to re-pair.
- Ensure the speakers are within the effective Bluetooth range (typically 10 meters/33 feet).

- **Distorted Sound:**

- Move the speakers closer to your connected device.
- Ensure there are no obstructions or sources of interference (e.g., Wi-Fi routers, other Bluetooth devices) between the speakers and your device.
- Lower the volume on your device or the speakers if the distortion occurs at high volumes.

SPECIFICATIONS





Image: Internal view of a single Wiko WiSHAKE Vibes speaker.

Feature	Detail
Brand	Wiko
Model Number	WKAUNPKBWV
Color	Black
Product Dimensions (L x W x H)	6 x 6 x 7.5 cm
Item Weight	335 Grams
Power Source	Battery Powered
Battery Type	2 Lithium-polymer batteries required
Wireless Technology	Bluetooth 5.0
Speaker Output Power	2 x 5W
Audio Output Mode	Stereo
Speaker Size	1 Inch
Battery Life (Playback Time)	Up to 8 Hours
Control Method	Touch
Special Features	360° Stereo Sound, Magnetic Clip, Colored LED Lights
Waterproof	No
Recommended Uses	For smartphone or tablet

Compatible Devices

Game console, Smartphone, Tablet

WARRANTY INFORMATION





The Wiko WiSHAKE Vibes speakers come with a **Lifetime Warranty**. Please retain your proof of purchase for any warranty claims. For specific terms and conditions, refer to the warranty card included with your product or contact Wiko customer support.



CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please visit the official Wiko website or contact their customer service department. Contact information can typically be found on the Wiko website or in the product packaging.

© 2023 Wiko. All rights reserved.

Related Documents - WiSHAKE Vibes

	<p>Uputstvo za upotrebu WIKO Y82 3/32GB Dark Blue</p> <p>Detaljan korisnički priručnik za WIKO Y82 pametni telefon, model 3/32GB u tamno plavoj boji. Saznajte kako da efikasno koristite svoj telefon, od početnog podešavanja do osnovnih operacija.</p>
	<p>WIKO Y81 User Manual</p> <p>Comprehensive user guide for the WIKO Y81 smartphone, covering setup, basic operations, safety information, and technical specifications.</p>
	<p>Wiko Sunny User Manual</p> <p>User manual for the Wiko Sunny mobile phone, providing information on setup, features, safety, and troubleshooting.</p>
	<p>Wiko T3 (W-V770) Mobile Phone Safety and Compliance Information</p> <p>This document provides essential safety information, usage guidelines, and regulatory compliance details for the Wiko T3 (W-V770) mobile phone. It covers topics such as listening safety, emergency calls, driving safety, electronic device interference, fire hazards, liquid contact, battery usage, electrical shock, temperature considerations, and radio frequency exposure (SAR).</p>

 The image shows the cover of the Wiko HARRY user guide. It features the 'harry' logo in a stylized font, the 'Wiko' logo, and a photograph of the black smartphone. A teal banner at the bottom right says 'GET STARTED'.	<p>Wiko HARRY User Guide: Get Started with Your New Phone</p> <p>Comprehensive user guide for the Wiko HARRY mobile phone. Learn how to set up your device, manage SIM cards, connect to networks, and utilize basic operations. Includes safety information and what's in the box.</p>
 The image shows the cover of the Wiko Ridge 4G user guide. It features the 'RIDGE' logo, the 'Wiko' logo, and a photograph of the black smartphone. A teal banner at the bottom left says 'GET STARTED'.	<p>Wiko Ridge 4G User Guide: Features, Operation, and Safety Information</p> <p>Comprehensive user guide for the Wiko Ridge 4G smartphone, covering setup, basic operations, network settings, notifications, menus, safety precautions, data usage, and compliance statements.</p>