

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VGR](#) /

› [VGR V-130 Professional Rechargeable Hair Clipper Trimmer User Manual](#)

VGR V-130

VGR V-130 Professional Rechargeable Hair Clipper Trimmer User Manual

Model: V-130 | Brand: VGR

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your VGR V-130 Professional Rechargeable Hair Clipper Trimmer. Please read this manual thoroughly before operating the device and retain it for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your trimmer.

2. PACKAGE CONTENTS

Your VGR V-130 Hair Clipper Trimmer package includes the following items:

- VGR V-130 Hair Clipper Trimmer Unit
- 4 Adjustable Guide Combs (various lengths)
- Charging Cable
- Cleaning Brush
- Lubricating Oil
- User Manual



Image: Overview of the VGR V-130 Hair Clipper Trimmer and its included accessories.



Image: Detailed view of the VGR V-130 trimmer and its complete set of accessories.

3. PRODUCT FEATURES

- **Low Noise Operation:** Designed for quiet performance, operating at less than 60dB.
- **High-Precision Steel Micro T-Outliner:** Ensures precise cutting without snagging hair or damaging the skin.
- **High-Speed Quiet Motor:** Provides a comfortable cutting experience for all users.
- **Easy Cleaning:** Waterproof blades allow for quick and convenient washing under running water.
- **Multipurpose Use:** Suitable for styling hair, beard, mustache, sideburns, goatee, oil head, stubble, and other facial/body hair.
- **Cord/Wireless Operation:** Can be used on its internal Li-ion battery or while charging.
- **Rechargeable:** Equipped with a Lithium Ion battery for cordless convenience.



Image: Close-up of the precision stainless steel cutter head, designed for long-term sharpness.



Image: Illustration of the powerful and stable motor, ensuring consistent performance.

4. SETUP

1. **Charge the Trimmer:** Before first use, fully charge the trimmer. Connect the charging cable to the trimmer and a suitable power source. The indicator light will show charging status.
2. **Select Guide Comb:** Choose the desired guide comb based on the hair length you wish to achieve. The kit includes 4 adjustable combs.
3. **Attach Guide Comb:** Align the chosen guide comb with the trimmer blade and snap it securely into place. Ensure it is firmly attached before use.
4. **Lubricate Blades:** Apply a few drops of the provided lubricating oil to the blades before each use to ensure smooth operation and prolong blade life.

5. OPERATING INSTRUCTIONS

For best results, ensure hair is clean and dry before trimming.

1. **Power On:** Slide the power switch to the 'ON' position.
2. **Trimming Hair:** Hold the trimmer with the blade flat against the skin. Move the trimmer slowly against the direction of hair growth. For an even cut, use a consistent speed and pressure.
3. **Blending:** Use the blending techniques described in the user guide (if applicable) or by gradually changing comb lengths to achieve a smooth transition between different hair lengths.
4. **Detailing/Edging:** Remove the guide comb for precise detailing around the neckline, sideburns, and beard lines. Use the T-blade carefully to create sharp edges.
5. **Power Off:** Once finished, slide the power switch to the 'OFF' position.

6. MAINTENANCE

Regular cleaning and maintenance are crucial for optimal performance and hygiene.

1. **Clean Blades:** After each use, remove the guide comb and use the provided cleaning brush to brush away any loose hairs from the blades.
2. **Rinse Blades:** The blades are waterproof. You can rinse them under running water. Ensure the

trimmer unit itself is not submerged unless explicitly stated as fully waterproof.

3. **Dry Blades:** Allow the blades to air dry completely before reattaching the comb or storing the trimmer.
4. **Lubricate Blades:** Apply 1-2 drops of lubricating oil to the blades after cleaning and before storage. This prevents rust and ensures smooth operation.
5. **Storage:** Store the trimmer and all accessories in a dry, cool place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer not turning on	Battery is low or depleted.	Charge the trimmer fully.
Trimmer pulls hair	Blades are dull or not lubricated. Hair is too long or tangled.	Lubricate blades. Clean blades. Trim longer hair with scissors first.
Uneven cut	Guide comb not properly attached. Inconsistent trimming technique.	Ensure guide comb is securely attached. Use slow, even strokes against hair growth.
Excessive noise/vibration	Blades require lubrication. Debris caught in blades.	Lubricate blades. Clean blades thoroughly.

8. SPECIFICATIONS

- **Model Number:** V-130
- **Power Source:** Battery Powered (Rechargeable)
- **Battery Type:** 1 Lithium Ion battery (included)
- **Blade Material:** Carbon Steel
- **Special Features:** Rechargeable, Waterproof blades, Wireless operation
- **Item Weight:** 790 g (0.79 Kilograms)
- **Product Dimensions (LxWxH):** 50 x 50 x 50 Millimeters (5 x 5 x 5 cm)
- **Color:** Black
- **Target Audience:** Men, Unisex-Adults
- **Manufacturer:** Ningbo VGR Electric Appliance Co., Ltd., Yiwu Gemei Electric Appliance Co. Ltd



Image: Dimensions of the VGR V-130 trimmer.

9. WARRANTY AND SUPPORT

Your VGR V-130 Hair Clipper Trimmer comes with a **3-month guarantee**. If you encounter any issues or are not satisfied with your product, please contact VGR customer service. We are committed to providing a 100% satisfactory solution and will endeavor to reply within 24 hours.

For further assistance, please refer to the contact information provided with your purchase or visit the official VGR website.