

[Manuals.plus](#) /

› [Hasbro Gaming](#) /

› Hasbro Gaming Perfection Plus 2-Player Duel Mode Instruction Manual

Hasbro Gaming F1361

Hasbro Gaming Perfection Plus Instruction Manual

Brand: Hasbro Gaming | Model: F1361

1. INTRODUCTION

The Hasbro Gaming Perfection Plus game offers a fast-paced, shape-matching challenge for one or more players, ages 5 and up. This edition introduces a Duel Mode, allowing two players to race simultaneously. The game focuses on developing skills such as focus, hand-eye coordination, and shape recognition.

Key features include:

- **Duel or Single Player Mode:** Play head-to-head with another player or challenge yourself against the clock.
- **Two Sets of Shapes:** Includes 25 red and 25 yellow shapes for competitive play.
- **Fast-Paced Gameplay:** Race against a timer to fit shapes before the board pops up.
- **Easy Storage:** Pieces can be conveniently stored inside the game unit and an included storage box.

2. SAFETY INFORMATION

Please read all safety information before use. Adult supervision is recommended during play.

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

3. WHAT'S IN THE BOX

Verify that all components are present in your package:

- Perfection Game Unit
- 25 Red Geometric Shapes
- 25 Yellow Geometric Shapes
- Shapes Storage Box
- Game Rules (this manual)



Image: The Perfection game unit, its packaging box, and all the red and yellow shapes laid out, illustrating the complete contents.

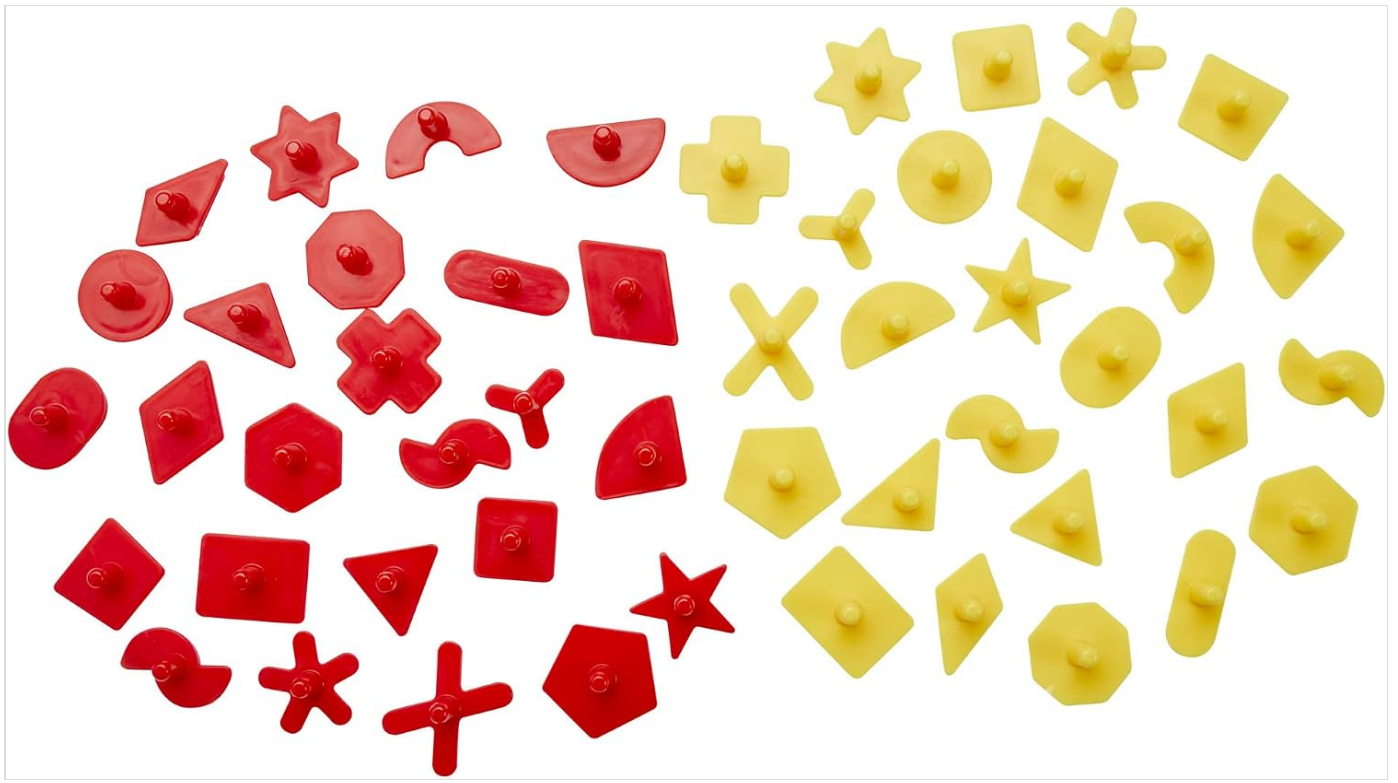


Image: A collection of all the red and yellow geometric shapes included with the Perfection game, ready for play.

4. SETUP

1. **Unpack Components:** Carefully remove the game unit, red shapes, yellow shapes, and the separate storage box from the packaging.
2. **Prepare the Game Unit:** Place the game unit on a flat, stable surface. Ensure the board is pressed down into the unit until it clicks into place.
3. **Distribute Shapes:** If playing Duel Mode, each player chooses a color (red or yellow) and takes their 25 shapes. If playing Classic Mode, one player takes all 50 shapes, or players take turns using one set.
4. **Set the Timer:** Turn the timer dial to the desired time setting. For a standard game, set it to 60 seconds. For younger players or practice, the timer can be set to a longer duration or not used at all.



Image: The Perfection game unit showing the empty slots where shapes are to be placed before starting a game.



Image: A close-up view of the timer dial and the START/STOP switch on the Perfection game unit, used to initiate and pause gameplay.

5. OPERATING INSTRUCTIONS

5.1. Duel Mode (2 Players)

1. Each player takes one set of 25 shapes (red or yellow).
2. Players position themselves on opposite sides of the game unit, each facing their designated half of the board.
3. On the count of "Go!" or when the START switch is pressed, both players simultaneously race to fit their shapes into the corresponding holes on their side of the game board.
4. The timer will begin counting down.
5. The goal is to fit as many shapes as possible before the timer runs out and the board pops up.
6. The player who successfully places more shapes before the pop-up wins the round.

5.2. Classic Mode (1 or More Players)

1. One player takes all 50 shapes (or takes turns with another player using one set).
2. On the count of "Go!" or when the START switch is pressed, the player races to fit all 25 shapes (or 50 shapes if

playing solo with both sets) into the corresponding holes.

3. The timer will begin counting down.
4. The goal is to fit all shapes before the timer runs out and the board pops up.
5. Players can compete for the fastest time or simply enjoy the challenge.

5.3. Playing Without the Timer

For younger players or for a more relaxed experience, the game can be played without the timer. Simply do not press the START switch. Players can take their time to fit the shapes, focusing on shape recognition and hand-eye coordination without the pressure of the clock.



Image: The Perfection game board with various red and yellow shapes partially inserted into their matching slots, illustrating active gameplay.

6. MAINTENANCE AND STORAGE

To ensure the longevity and proper functioning of your Perfection Plus game:

- **Cleaning:** Wipe the game unit and shapes with a dry or slightly damp cloth. Do not use harsh chemicals or abrasive cleaners. Do not immerse the game unit in water.
- **Storage:** After playing, one set of shapes can be stored inside the game unit's built-in compartment. The second set

of shapes can be stored in the included separate storage box. This helps prevent loss of pieces and keeps the game organized.

- **Environment:** Store the game in a cool, dry place away from direct sunlight and extreme temperatures to prevent warping or damage to the plastic components.



Image: The game unit with one set of shapes stored inside its integrated compartment, demonstrating the convenient storage feature.

7. TROUBLESHOOTING

- **Board Does Not Pop Up:** Ensure the timer was fully wound and the START switch was pressed. If the issue persists, check for any obstructions under the board that might prevent it from popping up.
- **Shapes Do Not Fit:** Each shape has a unique corresponding hole. Ensure you are trying to fit the correct shape into its matching slot. Do not force shapes, as this may damage them or the game unit.
- **Missing Pieces:** Refer to the "What's in the Box" section to confirm the number of pieces. If pieces are missing upon initial opening, please contact customer support.

8. SPECIFICATIONS

Product Dimensions	3 x 13.13 x 10.5 inches
Item Weight	2.03 pounds
Model Number	F1361
Recommended Age	5 years and up
Manufacturer	Hasbro
Release Date	November 1, 2020

9. CUSTOMER SUPPORT

For further assistance, questions, or to report issues with your Hasbro Gaming Perfection Plus game, please contact Hasbro Gaming customer support. You can find up-to-date contact information and frequently asked questions on the official Hasbro website.

Please retain this manual for future reference.

© 2024 Hasbro Gaming. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

