

**Altec Lansing MZX559-PP**

# Altec Lansing Nanobuds User Manual

Model: MZX559-PP

## INTRODUCTION

The Altec Lansing Nanobuds are truly wireless earbuds designed for an immersive audio experience with complete freedom of movement. Featuring Bluetooth 5.0 technology, these earbuds offer a stable connection up to 50 feet, making them ideal for various activities from travel to sports. Their ergonomic design ensures a comfortable and secure fit, while the IPX5 water-resistant rating provides protection against sweat and rain.

This manual provides essential information on setting up, operating, maintaining, and troubleshooting your Nanobuds to ensure optimal performance and longevity.



Image: Altec Lansing Nanobuds in their open charging case, highlighting the purple earbuds and the compact design.

## WHAT'S IN THE BOX

Your Altec Lansing Nanobuds package includes the following components:

- Altec Lansing Nanobuds (Left and Right Earbuds)
- Charging Case
- USB Cable (USB-C)



Image: The Nanobuds charging case with the included USB-C charging cable, illustrating the complete package contents.

## SETUP

### Initial Charging

Before first use, ensure your Nanobuds and charging case are fully charged. To charge:

1. Place both earbuds securely into the charging case, ensuring they make good connection with the charging contacts.
2. Connect the USB-C cable to the charging port on the case and plug it into a 5V or greater power source.
3. The LED indicator on the case will flash while charging. Once fully charged, the LEDs may change or

turn off depending on the model.

## Activation and Pairing

For first-time activation and pairing:

1. Place both earbuds into the charging case.
2. Remove both earbuds from the case. This action will activate the earbuds and put them into pairing mode.
3. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.
4. Select "Altec Lansing Nanobuds" from the list of available devices to connect.
5. Once paired, the earbuds will automatically connect to your device when removed from the case in the future.



Image: The Nanobuds charging case placed on a laptop, demonstrating a common charging scenario.

## OPERATING INSTRUCTIONS

### Power On/Off

- **To Turn On:** Remove the earbuds from the charging case.

- **To Turn Off:** Place the earbuds back into the charging case.

## Touch Controls

The Nanobuds feature intuitive touch controls for easy management of your audio and calls:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant (Siri/Google Assistant):** Triple tap on either earbud.



Image: Close-up of the Nanobuds earbuds, illustrating their ergonomic shape and the touch-sensitive surface.

## MAINTENANCE

### Cleaning and Care

- Wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Avoid using abrasive cleaners, solvents, or aerosol sprays.
- Ensure charging contacts on both earbuds and case are clean and free of debris for proper charging.

### Water Resistance (IPX5)

The Nanobuds are IPX5 water-resistant, meaning they can withstand splashes of water from any direction. This makes them suitable for workouts and light rain. However, they are not designed for submersion in water. Do not expose them to pressurized water or prolonged immersion.

# TROUBLESHOOTING

## Common Issues and Solutions

- **Earbuds not turning on:** Ensure the charging case is charged. If the LEDs do not turn on when earbuds are removed from the case, charge the case then try again.
- **Earbuds not pairing together or with device:**  
Perform a Manual Reset (only if other solutions fail):
  - a. Remove both earbuds from the case.
  - b. Hold down the left and right sensor for 9 seconds. Both earbuds will flash blue three times, then flash red and blue before resetting.
  - c. Place both earbuds back into the case to activate them.
  - d. Take both earbuds out of the case to re-pair them.
  - e. Reconnect the smartphone to your earbuds.
- **Charging issues:** Ensure earbuds are making good connection with the contacts in the case. Securely connect the USB-C cable to the charging port on the case and plug into a 5V or greater power source.
- **Sound quality issues:** If the size of the earbud tips does not match your ear canals or the headset is not worn properly, you may not obtain correct sound qualities. Change earbud tips to ones that fit more snugly.

# SPECIFICATIONS

Feature	Detail
Model Name	Nanobuds
Model Number	MZX559-PP
Connectivity Technology	Bluetooth 5.0
Wireless Range	Up to 50 feet
Battery Life (Earbuds)	Up to 4 hours per charge
Battery Life (with Case)	Up to 16 additional hours
Water Resistance Level	IPX5 (Water Resistant)
Control Type	Touch Control
Material	Plastic

Feature	Detail
Item Weight	3.5 Ounces
Product Dimensions	3.94 x 3.39 x 1.93 inches
UPC	021331153395

## WARRANTY AND SUPPORT

For detailed warranty information and additional support, please refer to the official documents and resources below:

- [User Guide \(PDF\)](#)
- [Troubleshooting Guide \(PDF\)](#)
- Visit the [Altec Lansing Store](#) for more products and support.

© 2024 Altec Lansing. All rights reserved.

For further assistance, please contact Altec Lansing customer support.

Documents - Altec Lansing – MZX559-PP

no relevant documents